



Frosty Desk

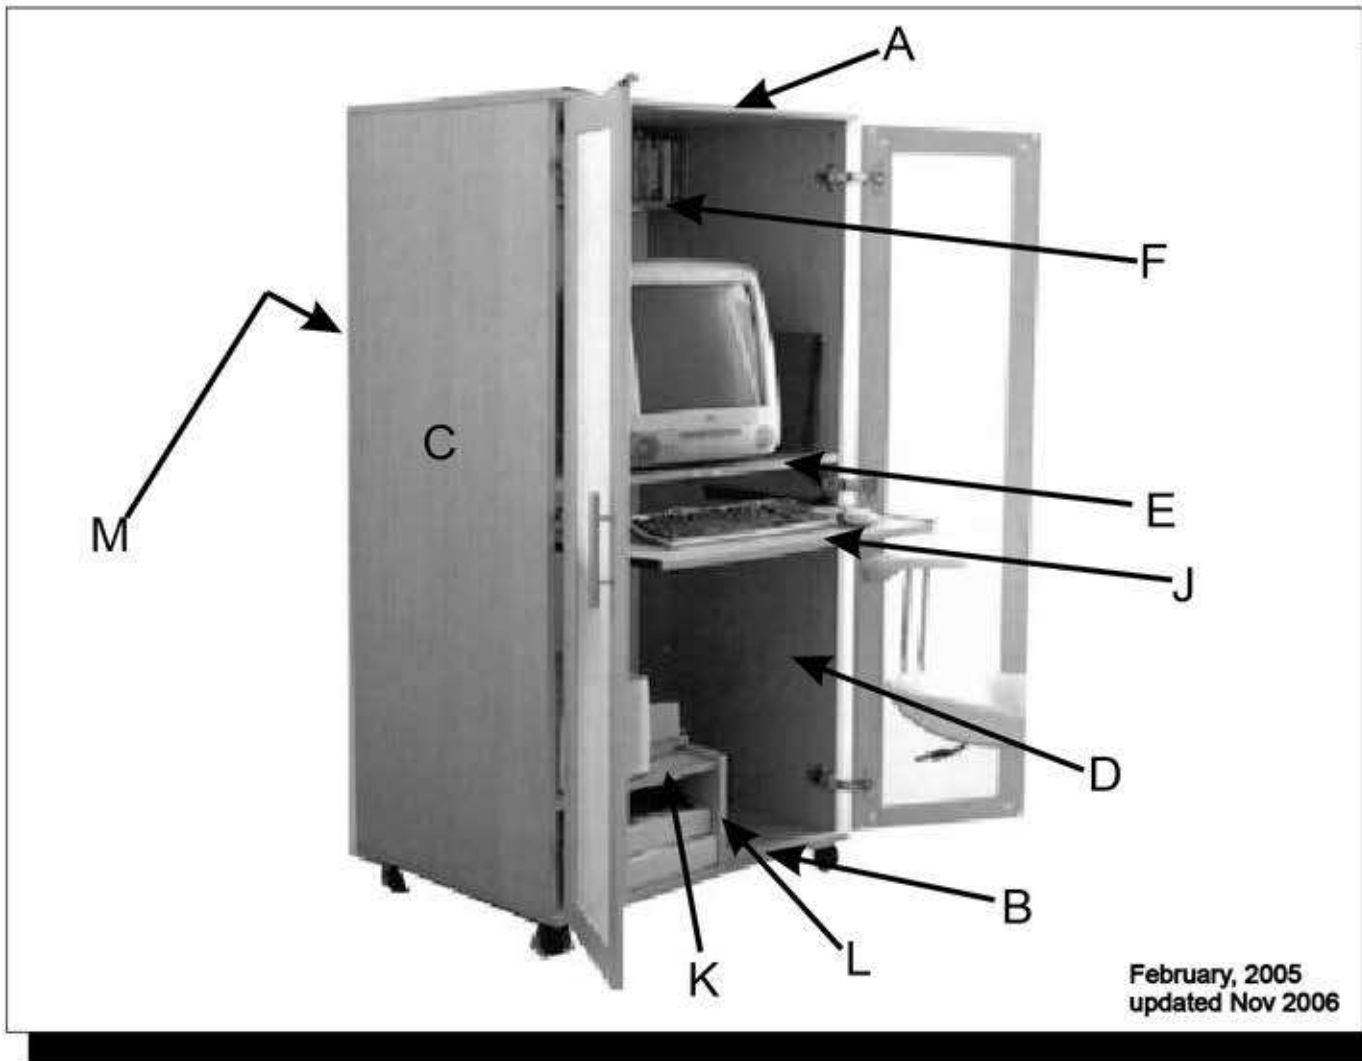


February, 2005
updated Nov 2006

'30' 45mm 9 45mm Carcase Screw	'182' 22 Quick Fit Snail Pins	'181' 22 Quick Fit Snail Cams	'50' 12mm 6 Black Zwart Noir 12mm Ø No 6 Blk Cak Poz	'44' 12mm 12 12mm Ø No 6 Cak Poz BZP	'49' 15mm 16 15mm Ø No 6 Pan Poz BZP	'43' 12mm 2 12mm Ø No 6 Pan Poz BZP	'220' 30 36mm X 6mm Dia. Dowels
'201' 6 165deg Hinge	'216' 35mm 6 35mm Hinge Plate	1 pr '65' Metal Bottom Drawer Runners	'108' 2 Twin Castor on plate with Brake	'109' 2 Twin castor on plate	'999' 1 Jazz CD Rack	'13' 1 pkt Panel Pins	
A — 1	B — 1	C — 1	D — 1	E — 1			
F — 1	J — 1	K — 1	L — 1	M — 1			
2-Glass Door / Glas / Verre					'144' 96mm Bar Handles	'111' 2 Door Buffers	
					'38' 6 19mm Ø No 6 Cak Poz BZP	'38' 19mm 6 19mm Ø No 6 Cak Poz BZP	




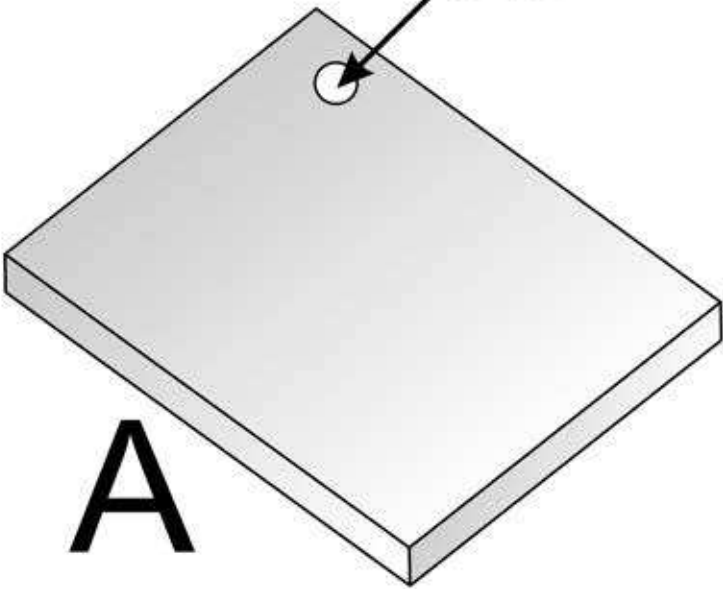


A

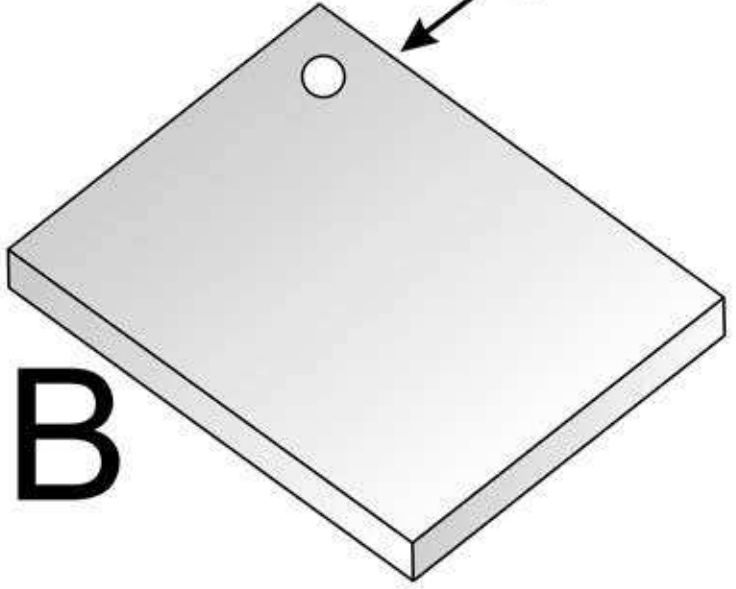









B

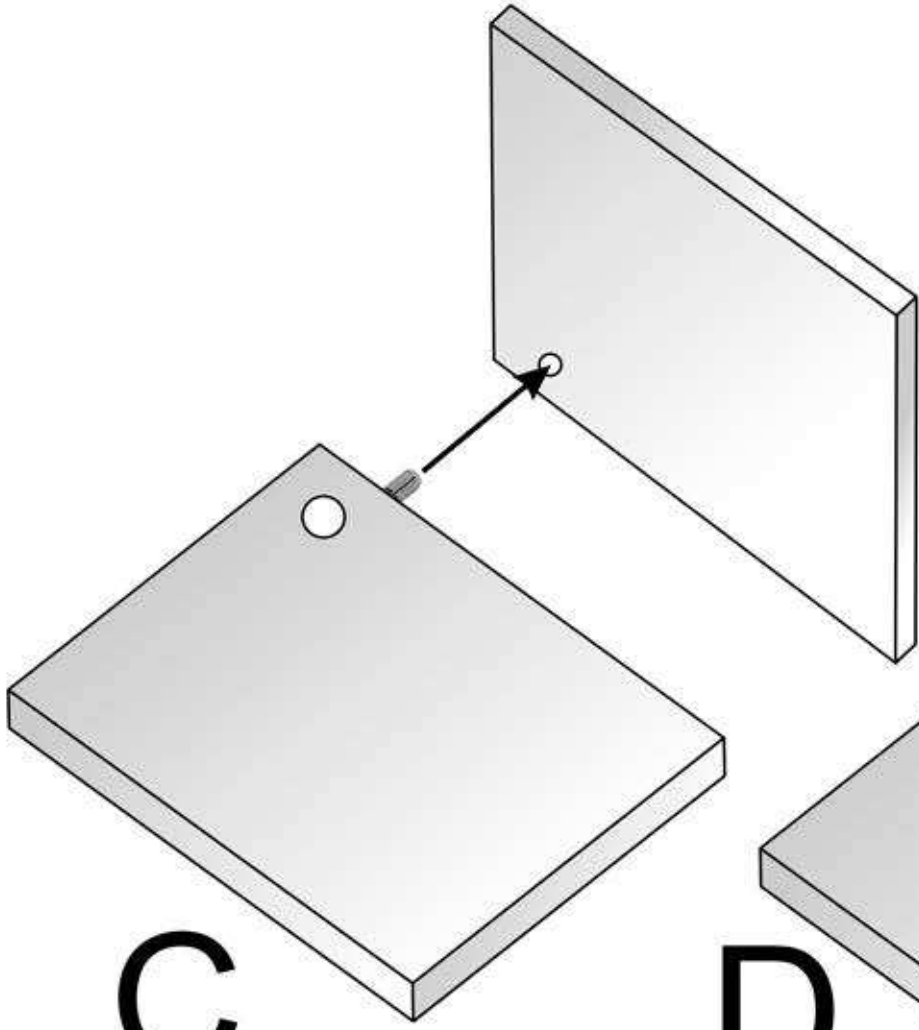

C

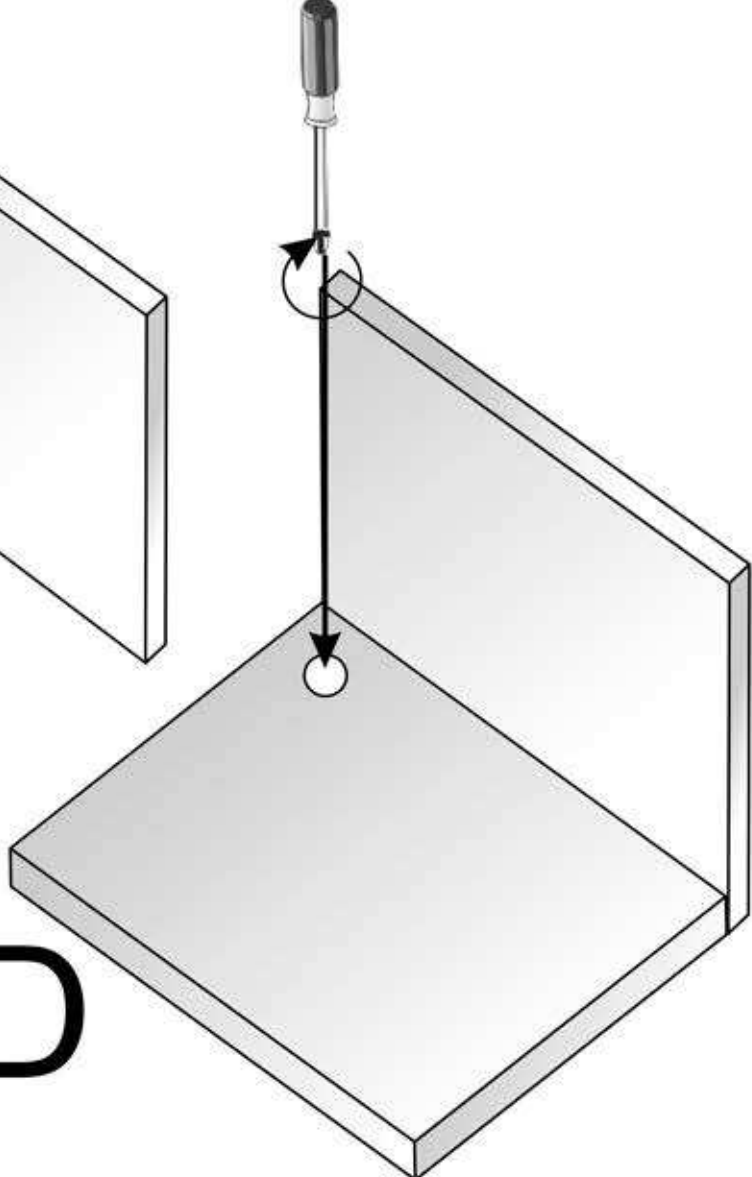

D

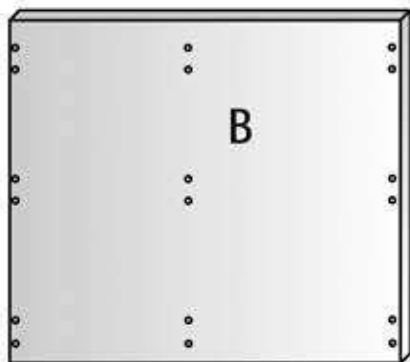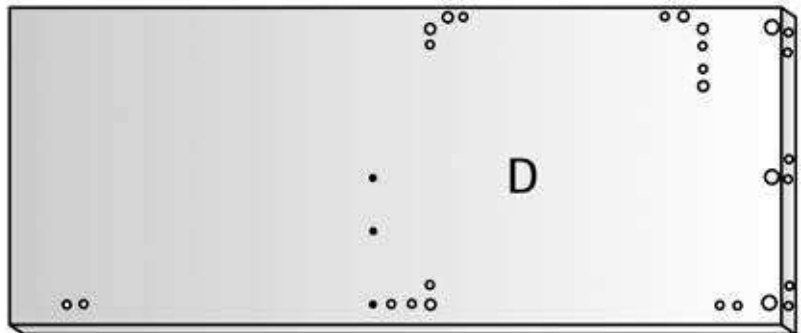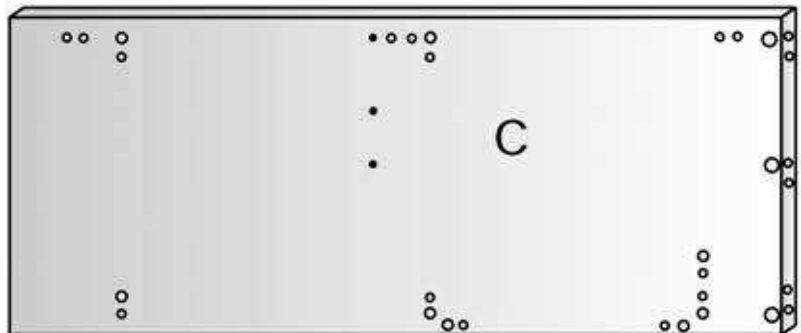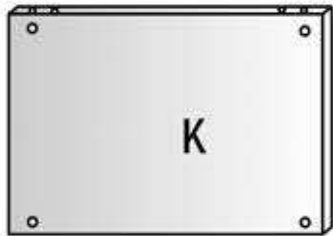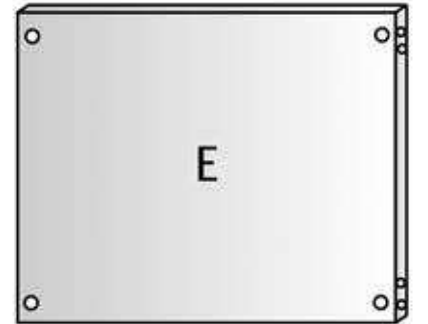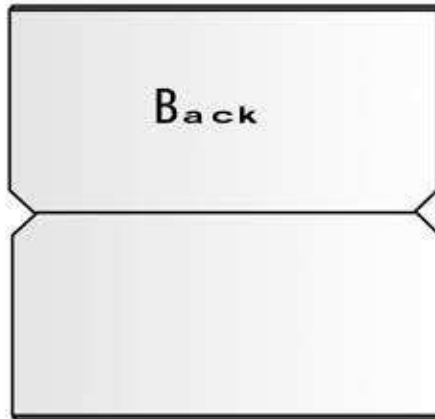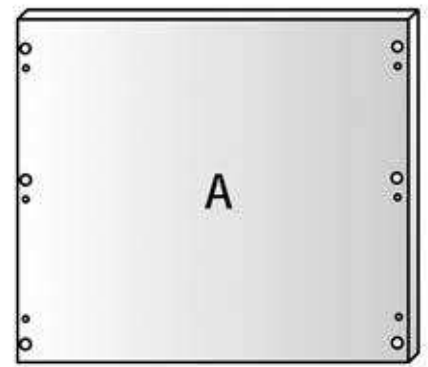





Spacers



Step 1 of 15 Model 7





'216' x6	'181' x6	'182' x6	'220' x6
-----------------	-----------------	-----------------	-----------------

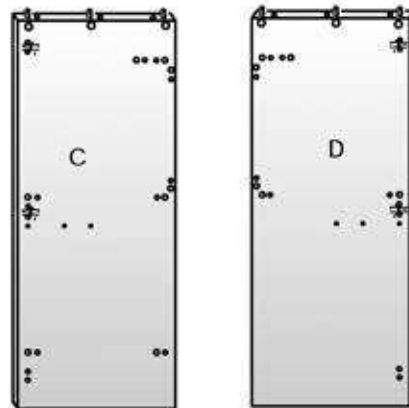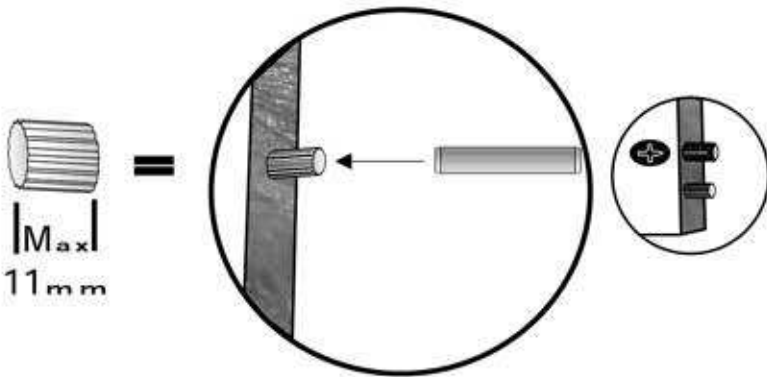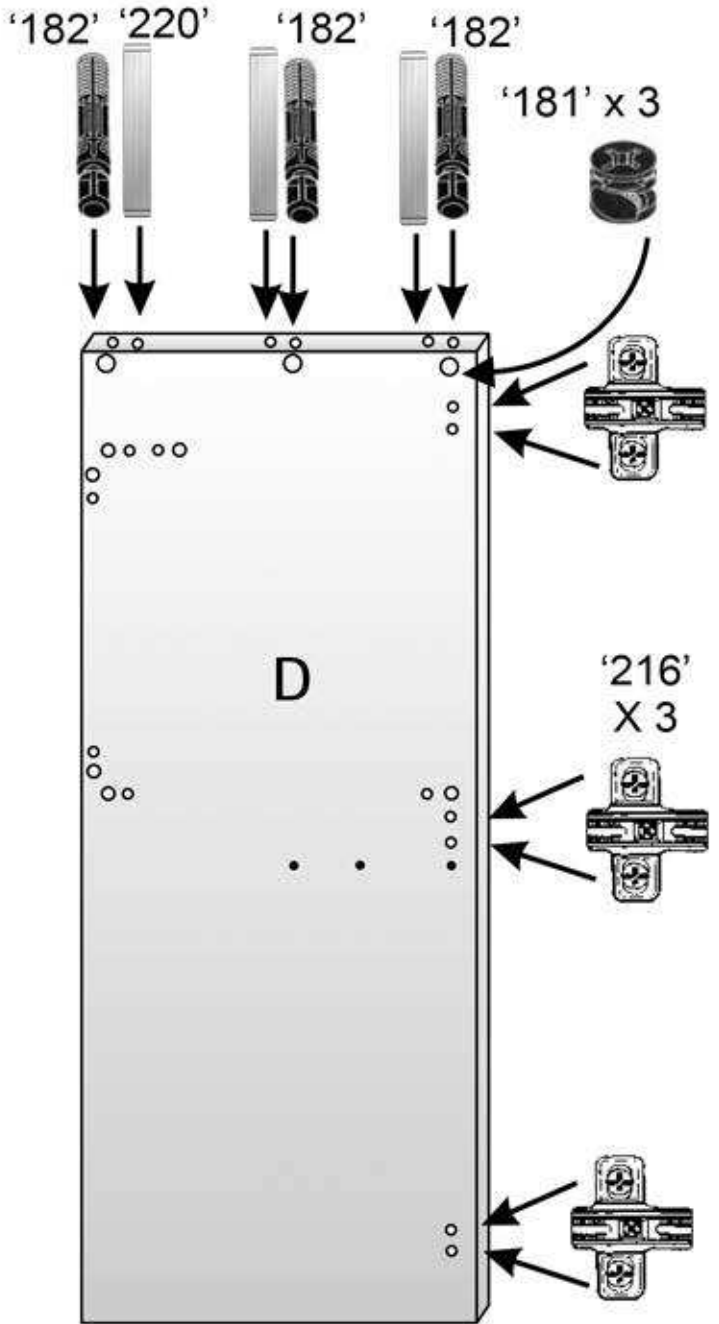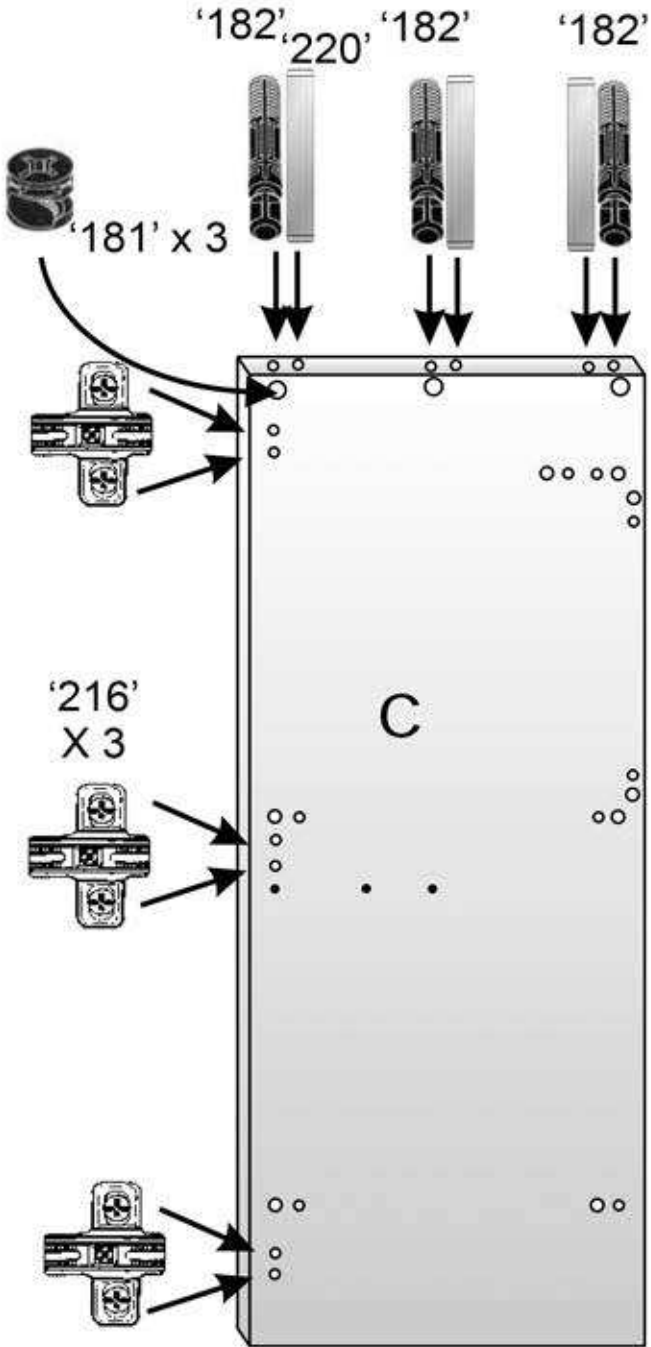

Step 2 of 15 Model 7




<p>'62'</p> <p>1-left; 1-right 1-linke; 1-recht</p>	<p>'38'</p> <p>19mm</p> <p>↓</p> <p>x6</p>
---	--

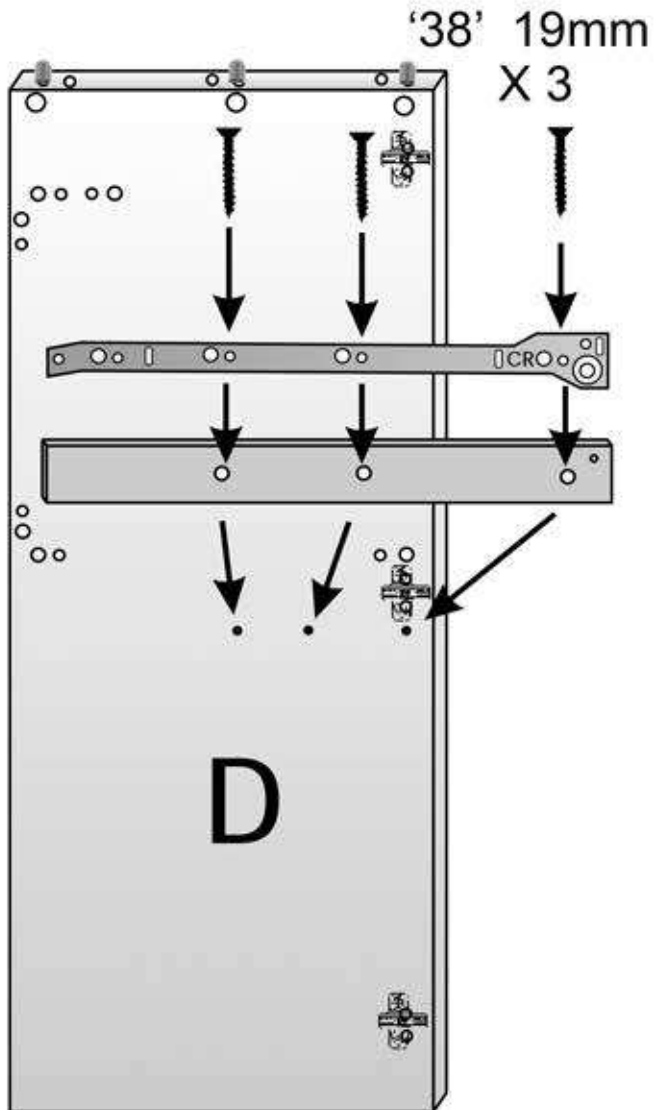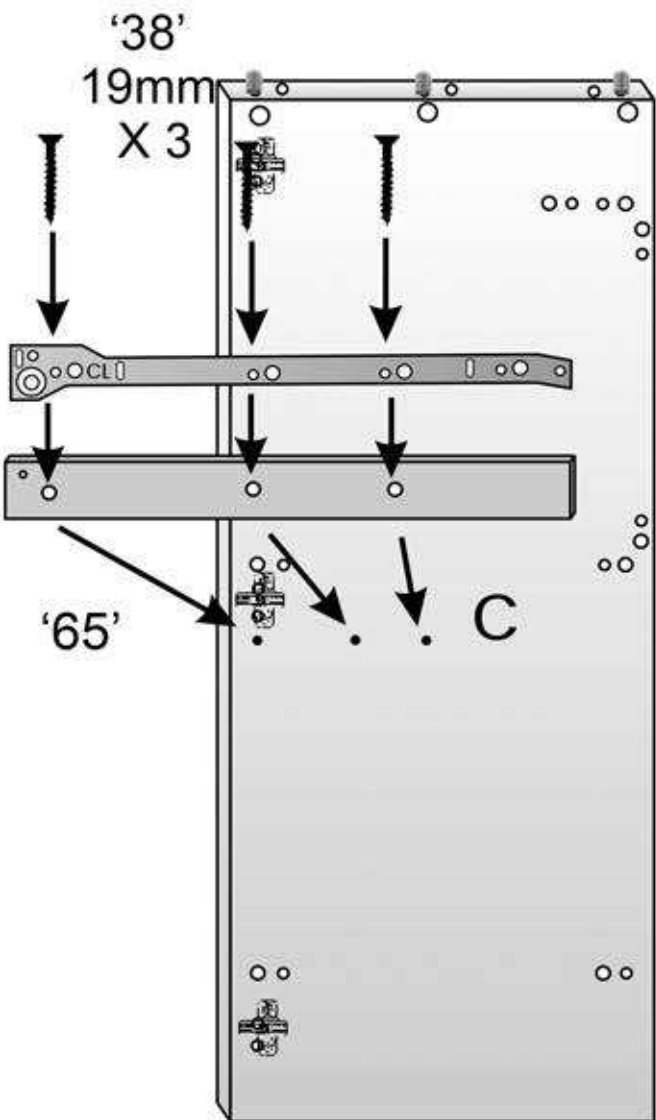


8mm Spacer



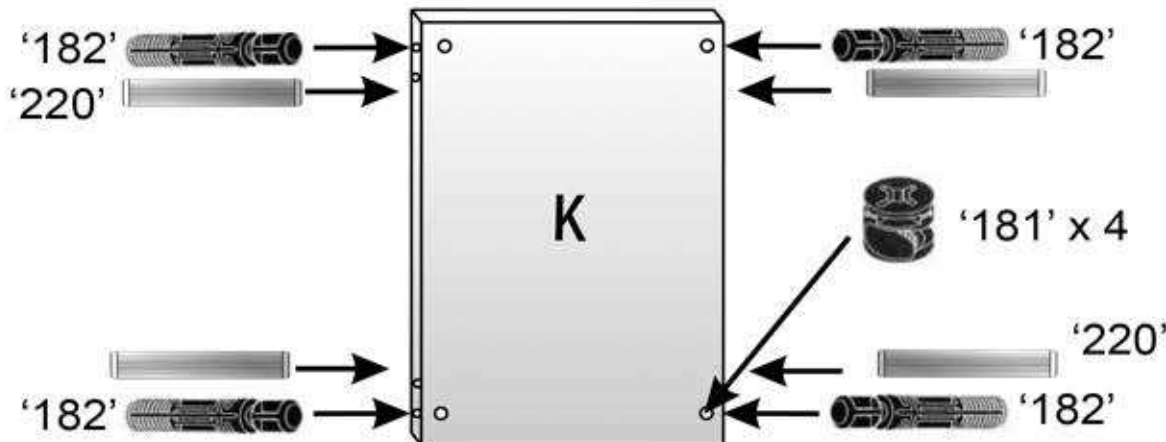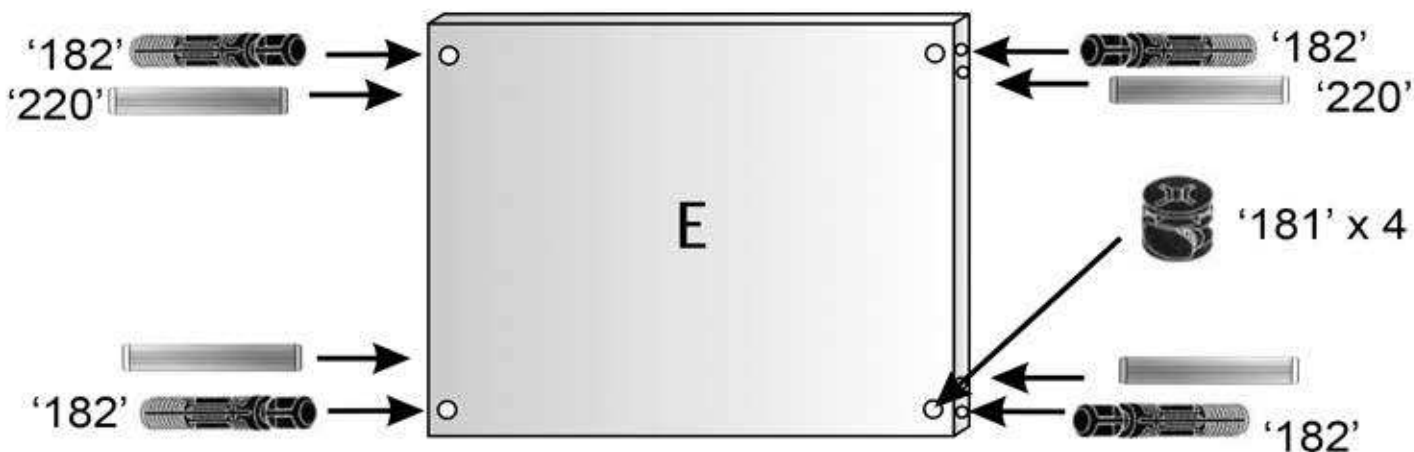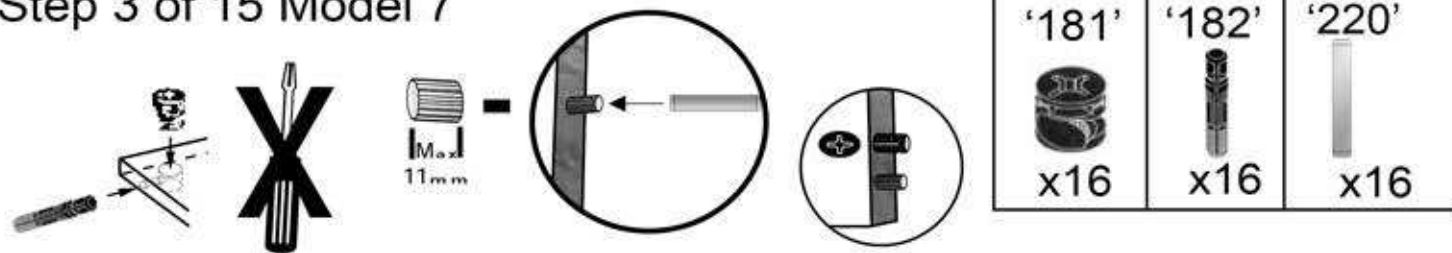

Step 3 of 15 Model 7



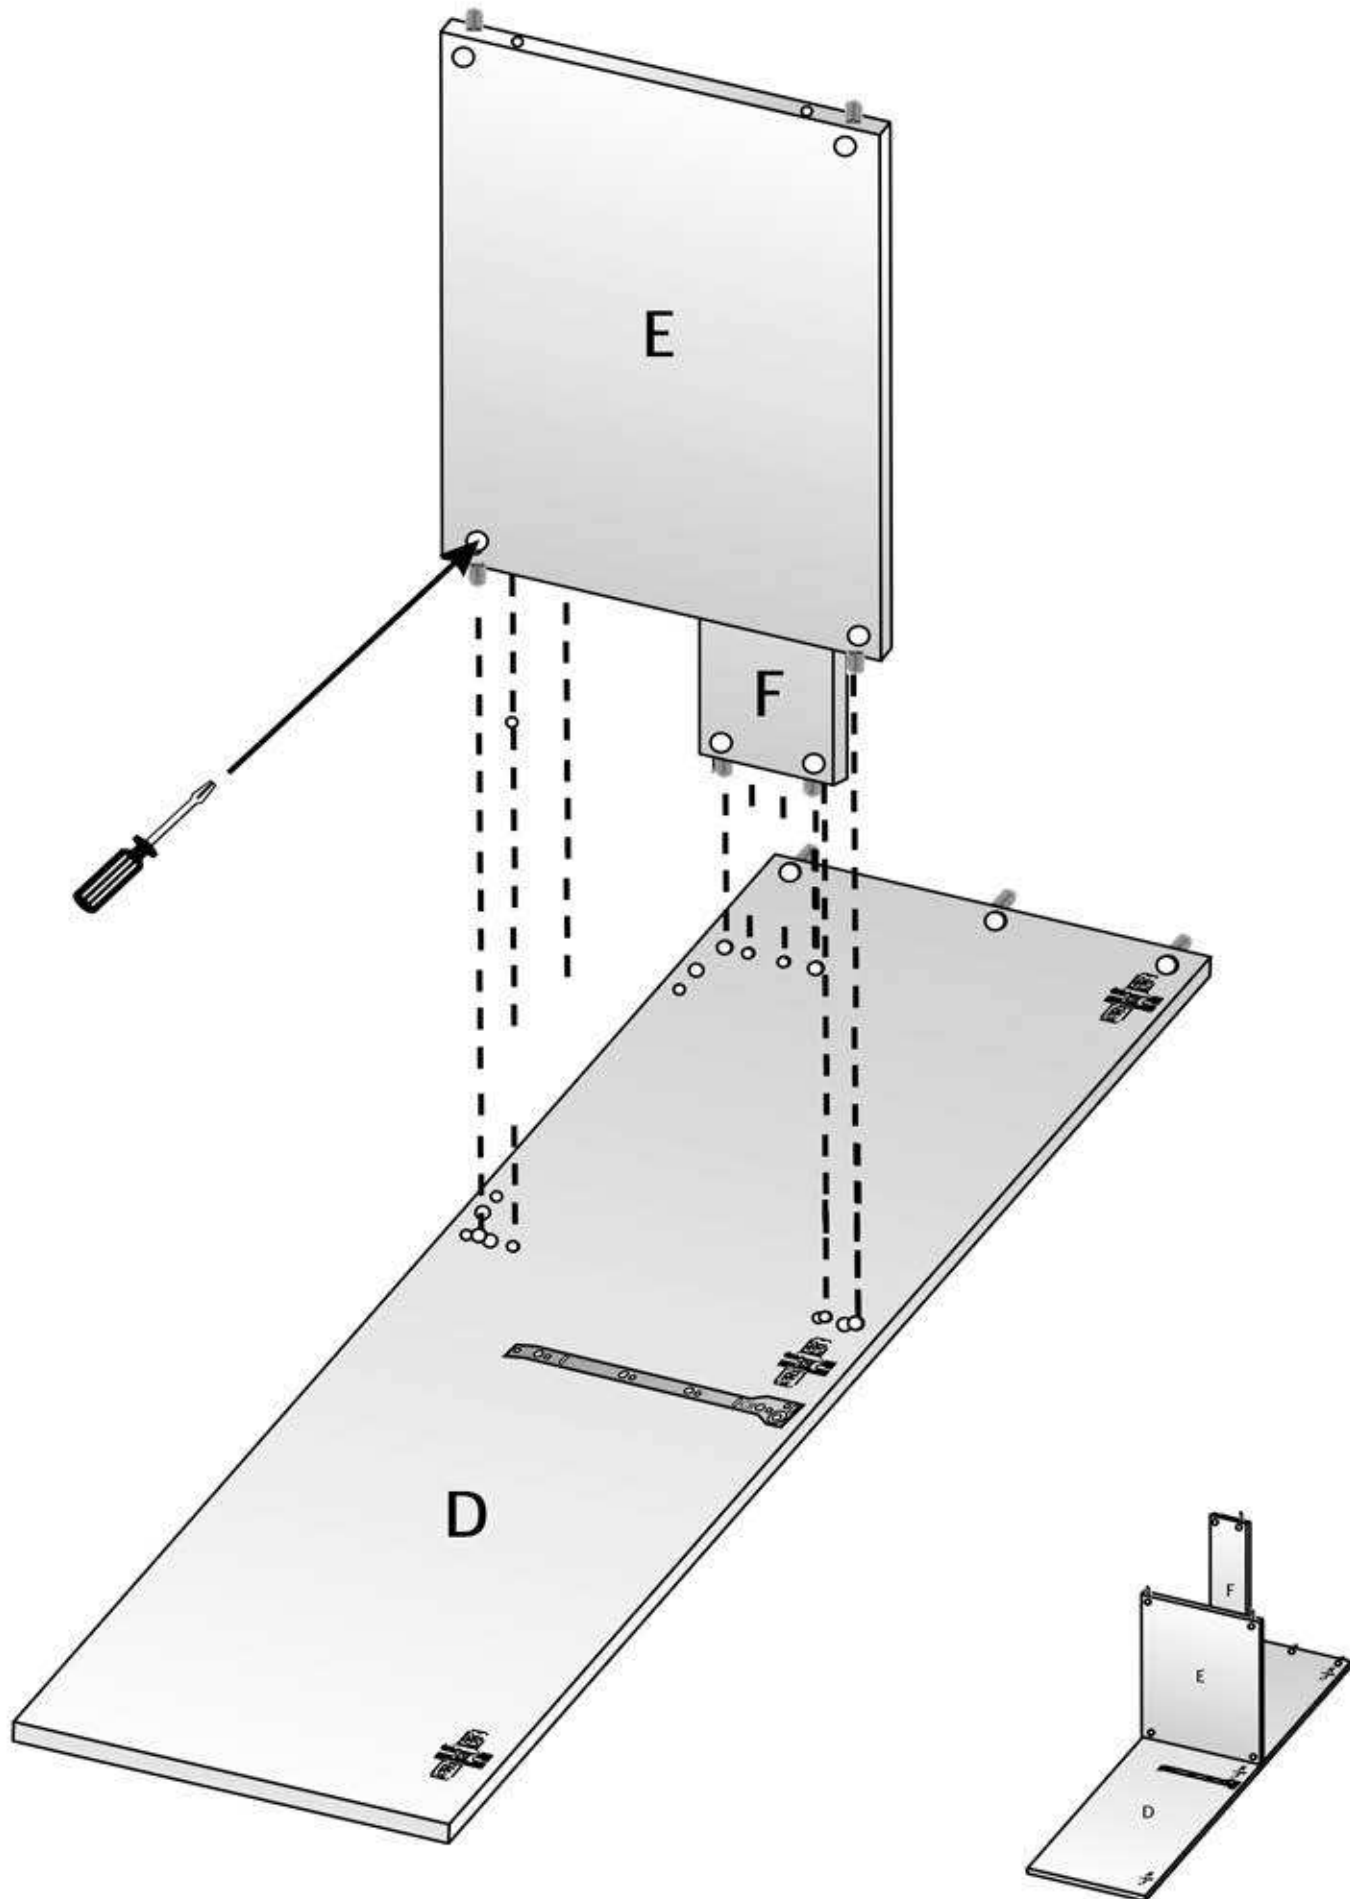


Step 4 of 15 Model 7




Step 5 of 15 Model 7


'50'	'130'
	
12mm x2	x1

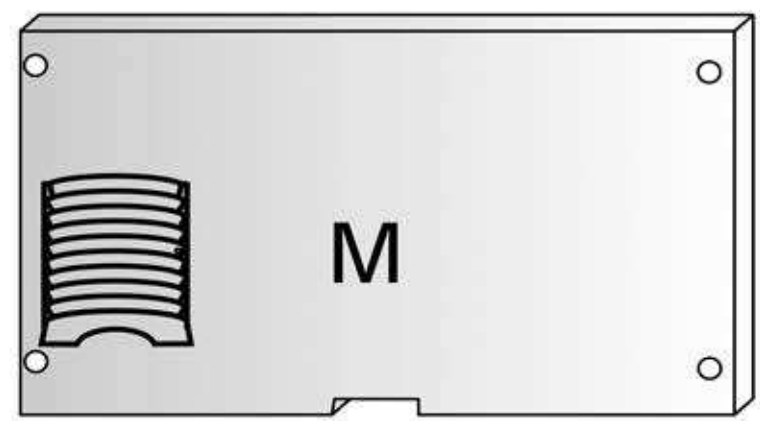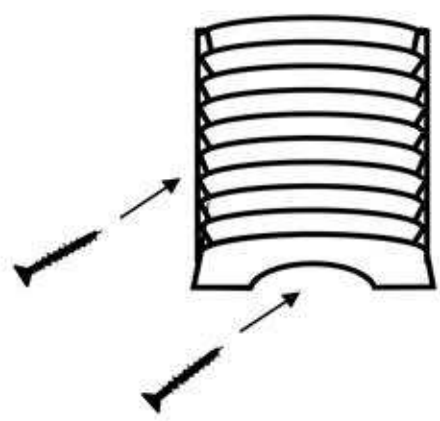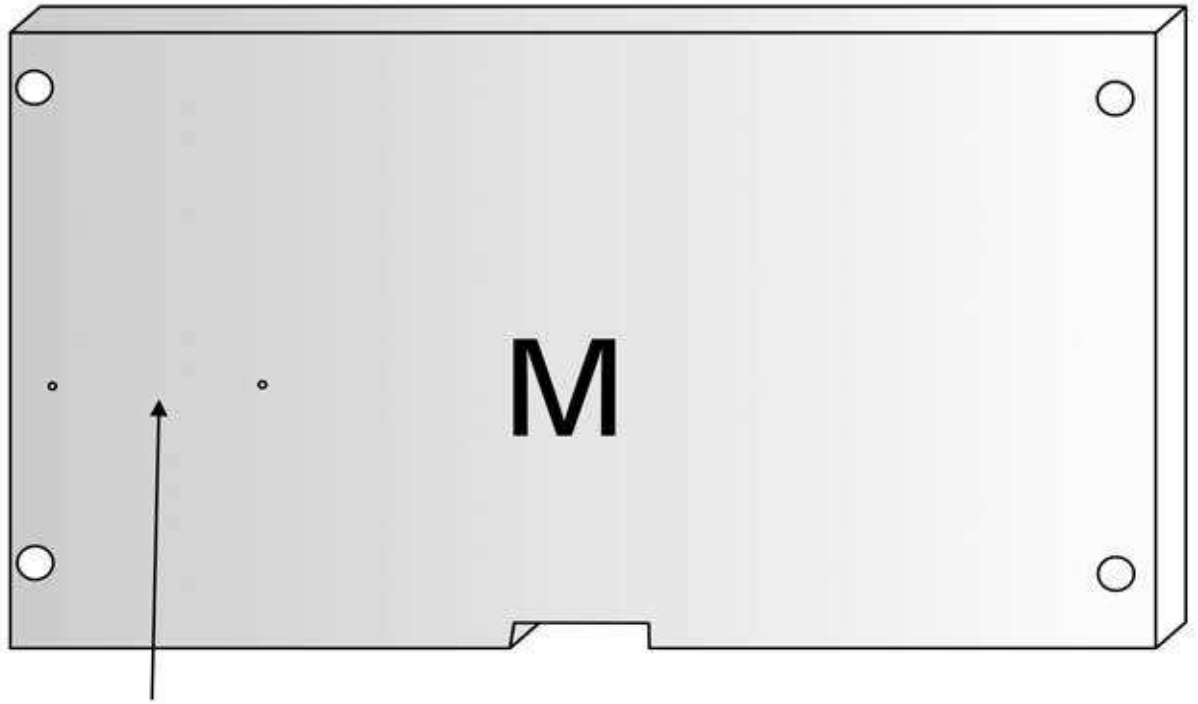


Step 6 of 15 Model 7

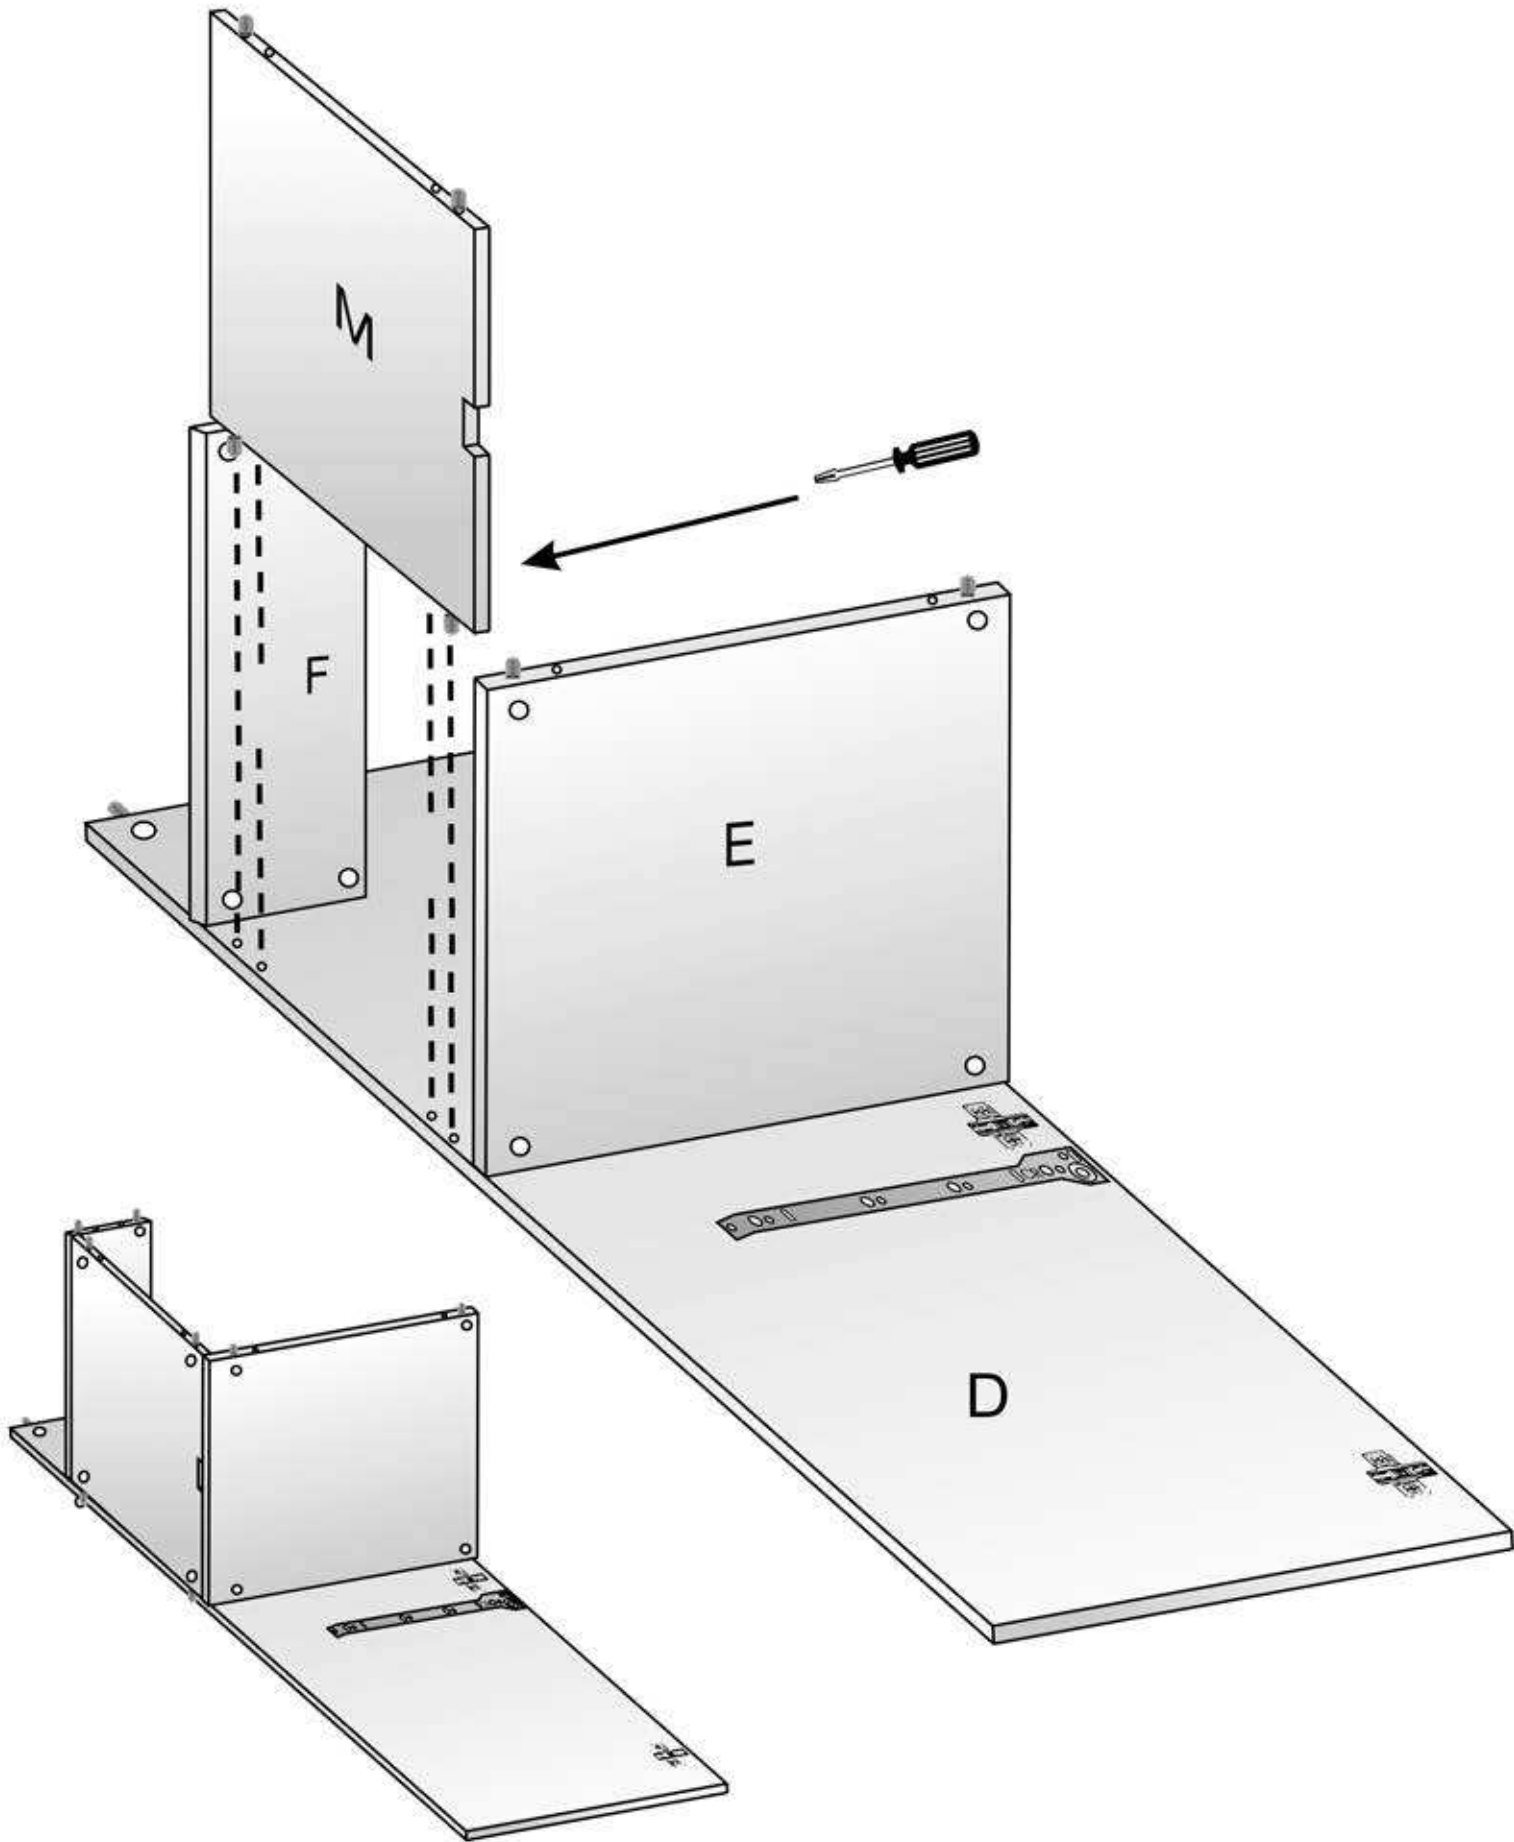


Step 7 of 15 Model 7

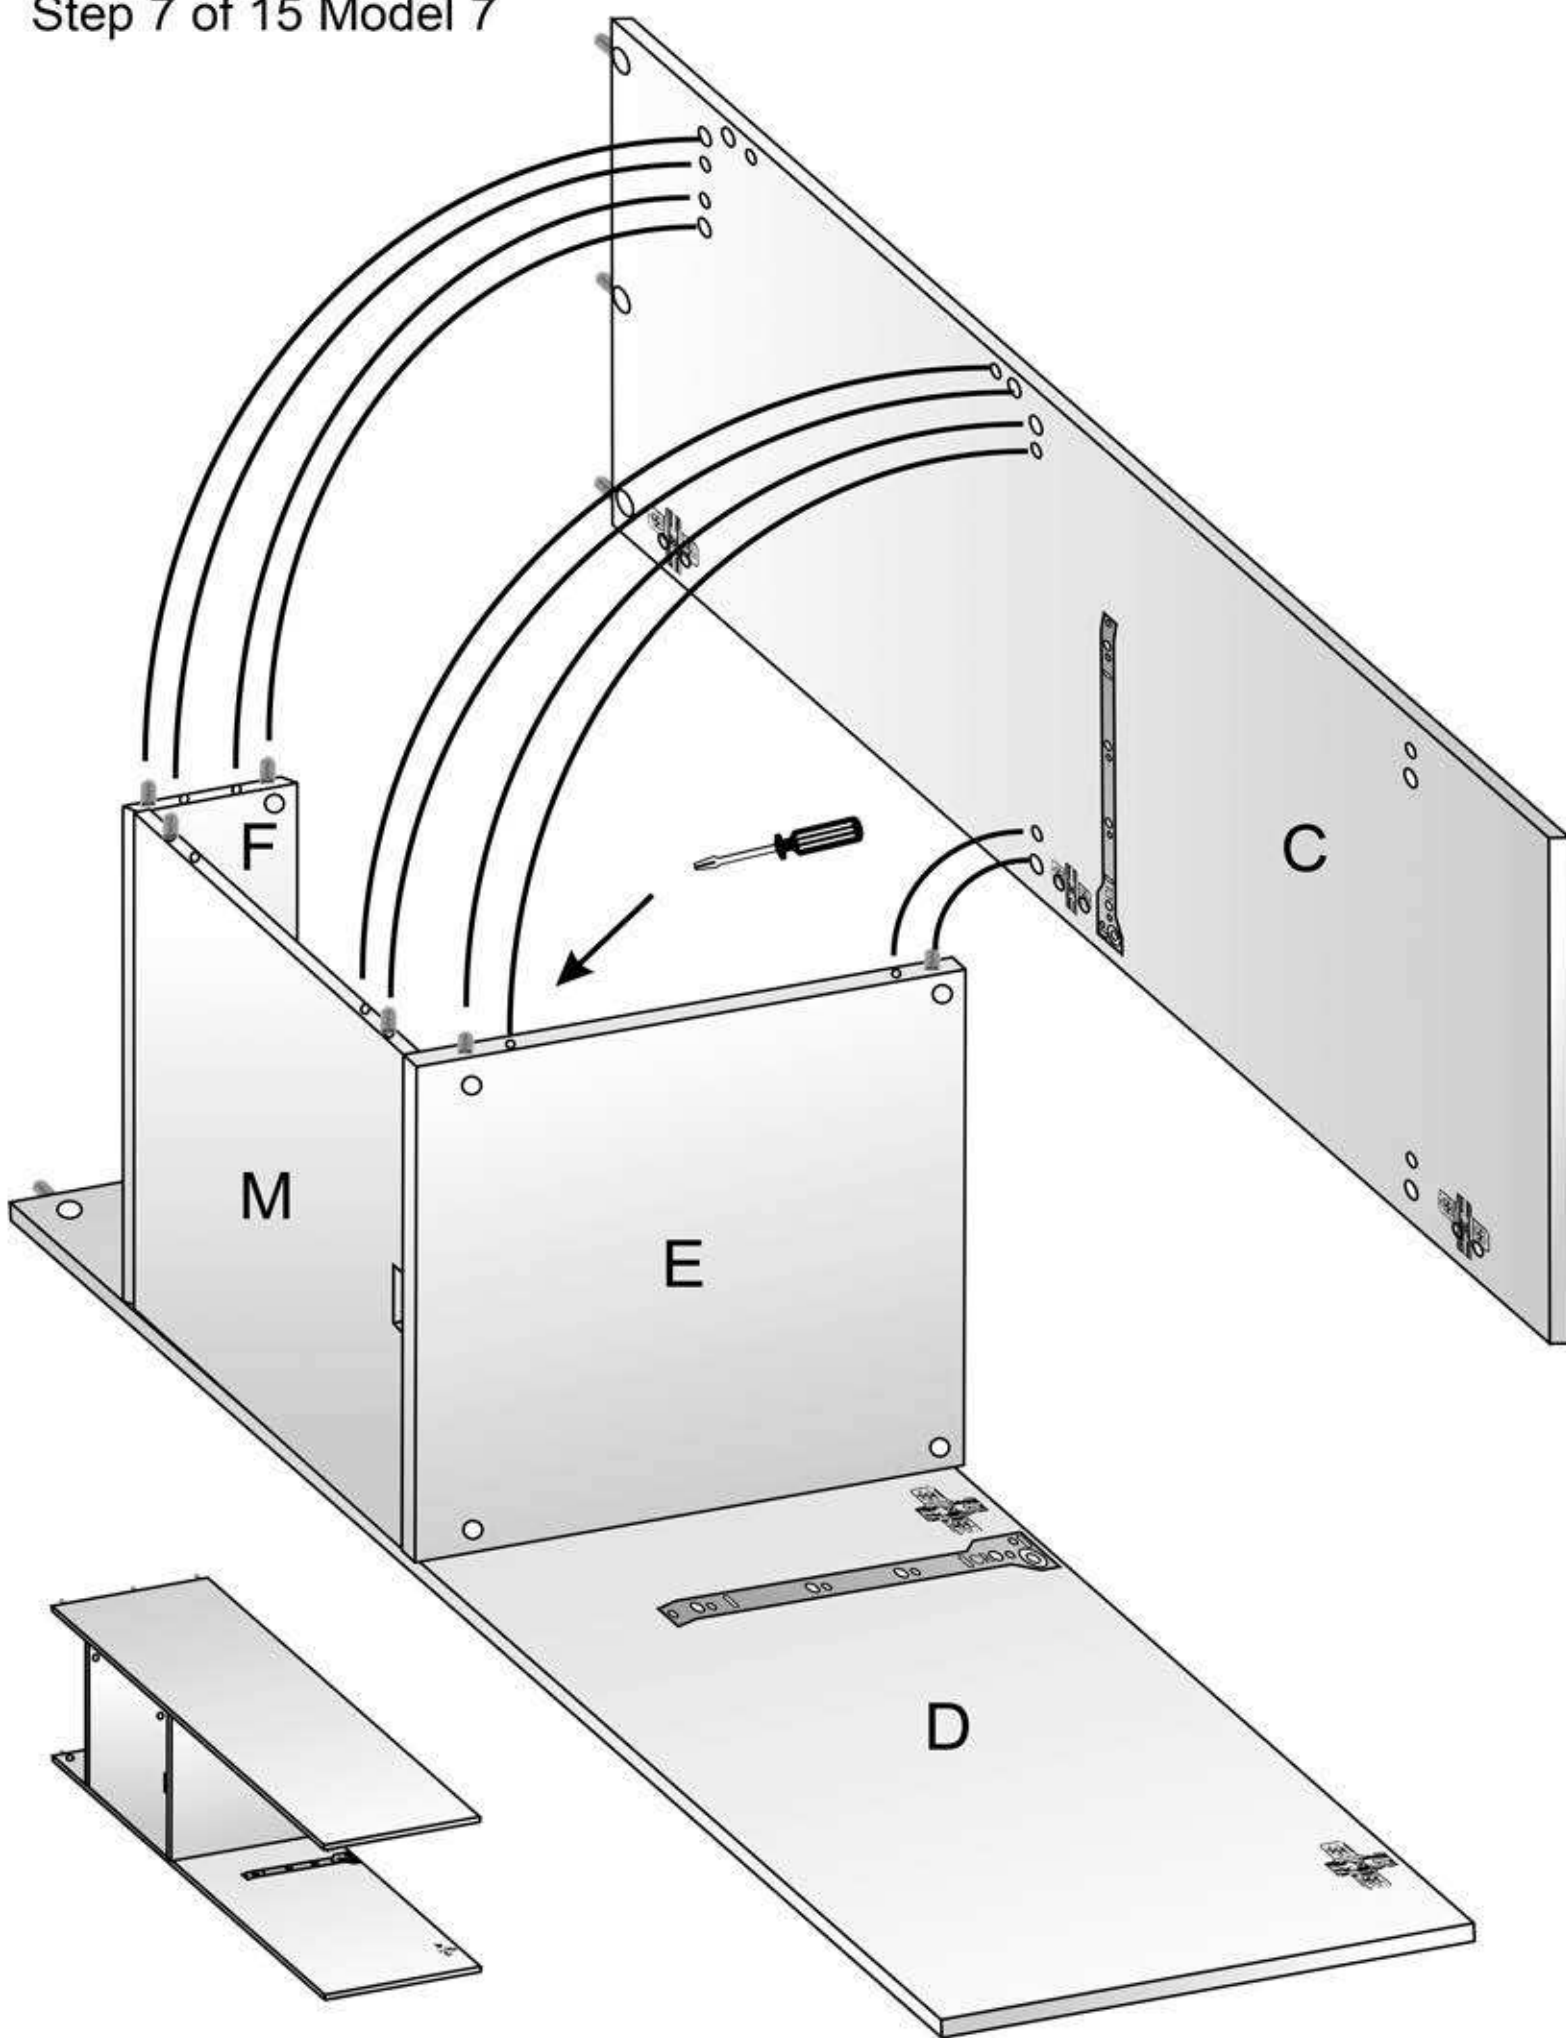



Step 8 of 15 Model 7

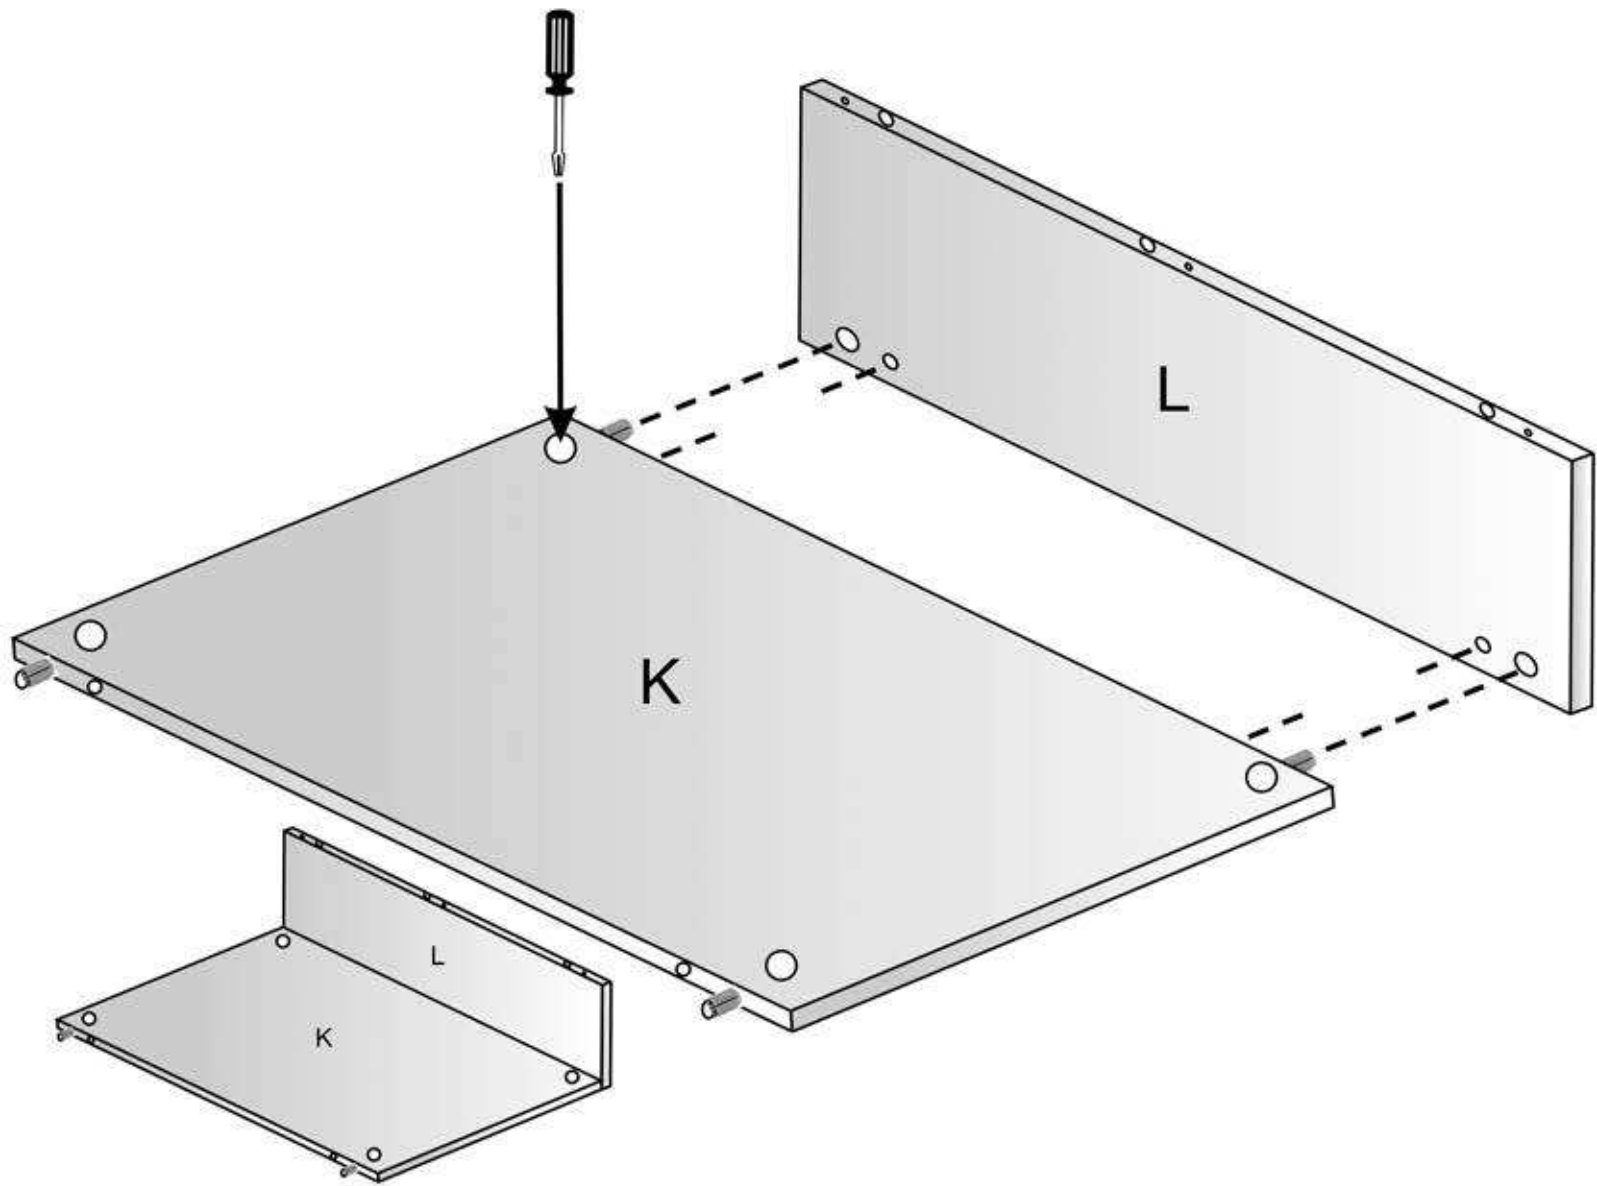


Step 9 of 15 Model 7

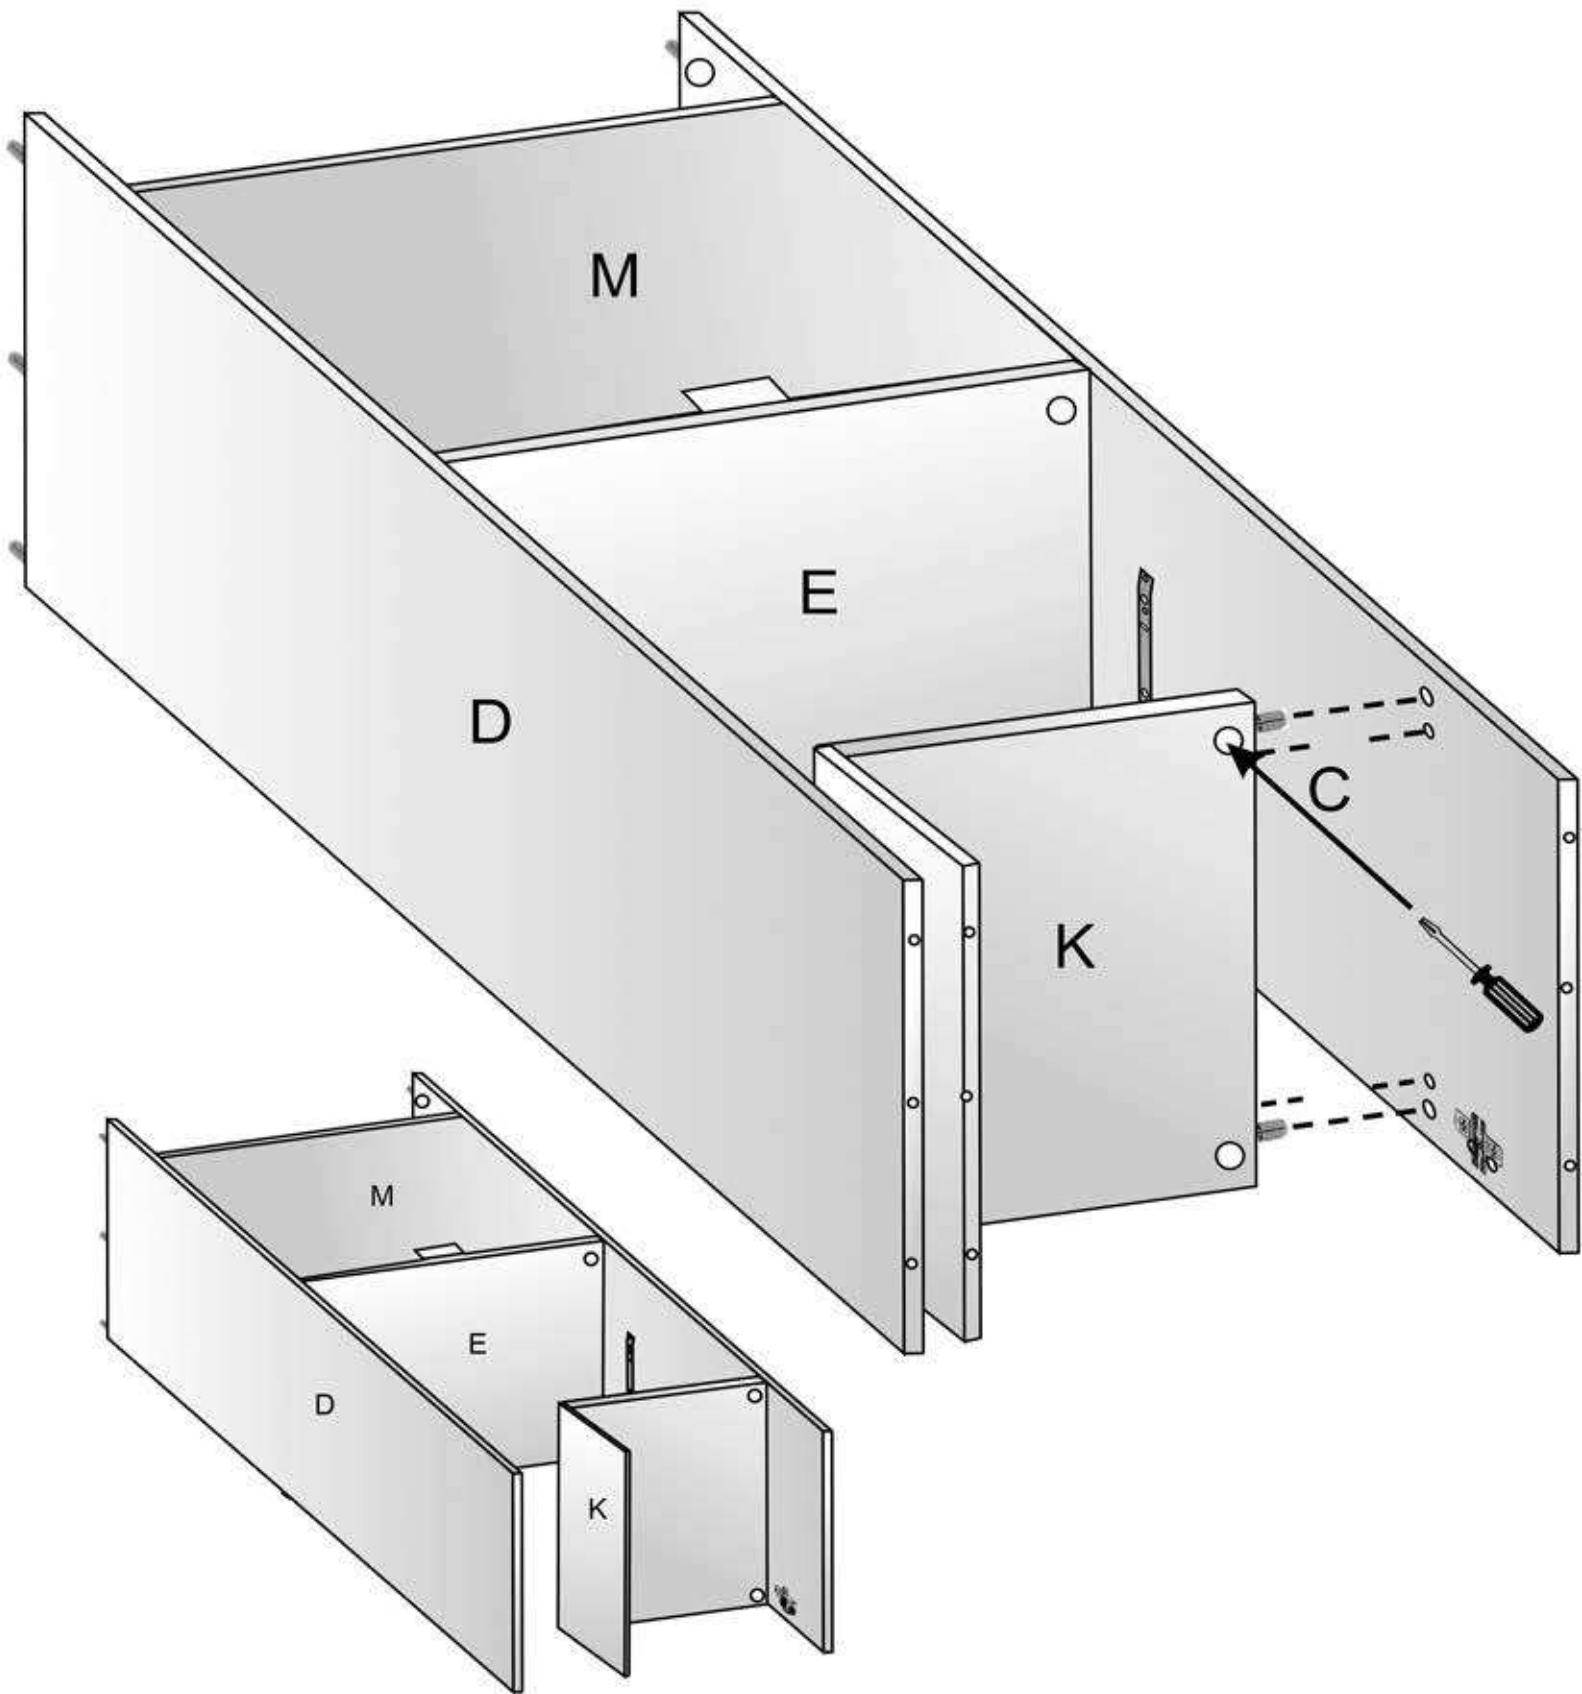



Step 10 of 15 Model 7

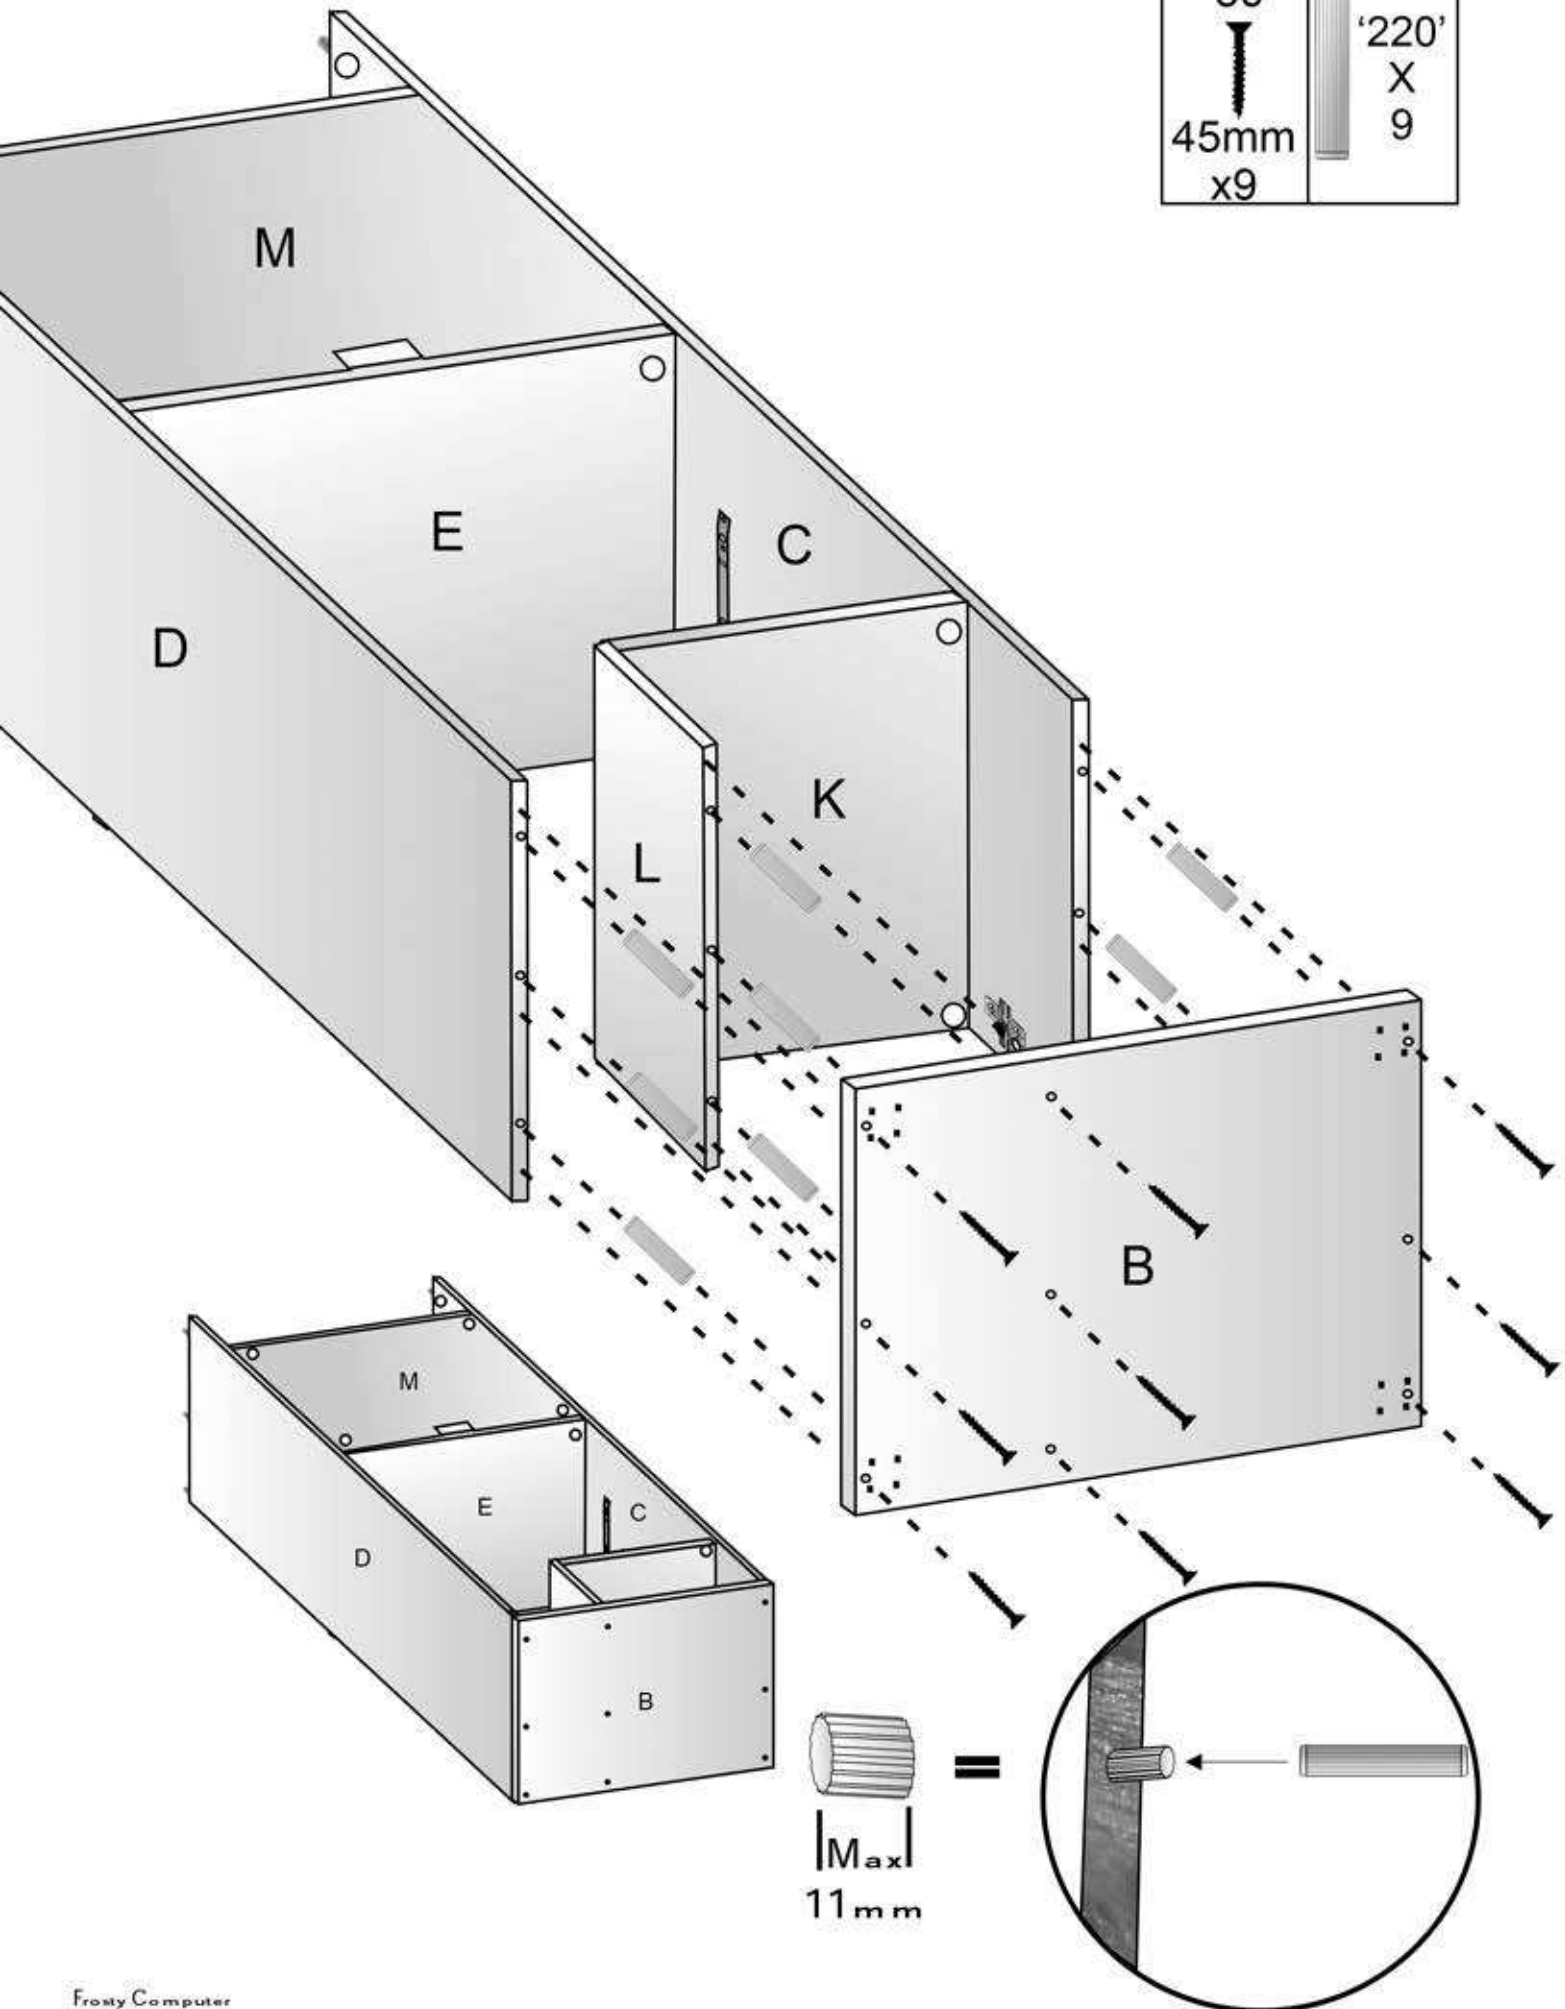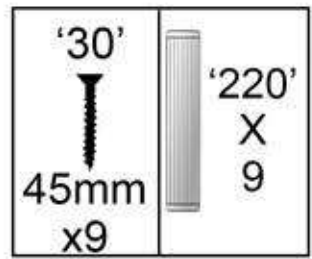

Step 11 of 15 Model 7

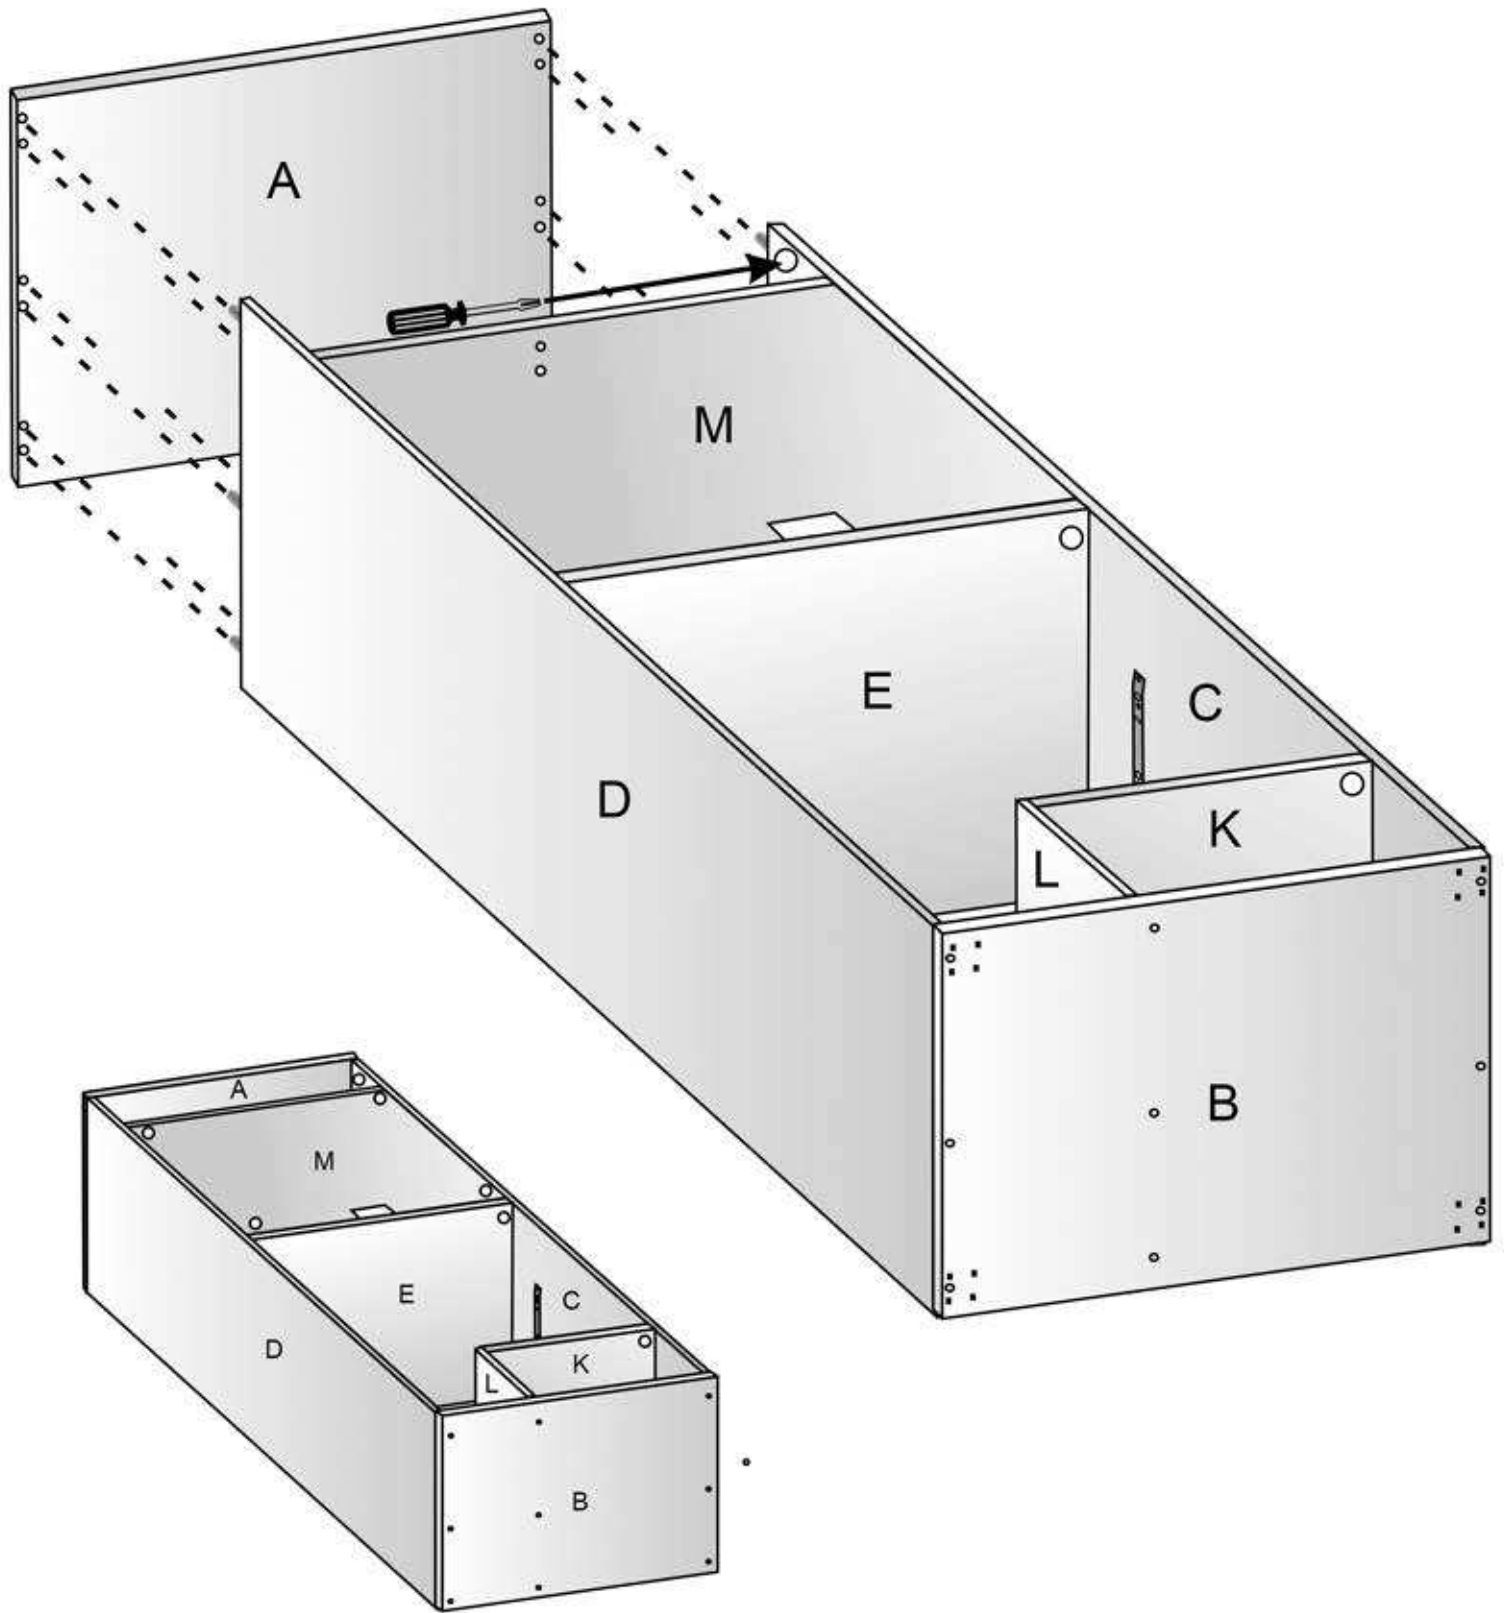




Step 12 of 15 Model 7

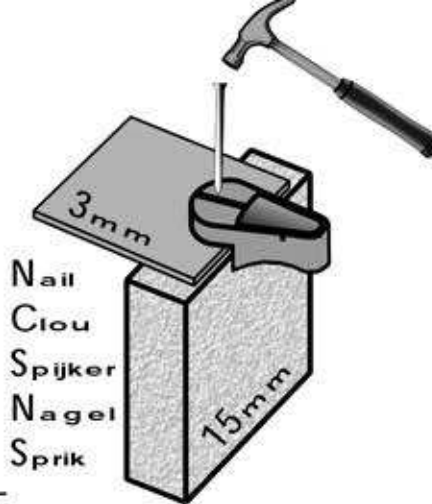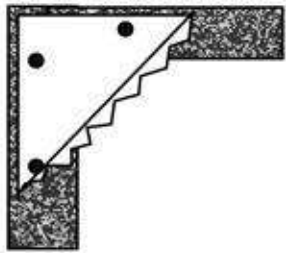

Nail
Clou
Spijker
Nagel
Sprik


'13' 1pkt	'49' 15mm X 16
'108' X 2	'109' X 2

90
Important
Let Op
Achtung

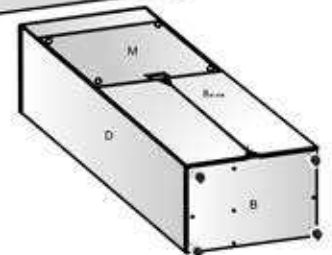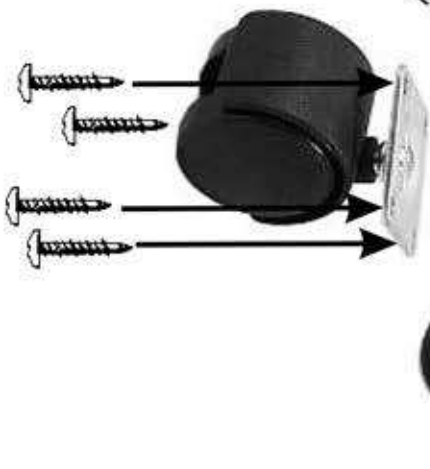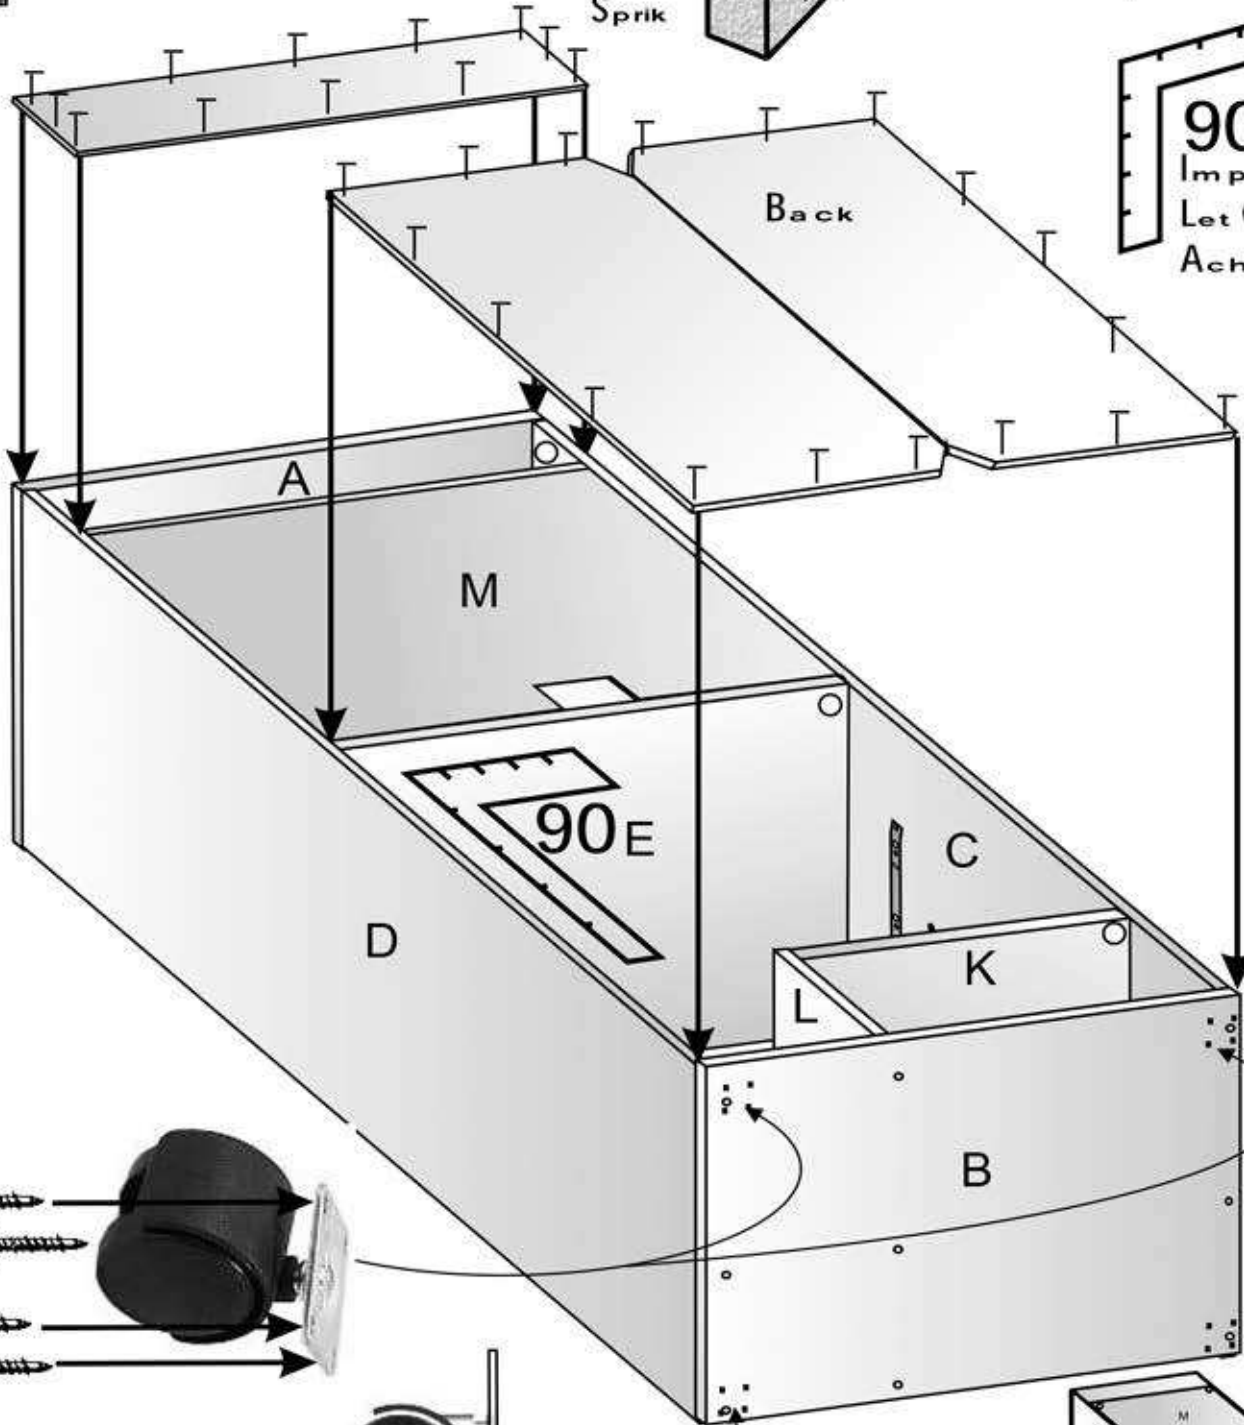




Step 13 of 15 Model 7

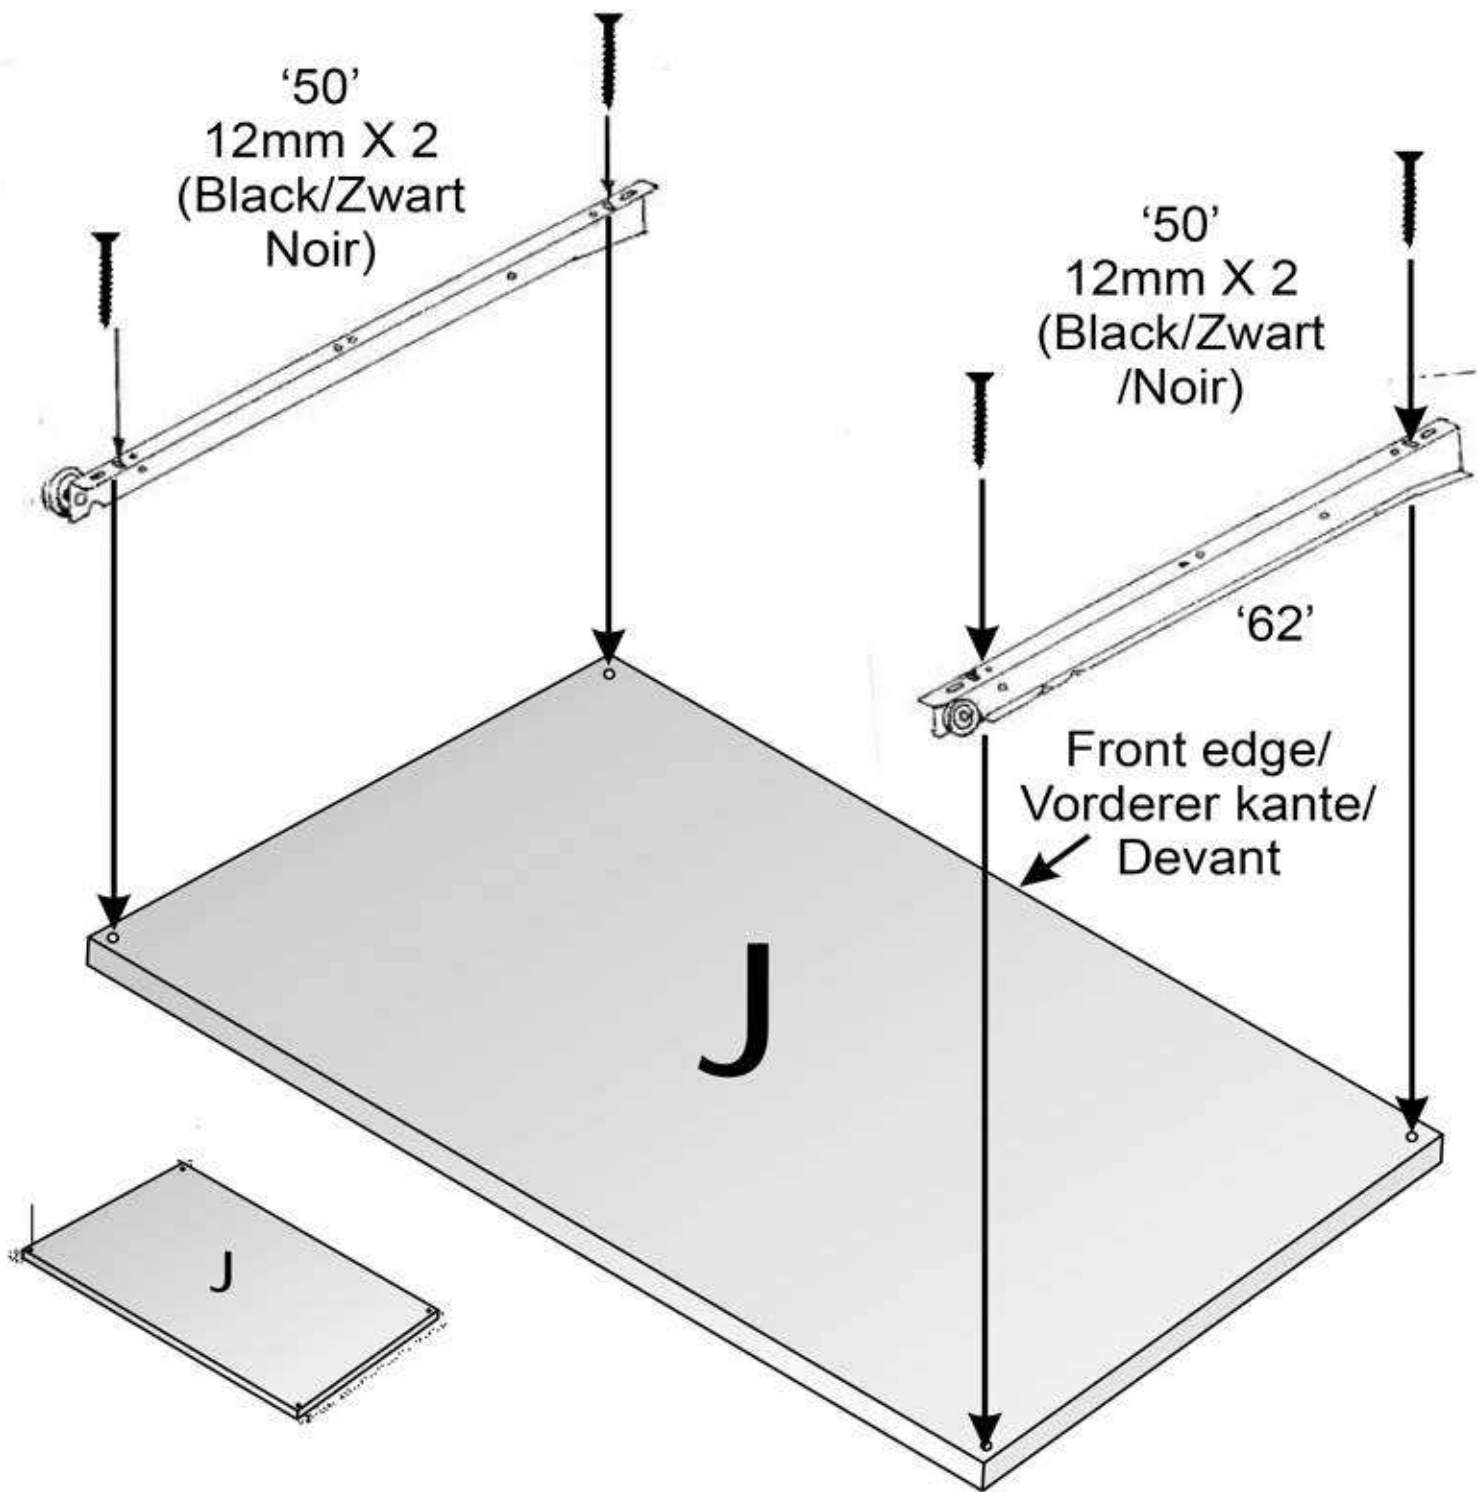'50'
↓
12mm
x4
(Black
/Zwart
/Noir)




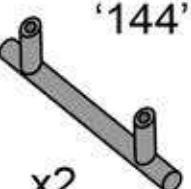



Step 14 of 15 Model 7

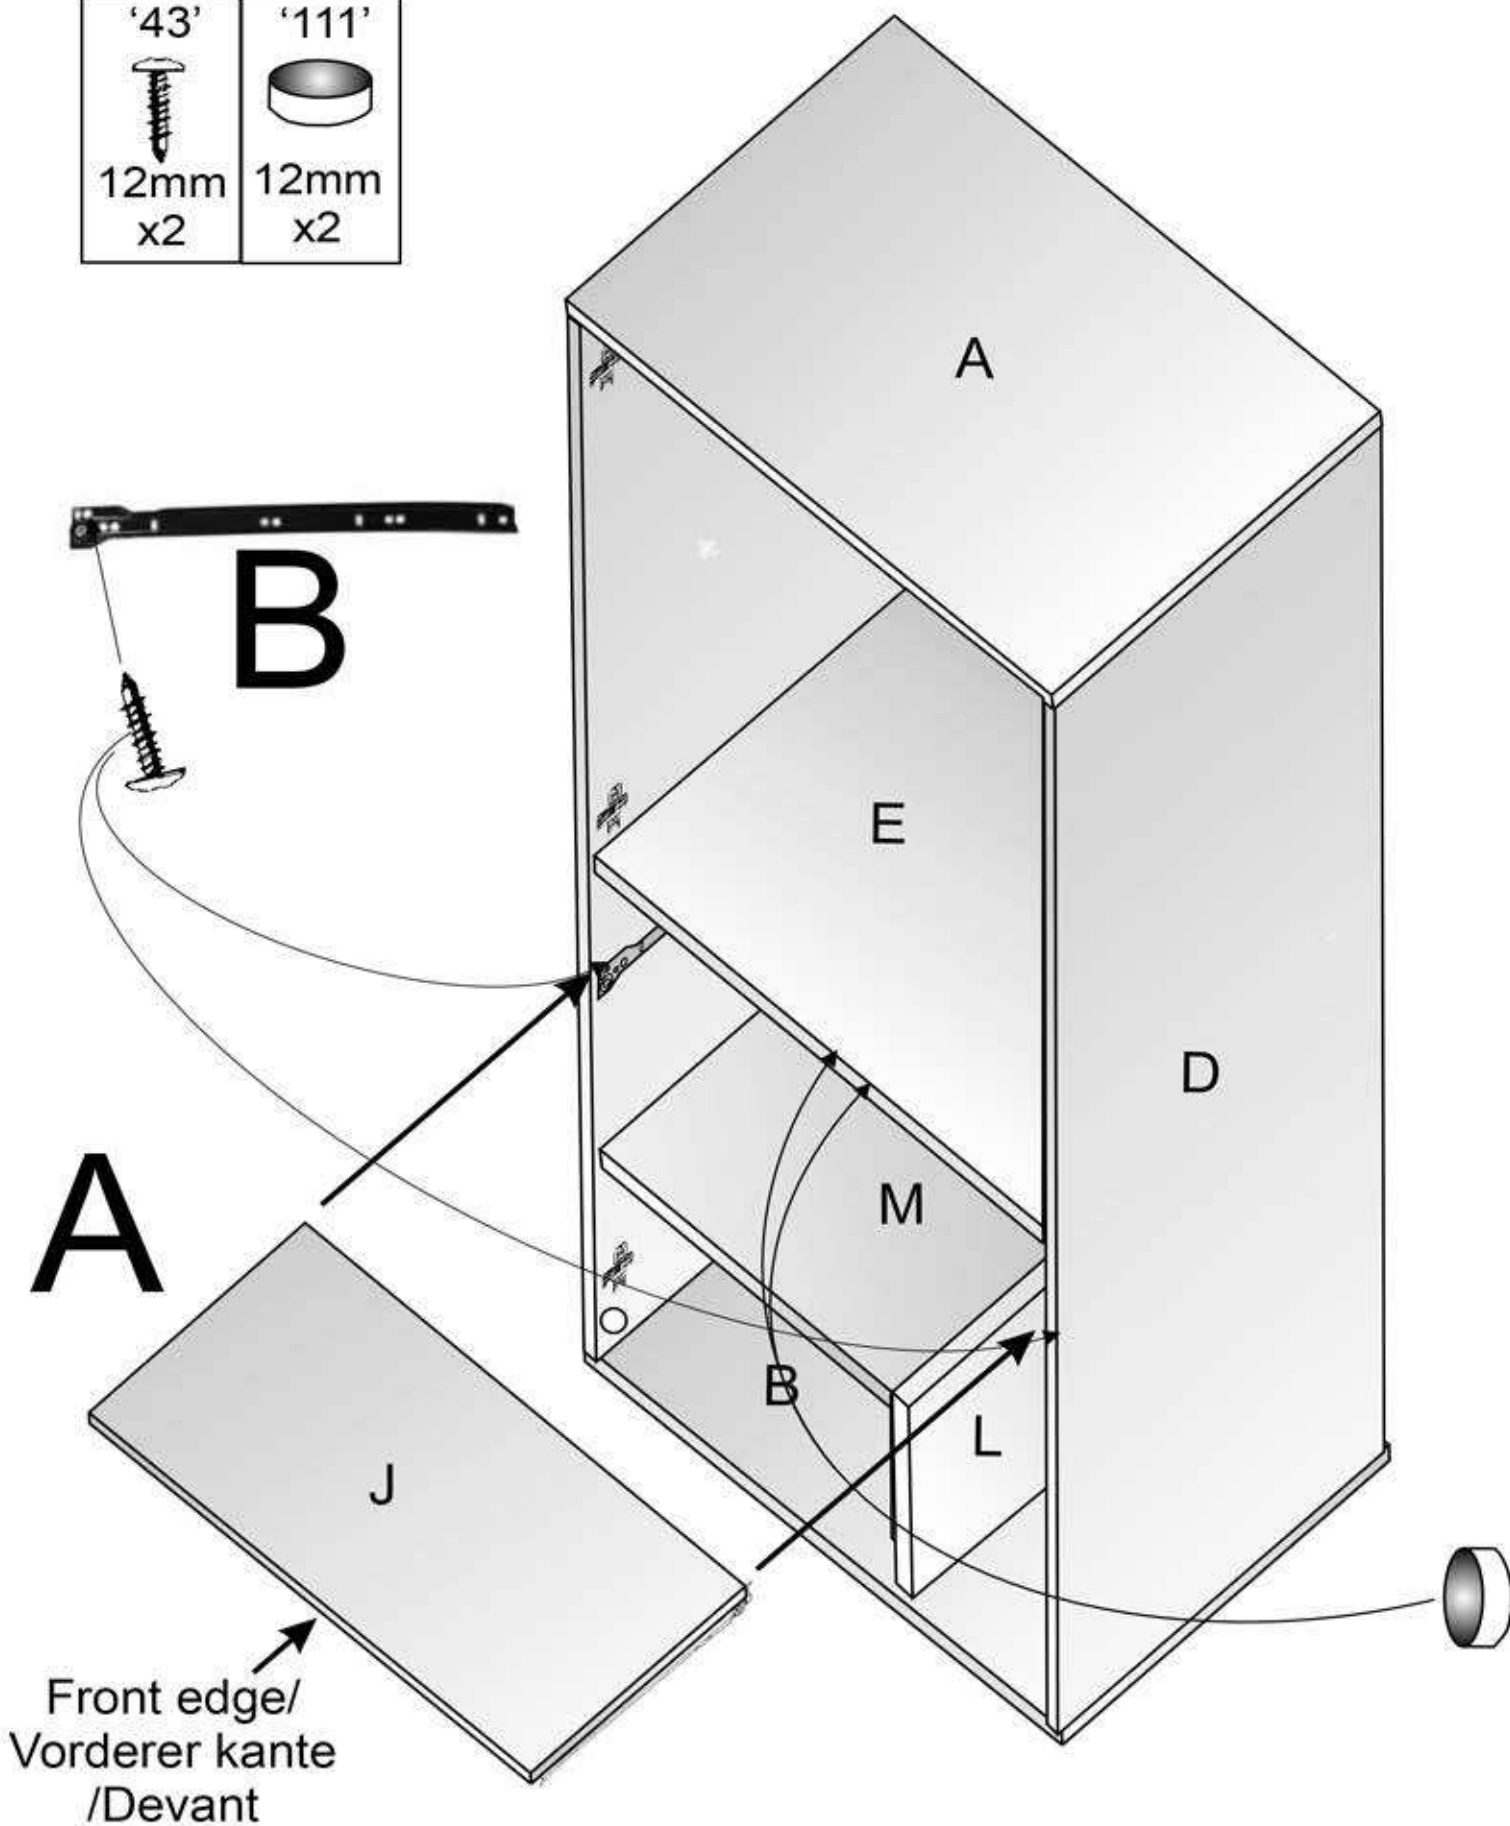'43'	'111'
	
12mm x2	12mm x2








Step 15 of 15 Model 7

'44' 12mm  x12	'201'  x6
'999' 21mm  x4	'144'  x2

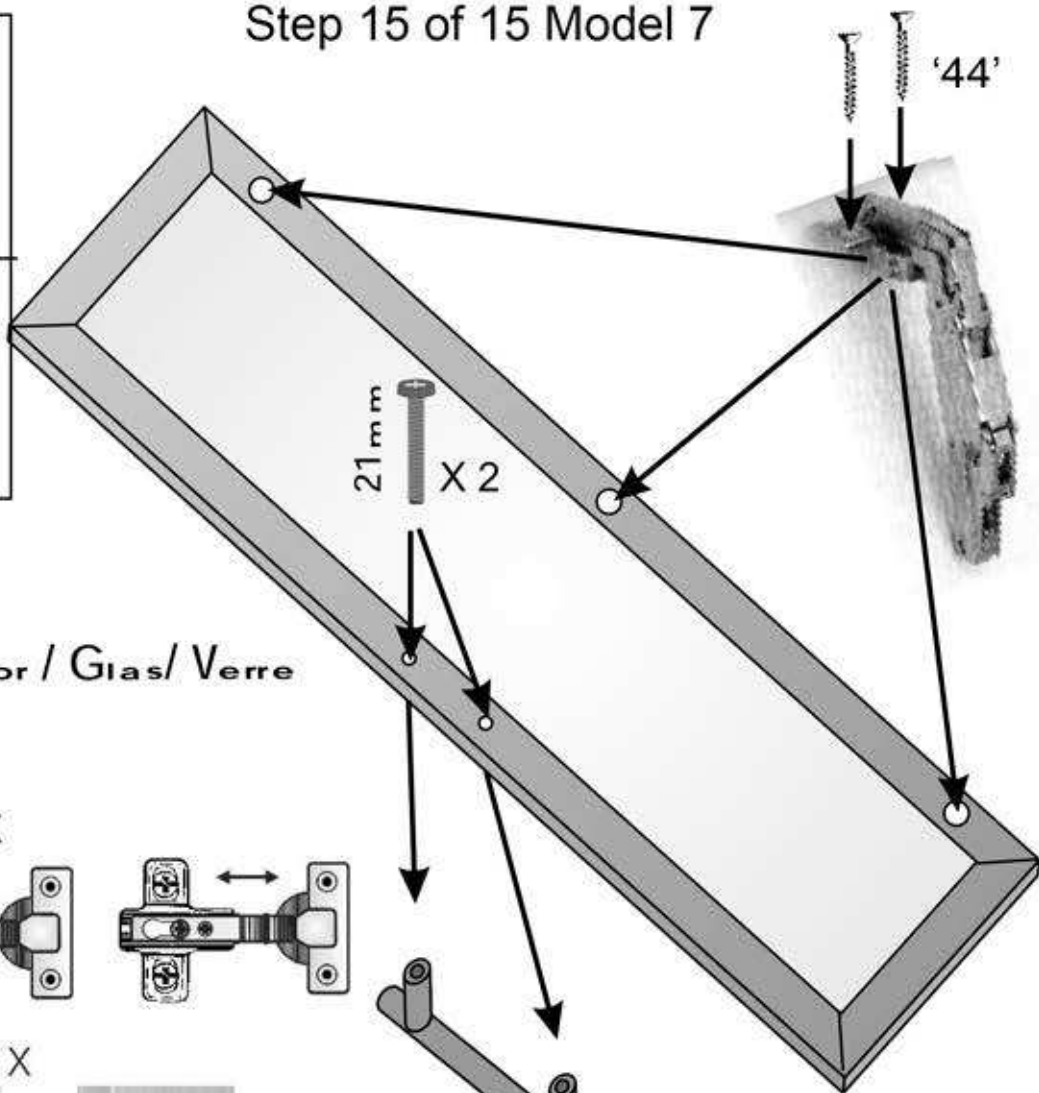

2 Glass Door / Glas / Verre

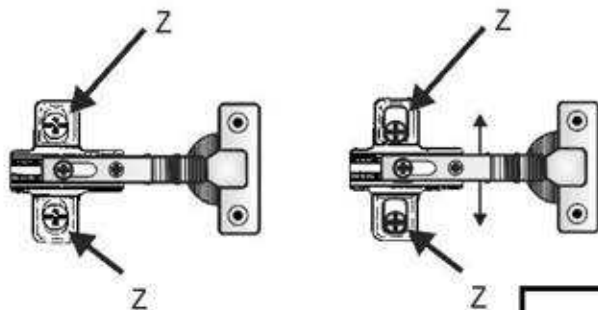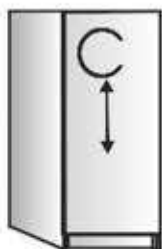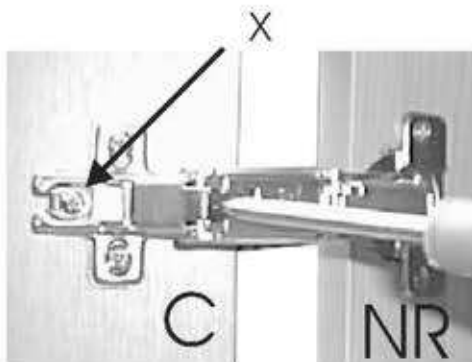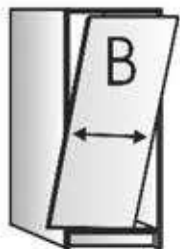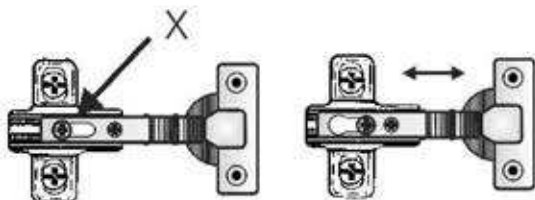

'144'

After assembly discard any extra fittings.

In het componenten pak zitten extra schroeven etc., na de opbouw kunnen deze weggegooid worden.

Après assemblage, se débarrasser de pièces de plus.

UK Spares and Assembly HELPLINE 01572 755110