



Halstead Bed

IMPORTANT - À LIRE ATTENTIVEMENT - CONSERVER POUR RÉFÉRENCE ULTÉRIEURE
 WICHTIG - BITTE SORGFÄLTIG LESEN - BEHALTEN FÜR ZUKÜNFTIGE VERWEIS
 BELANGRIJK - LEES ZORGVULDIG - BEHOUDEN VOOR TOEKOMSTIGE REFERENTIE
 IMPORTANT - READ CAREFULLY - RETAIN FOR FUTURE REFERENCE






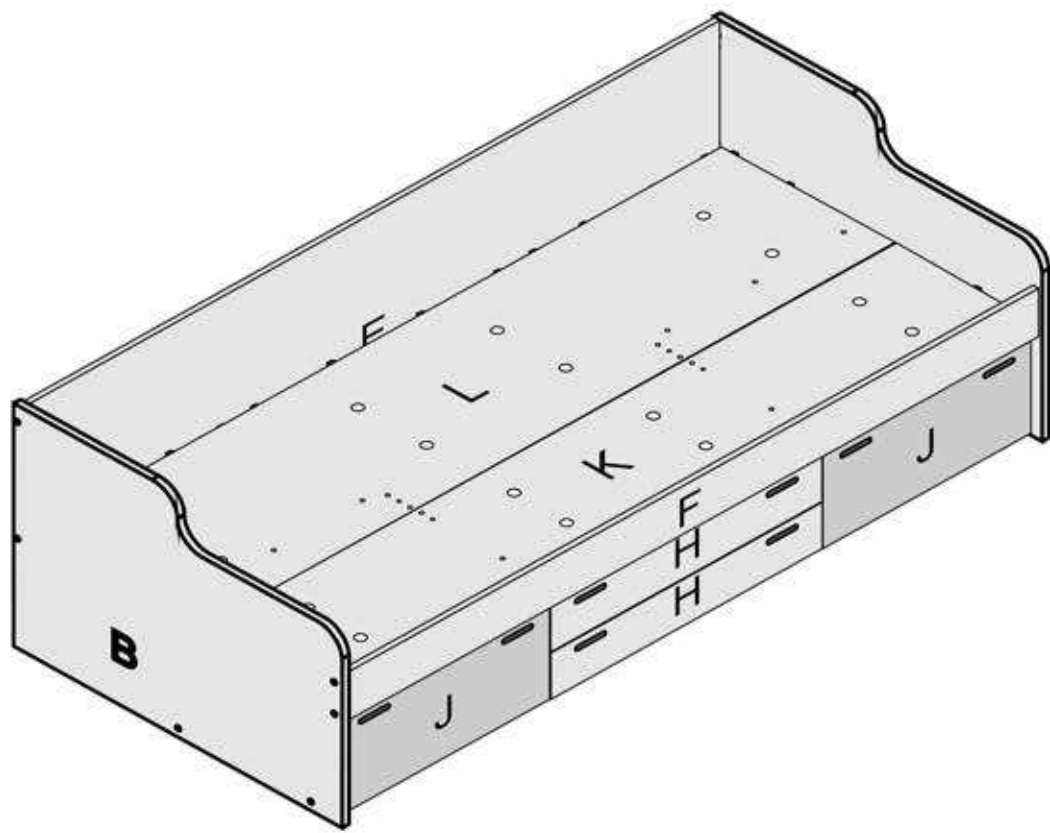


10 45mm x "30" 45mm H/Loc	26 x "220" 38 x 6mm dowel	4 x "208" Ø Crank 26mm Hinge	4 x "206" 26mm Hinge Plate	4 10mm x "47" 10mm x 6mm	20 12mm x "44" 12 x M=6,8000-008-CSK	1 x "25" 4mm Floor toy	4 x "61" 2 pairs 32cm runners	2 760 x 340 x 100mm
12 x "28" 50mm Contrast	16 x "19" 23mm x M4	8 x "77" Hinge Covers for 208mm	38 x "155" DT 484	30 x "13" Pin	76 12mm x "43" 12xM=6,8000-008-CSK	2 x "219" Glue	4 x "36" 25mm x 36mm	

A	—	1	K	—	1	2 x 61 x 33 cm x 3mm
B	—	1	L	—	1	2 x 75 x 34 cm x 3mm
D	—	1				
E	—	1				
F	—	1				
G	—	2				
H	—	2				
J	—	2				






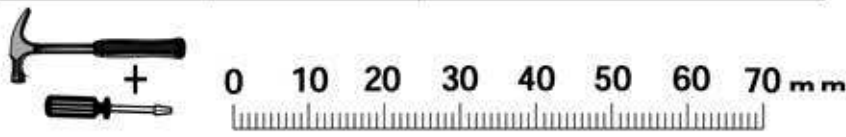


Halstead Bed

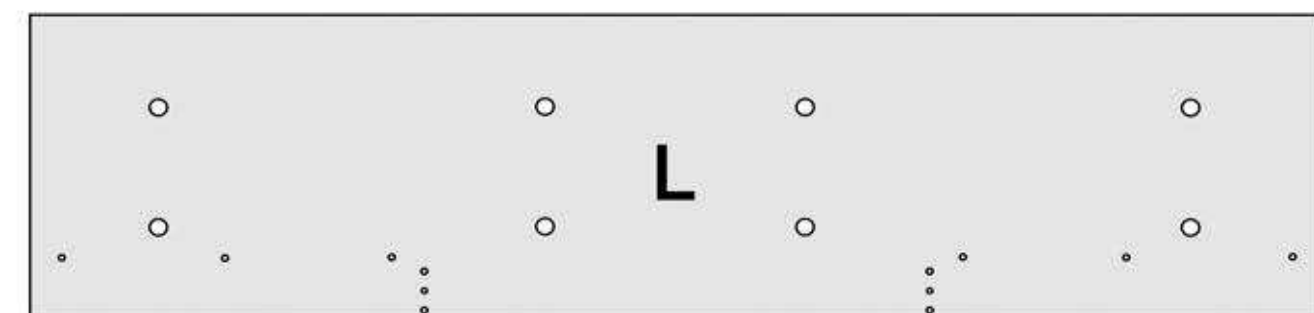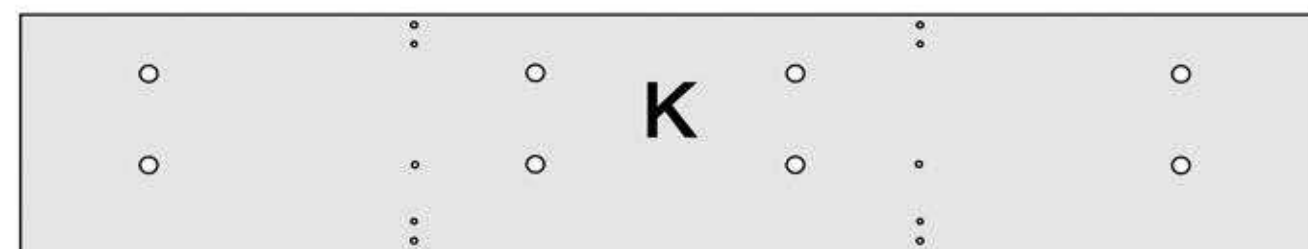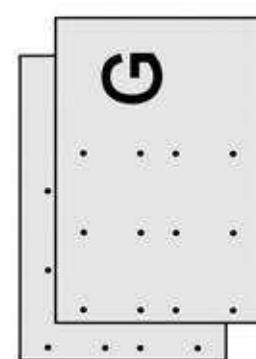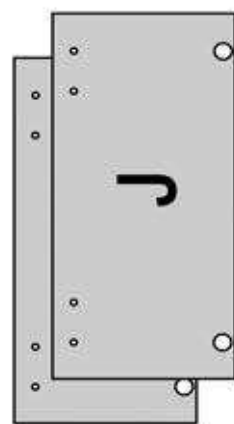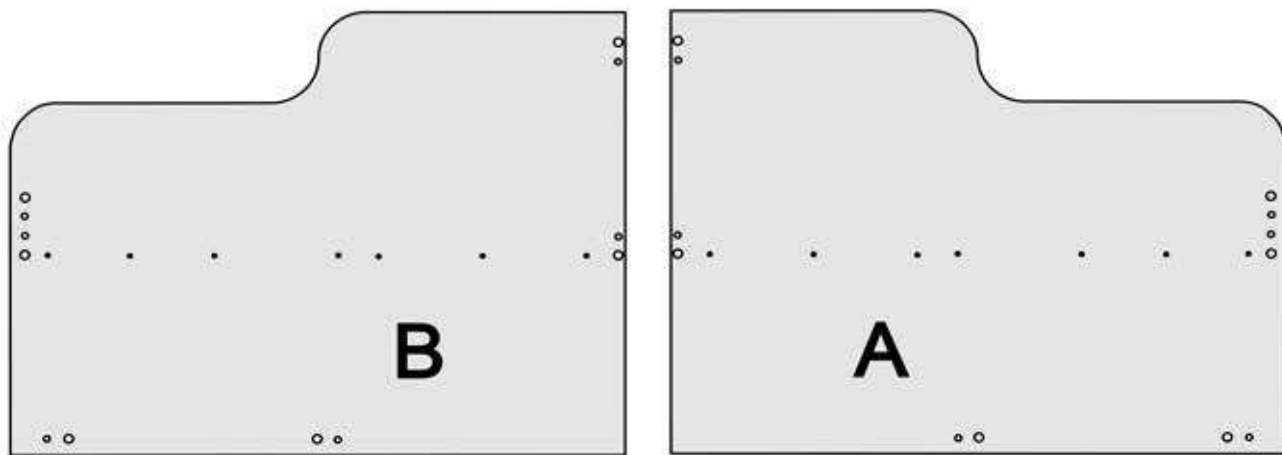



Halstead Sofa Bed




Step 1

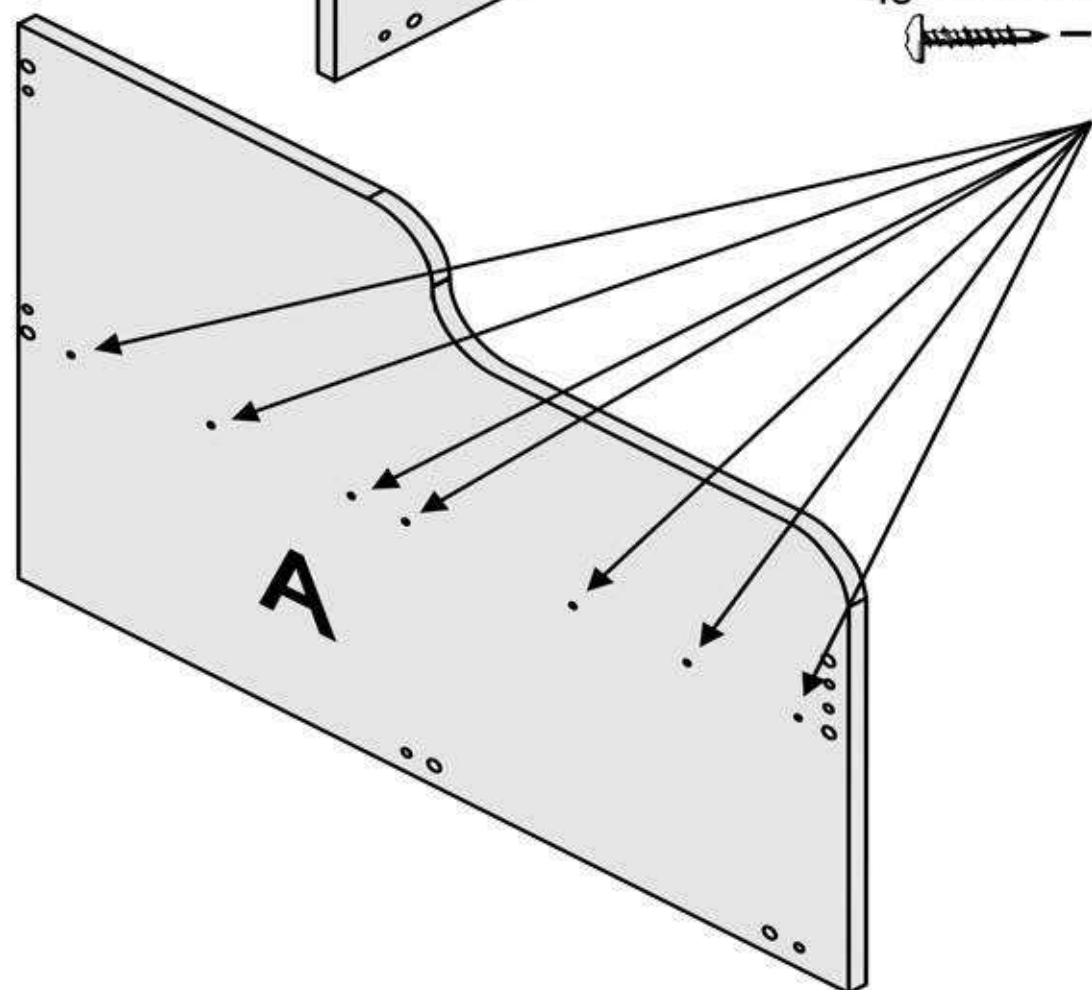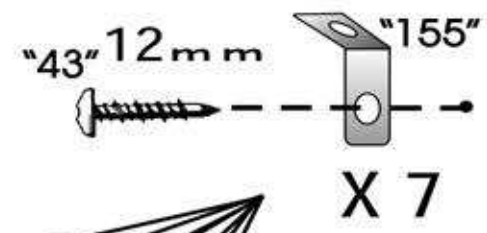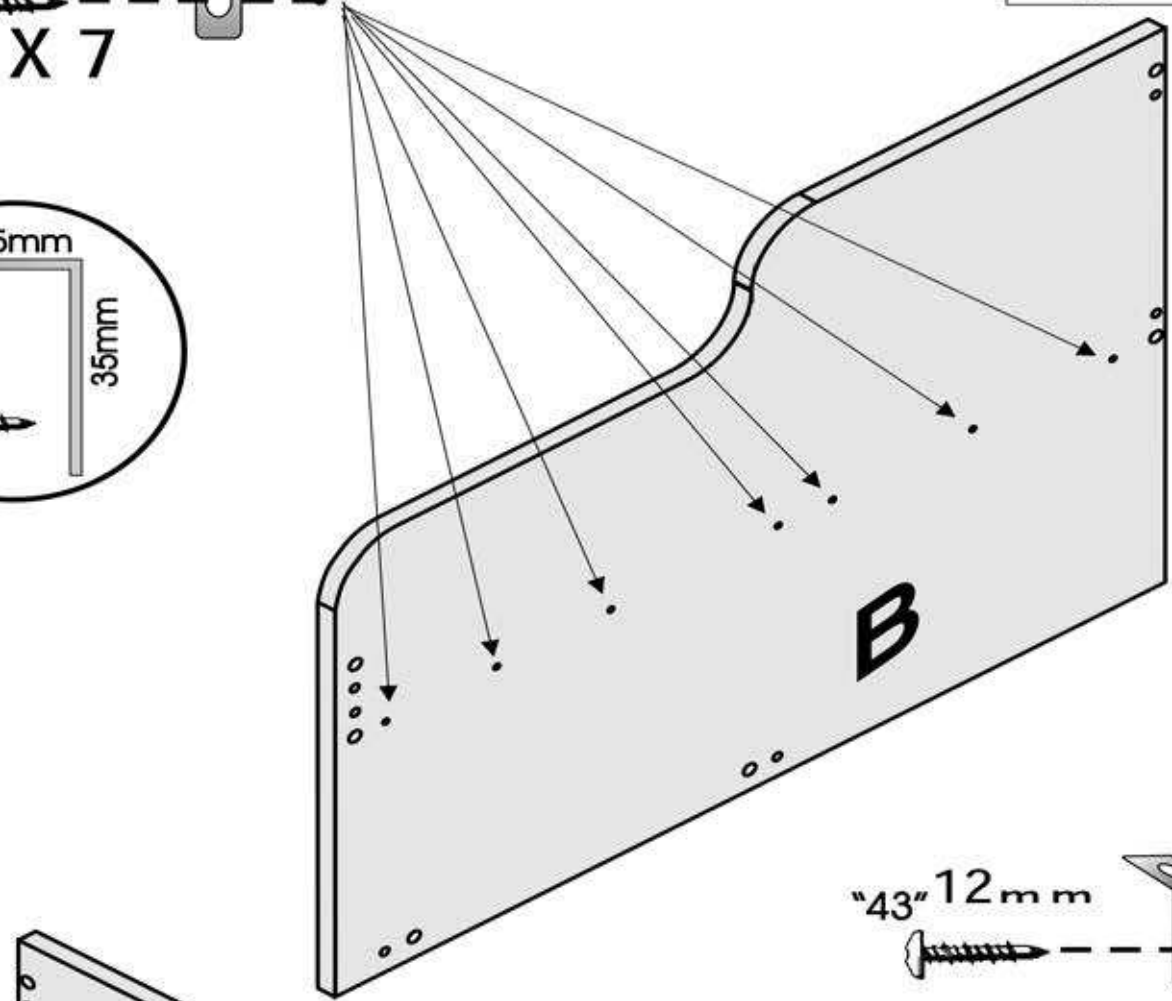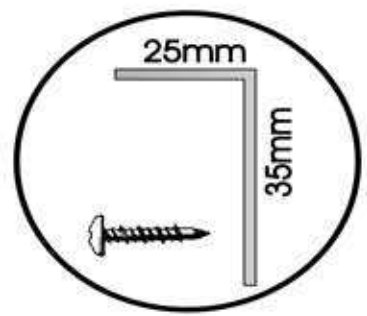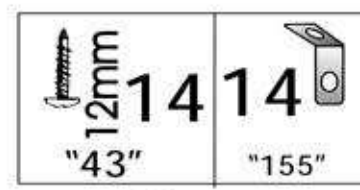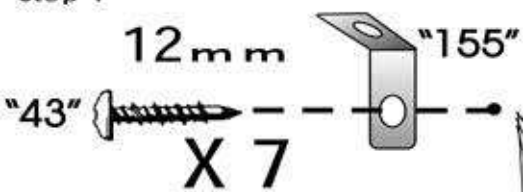

Halstead Sofa Bed


Step 2



'44'	 12mm	6
'61'		2


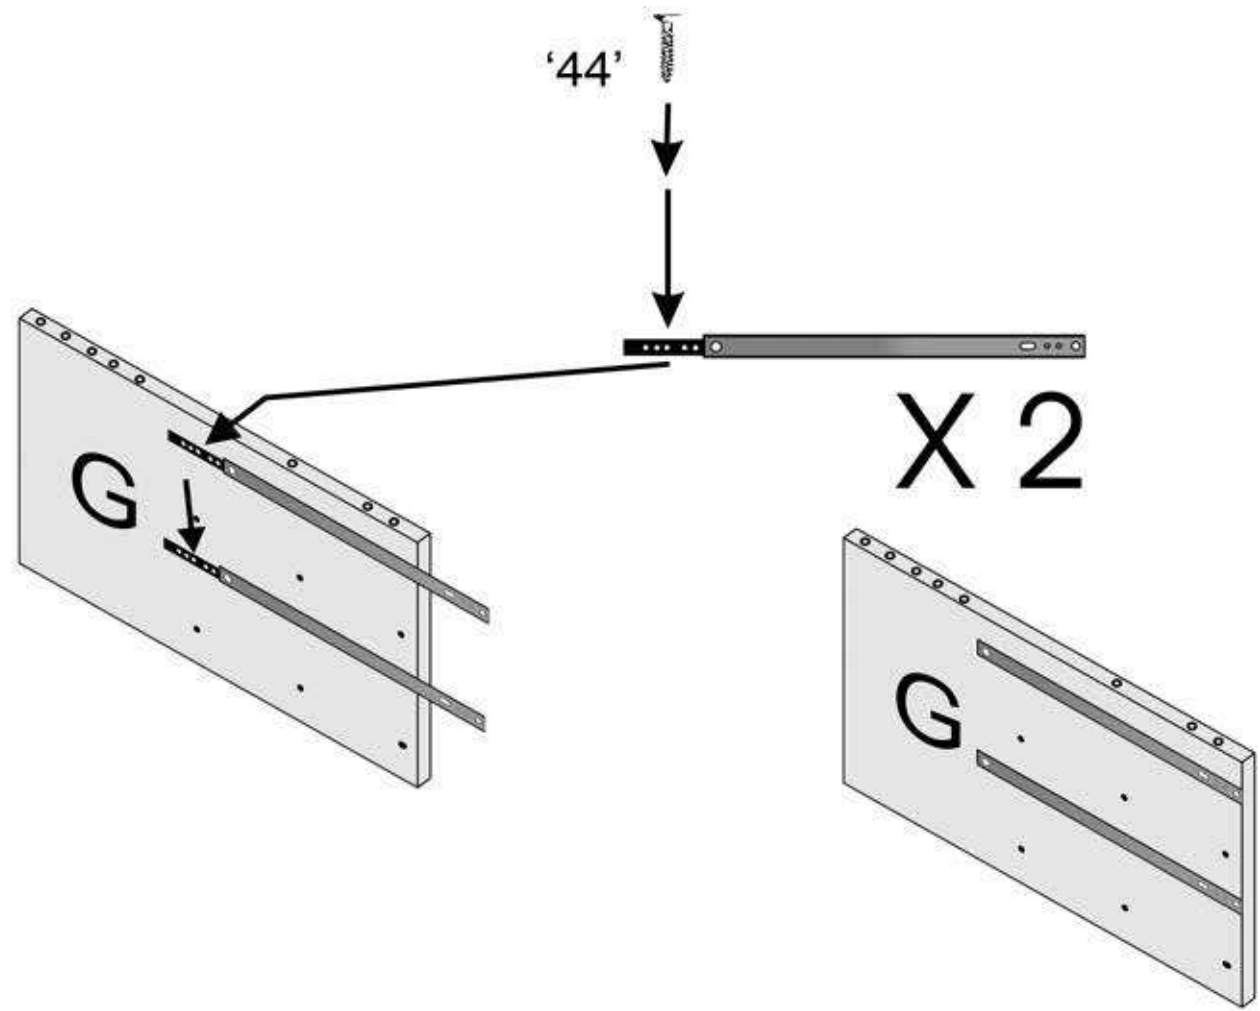
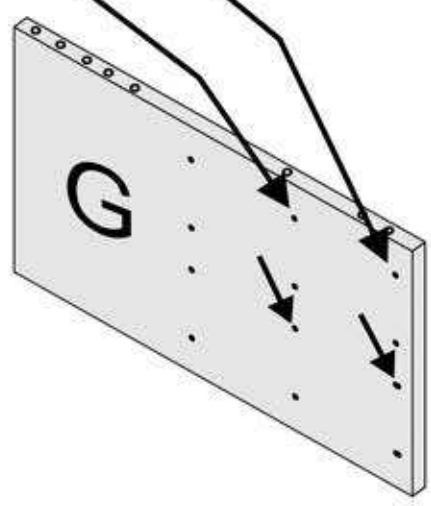
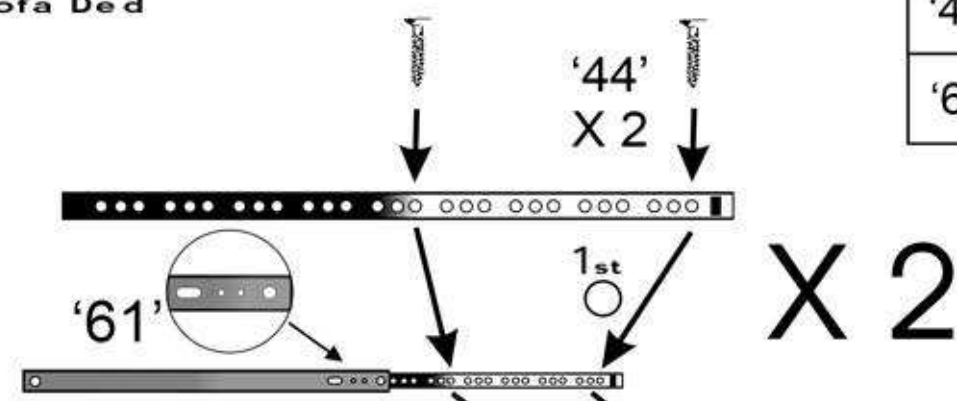


Halstead Sofa Bed

Step 3

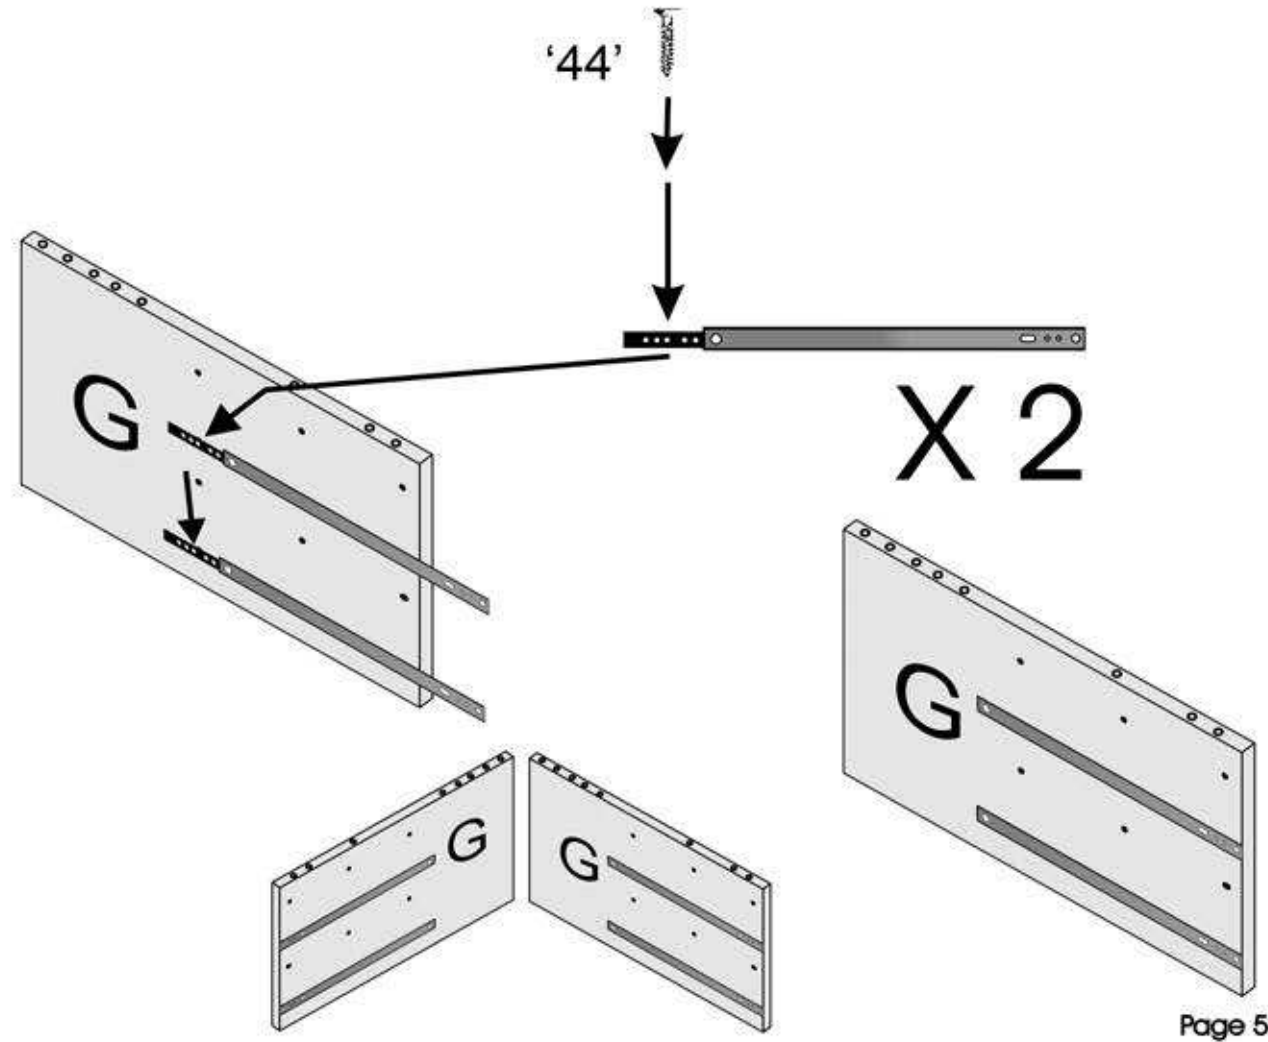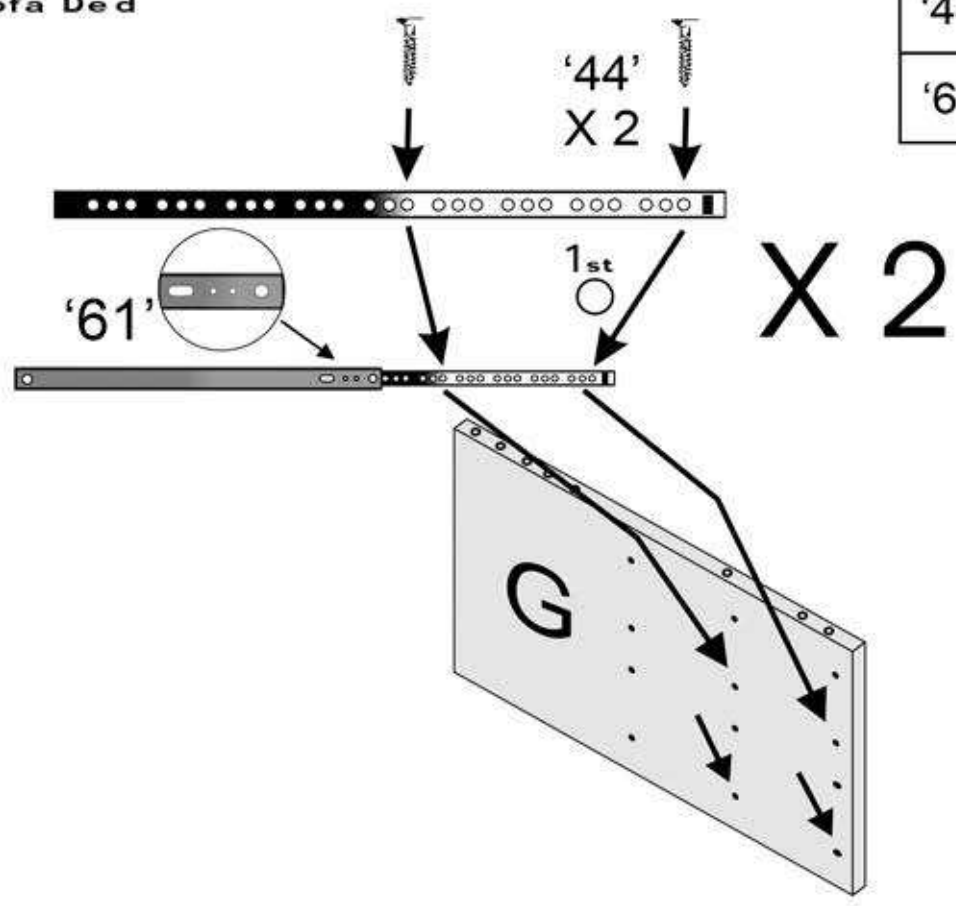


'44'	12mm	6
'61'		2

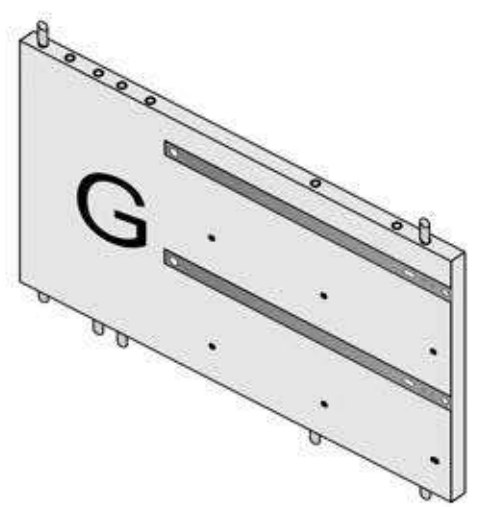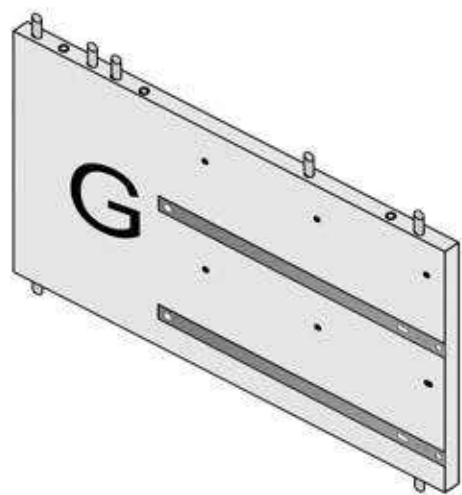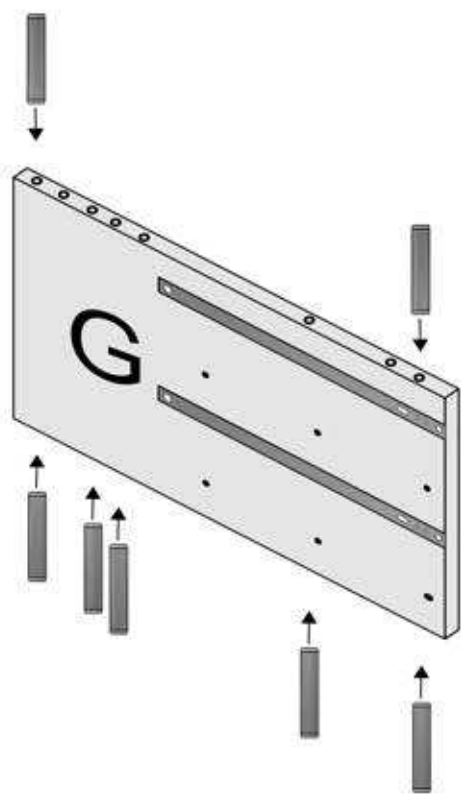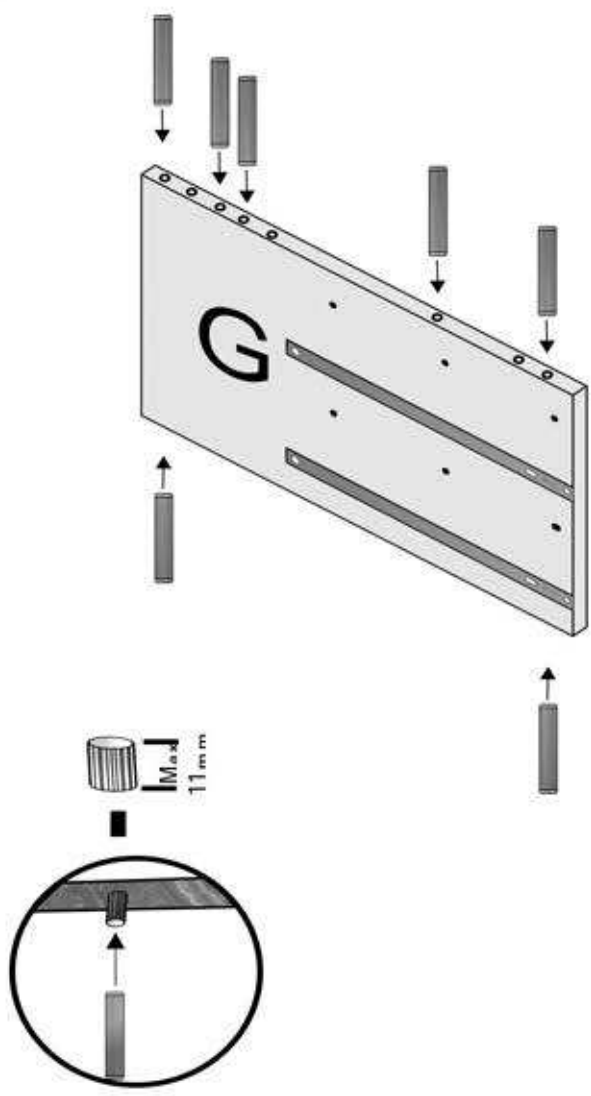




Hairstead Sofa Bed



Step 5


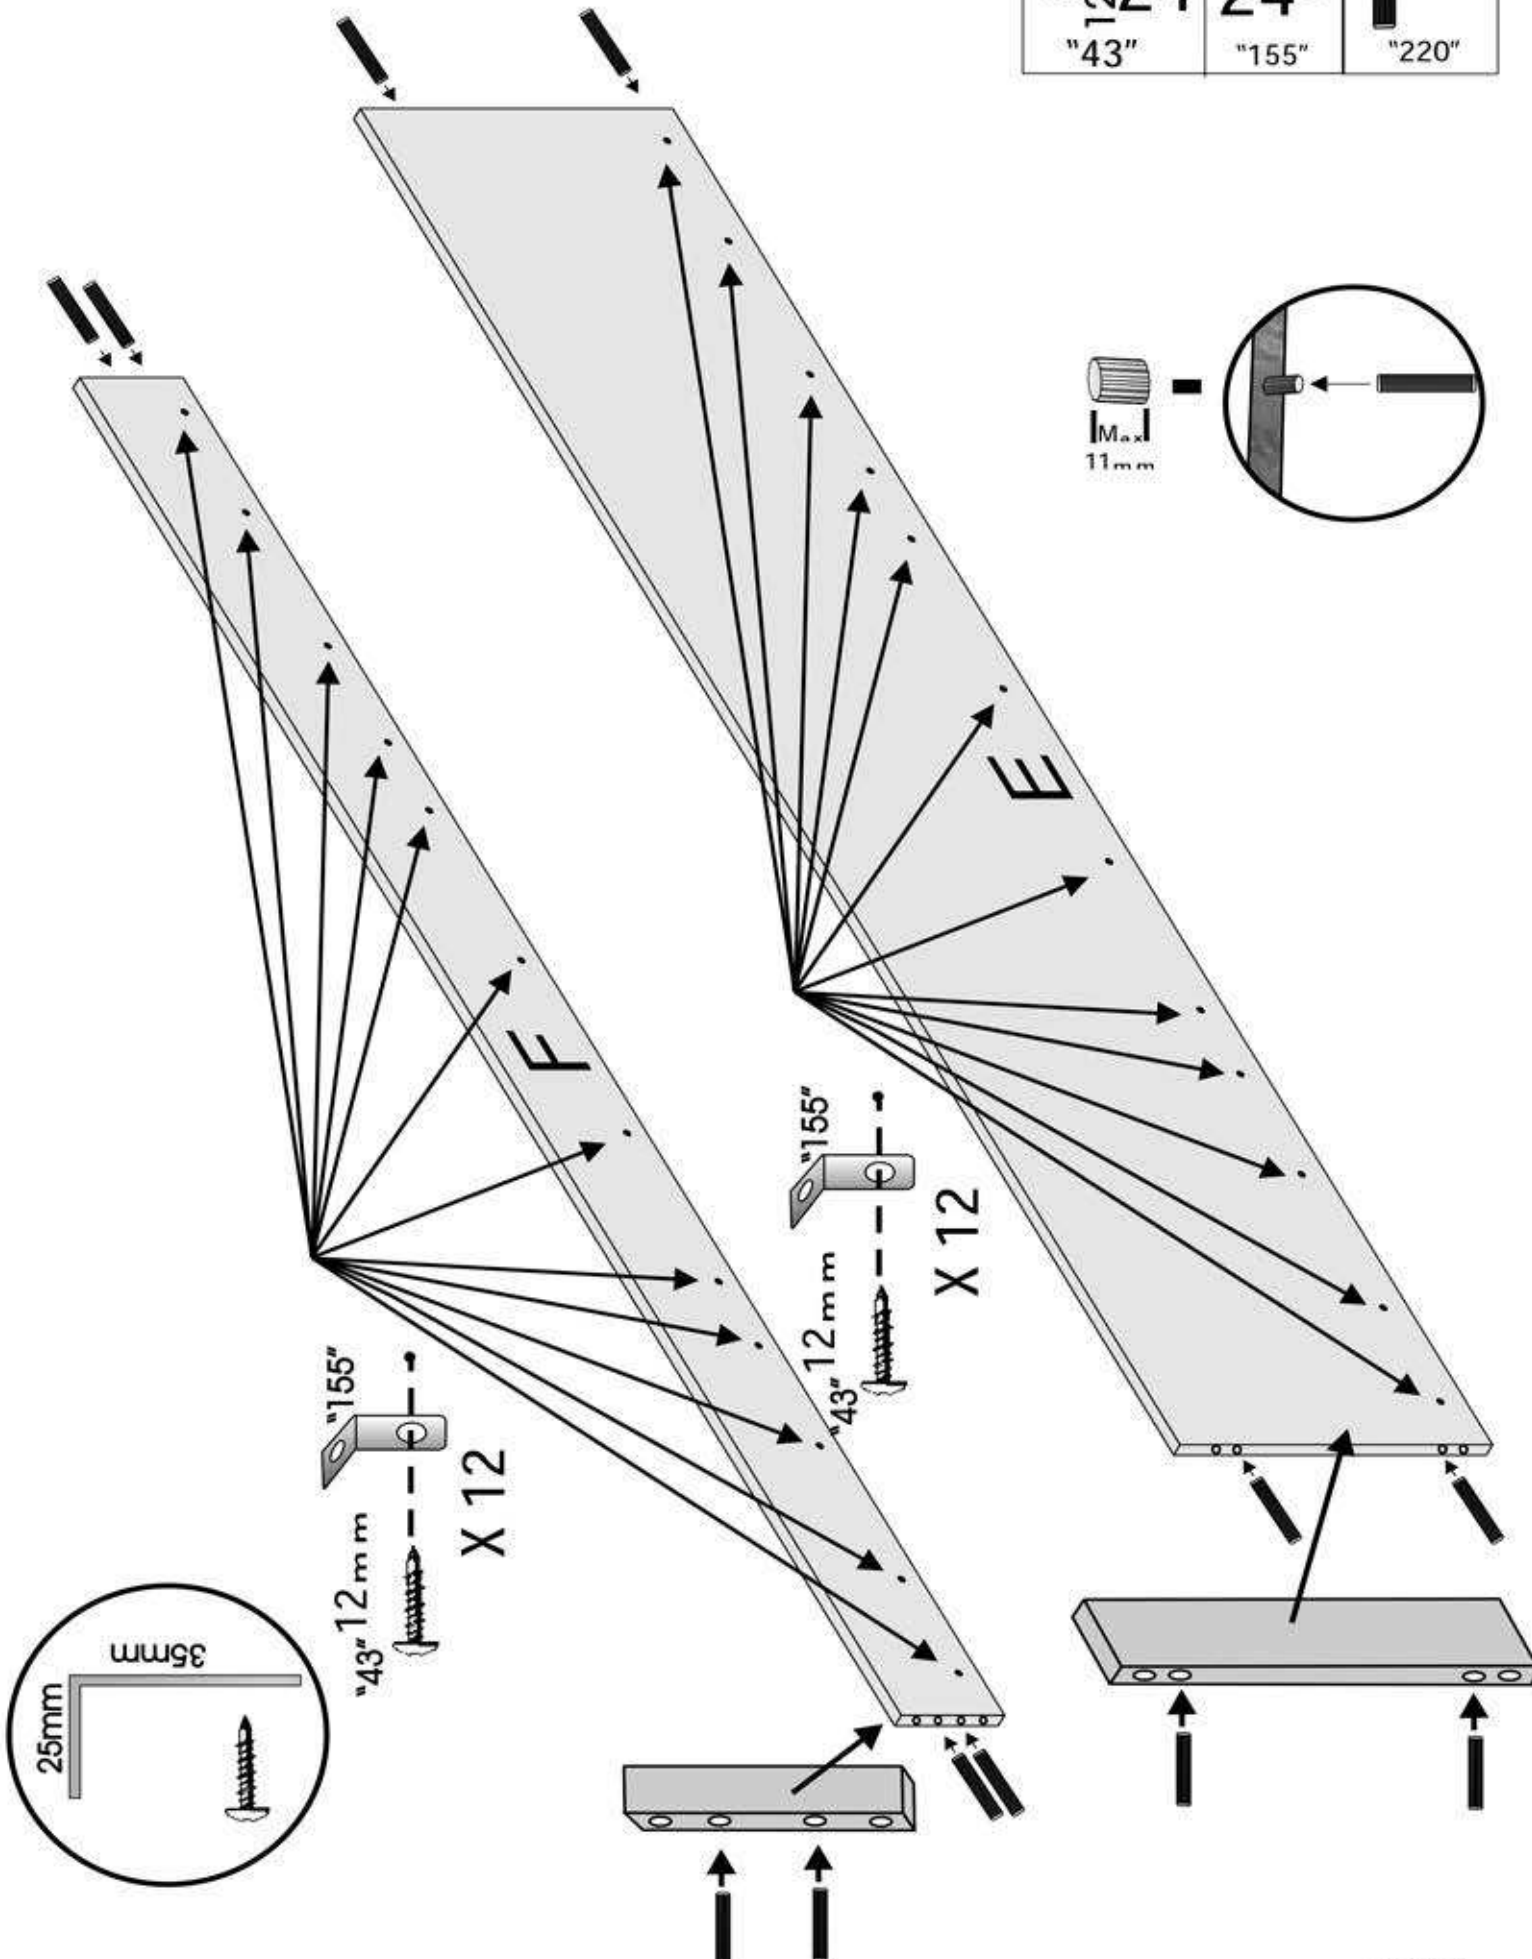
 12mm "43"	 24 "155"	 8 "220"
---	--	---





Hairstead Sofa Bed

Step 6

'220'		4
'206'		4

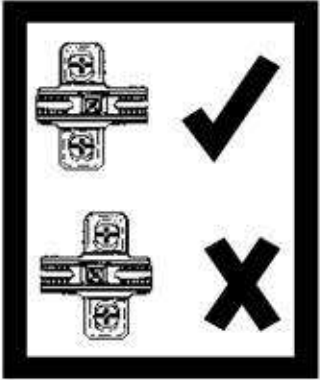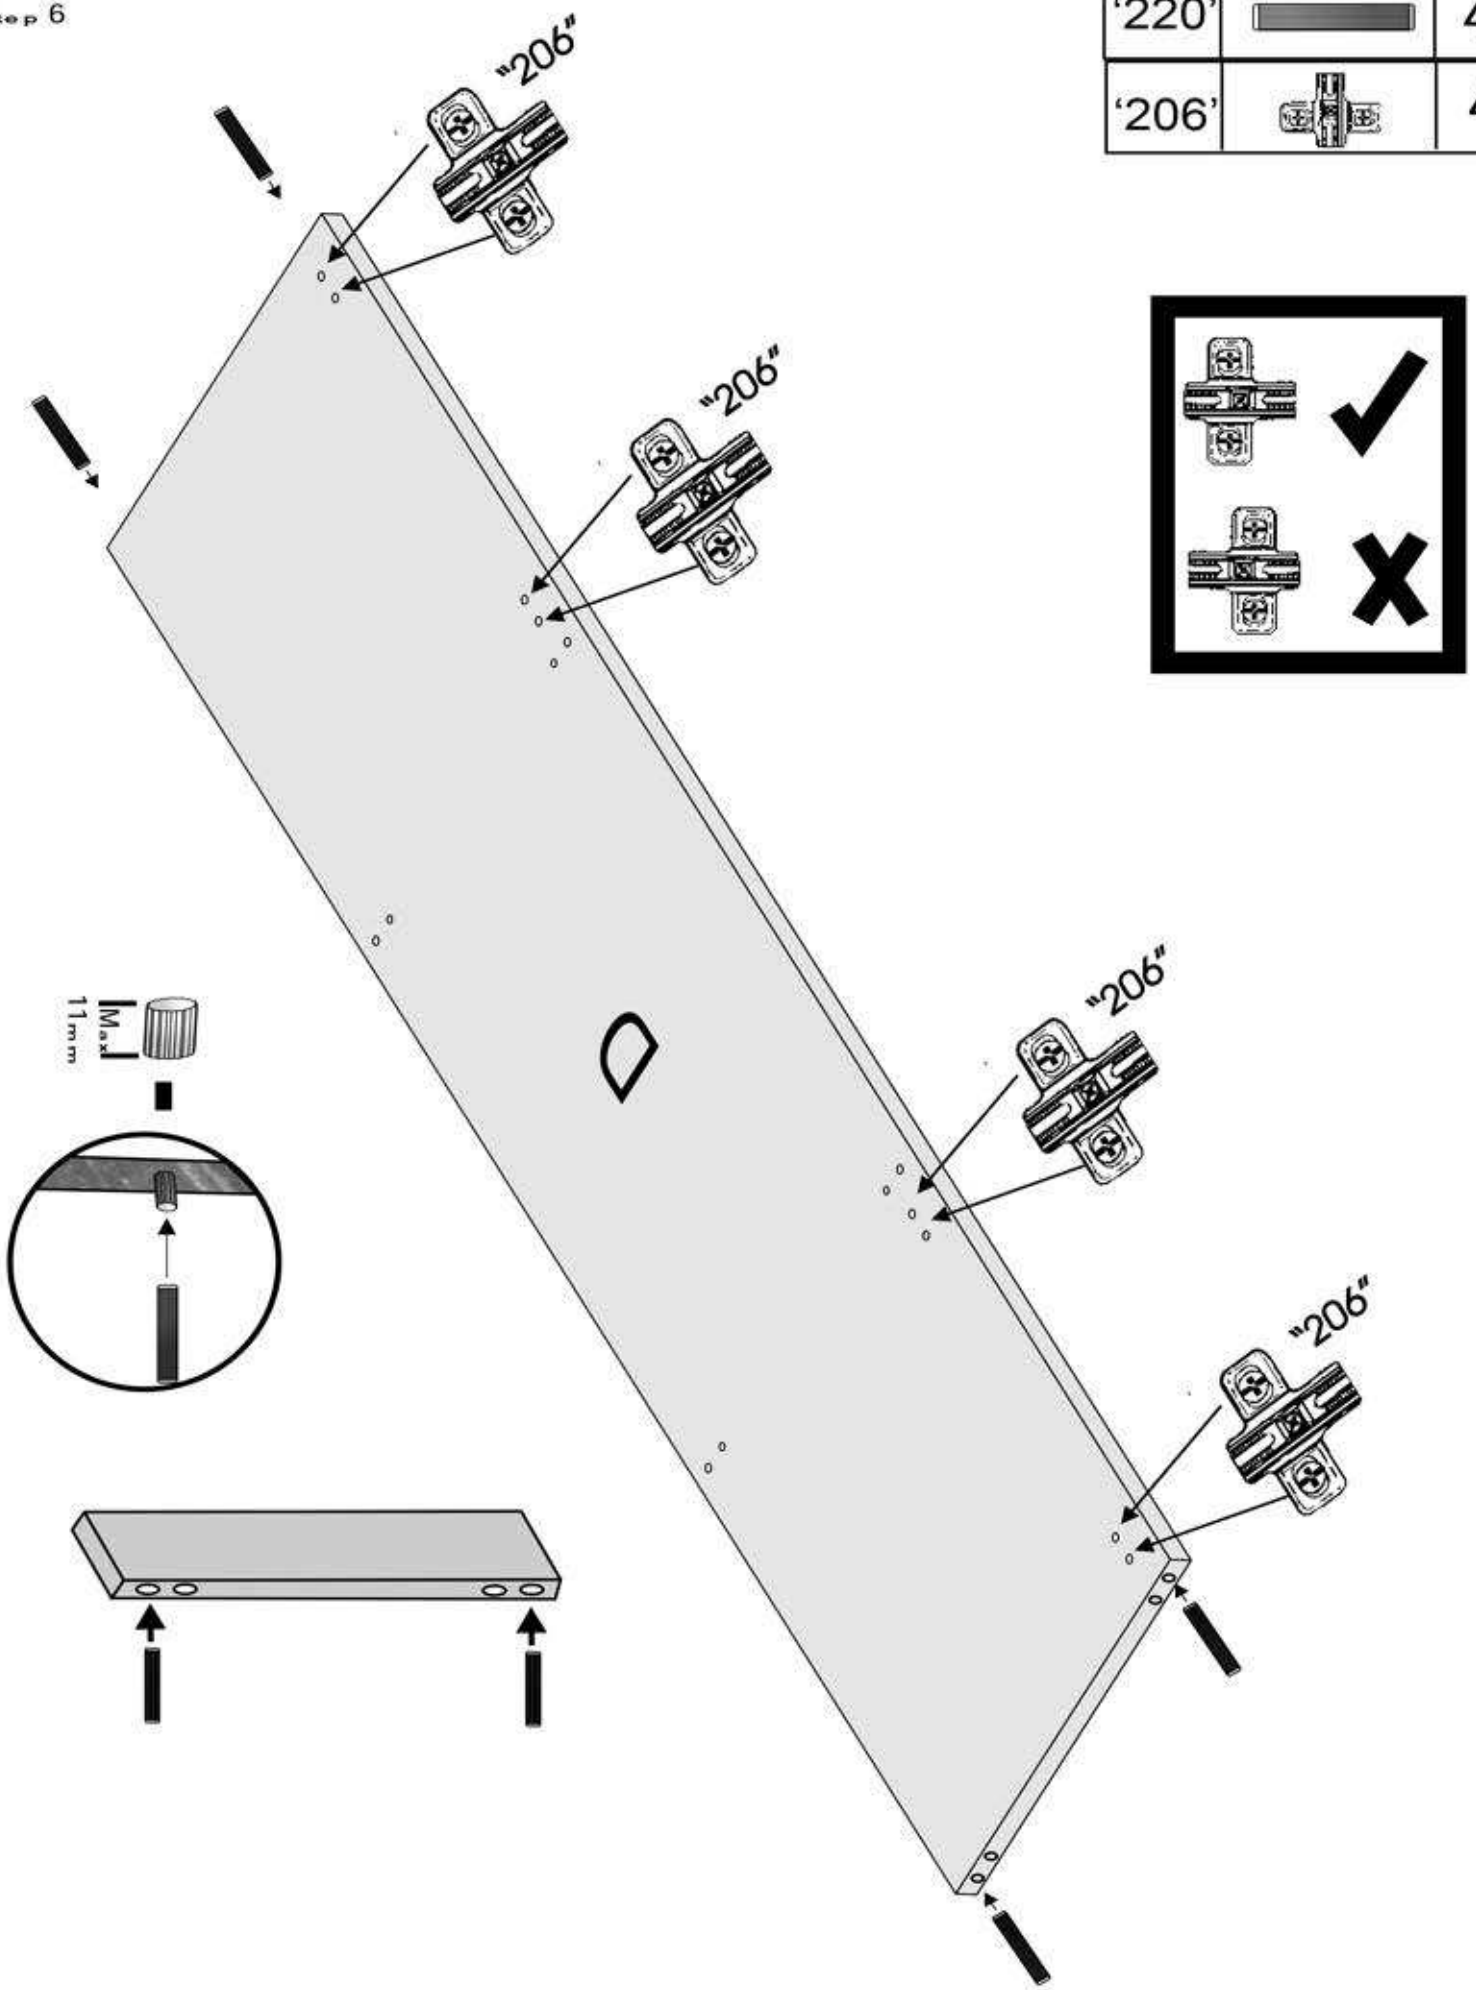



Mask
11mm

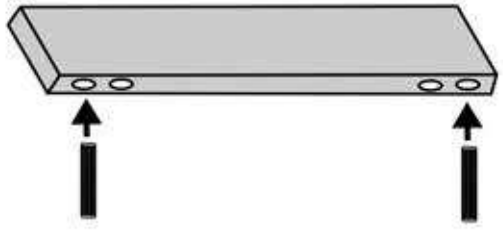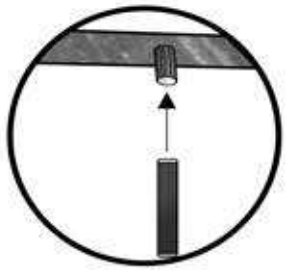

Halstead Sofa Bed



Step 7



'30'	 45mm	4
------	--	---

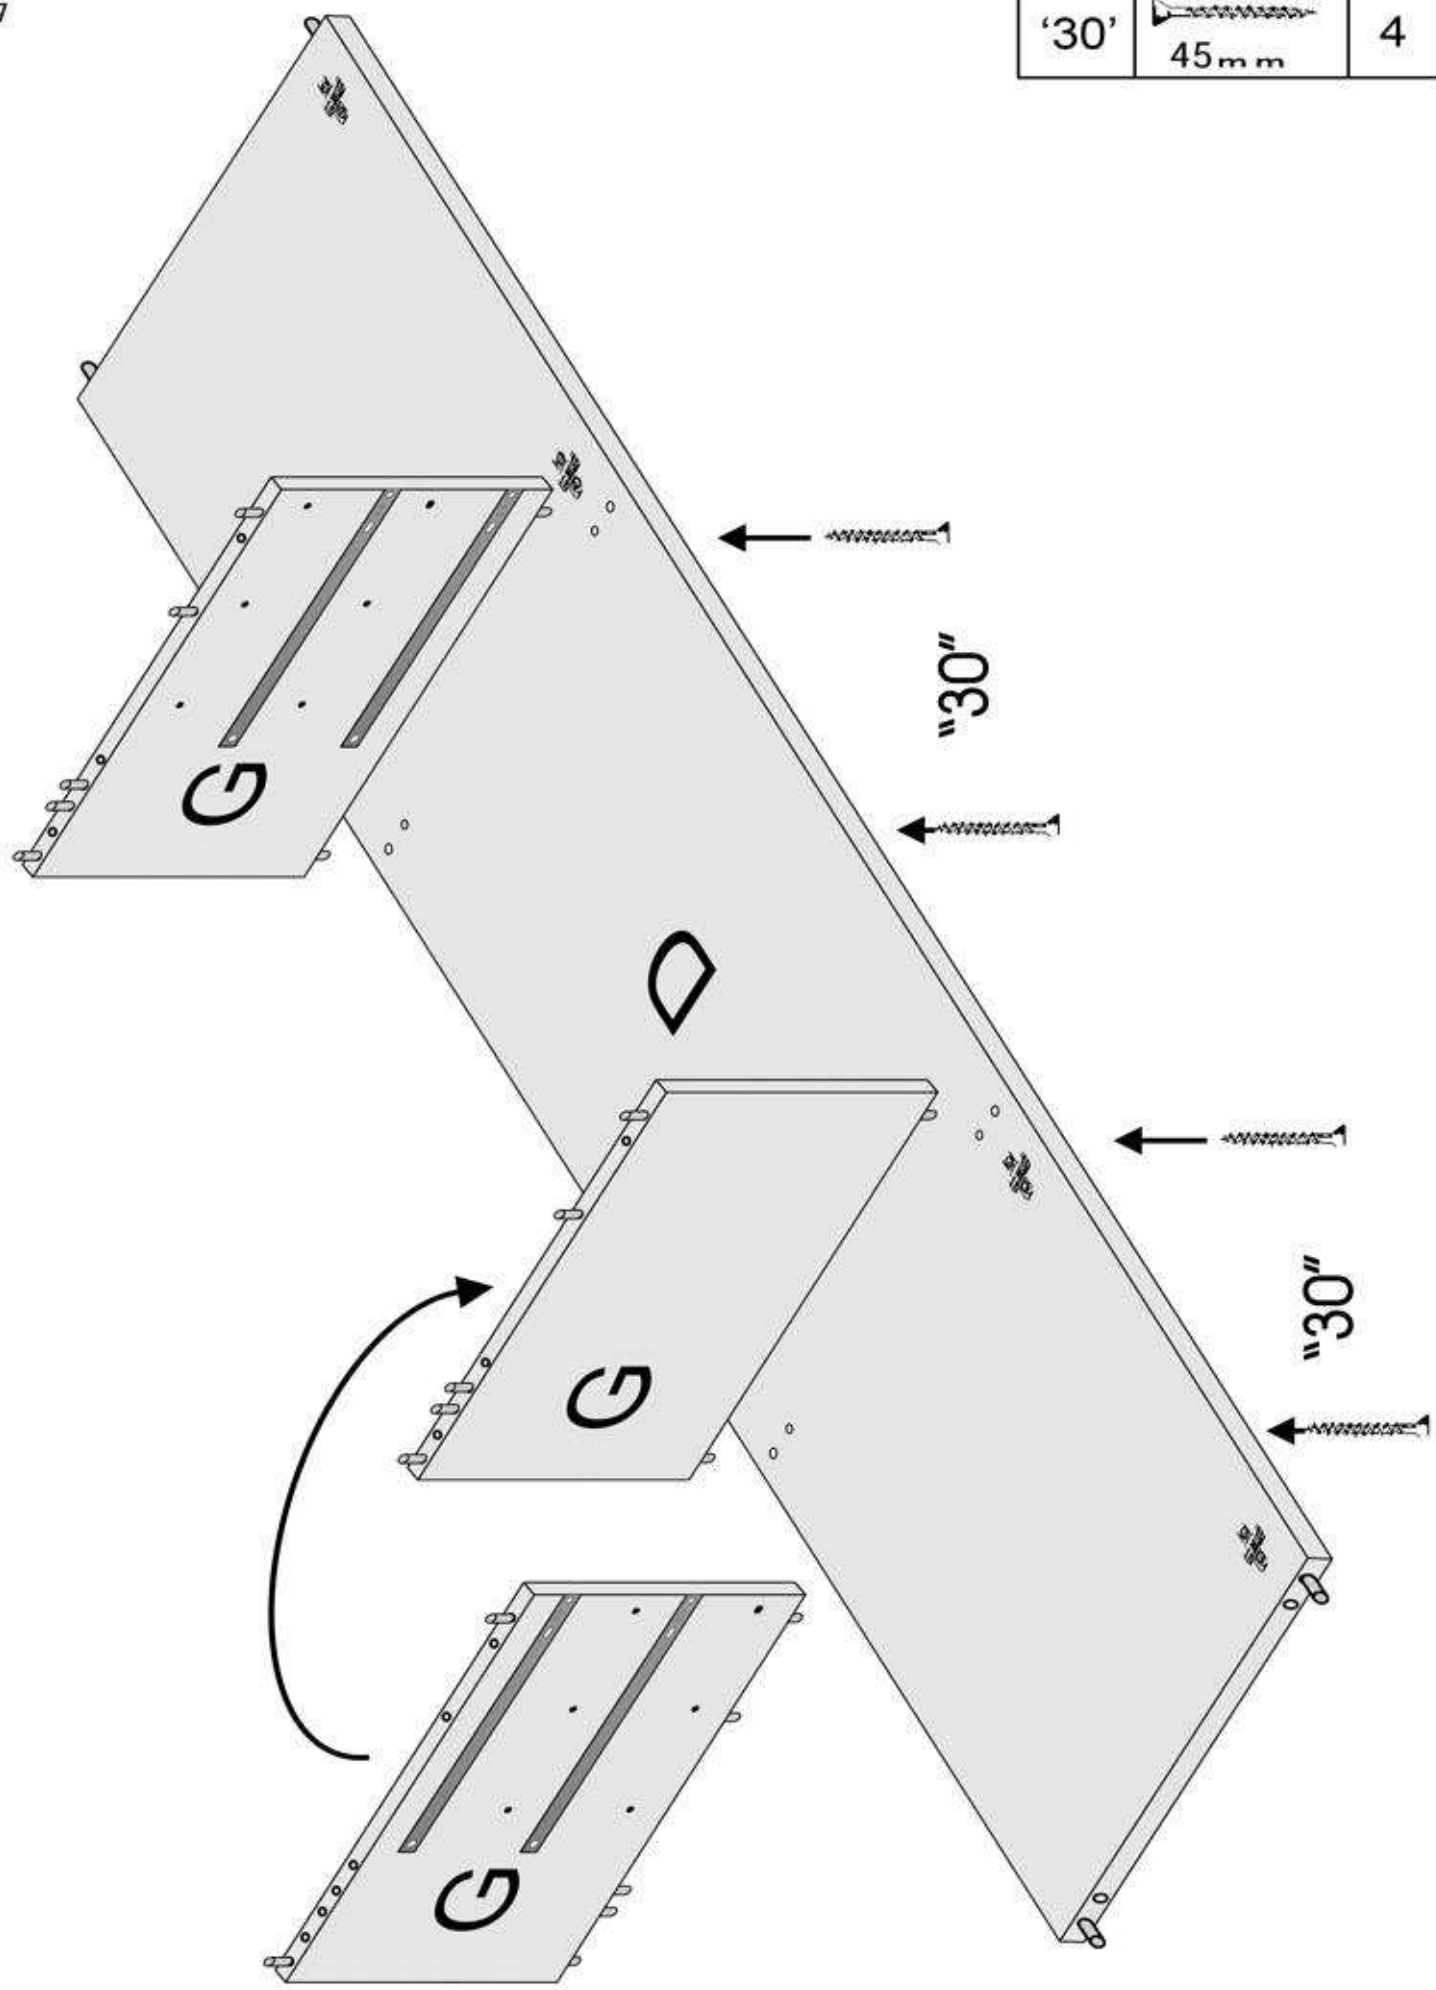

Halstead Sofa Bed



Step 8

'36'	 25mm	4
'134'		4

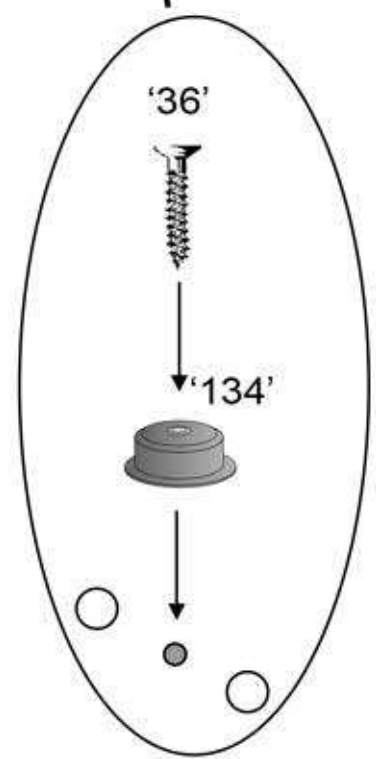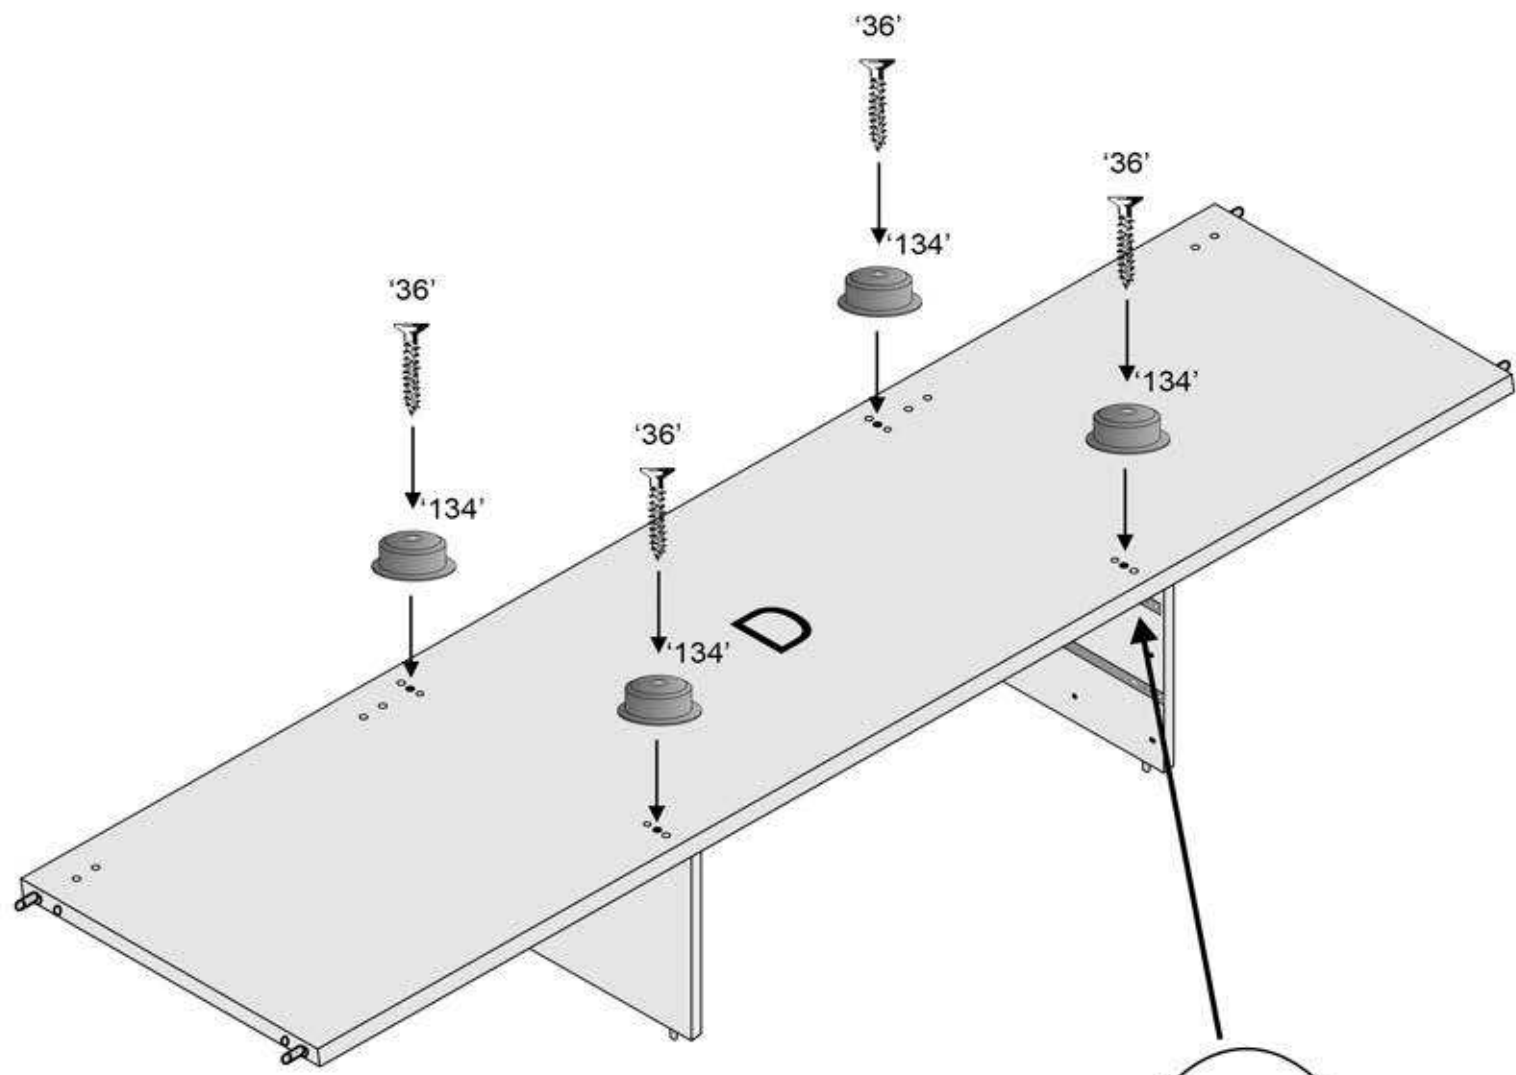



Halstead Sofa Bed


Step 9

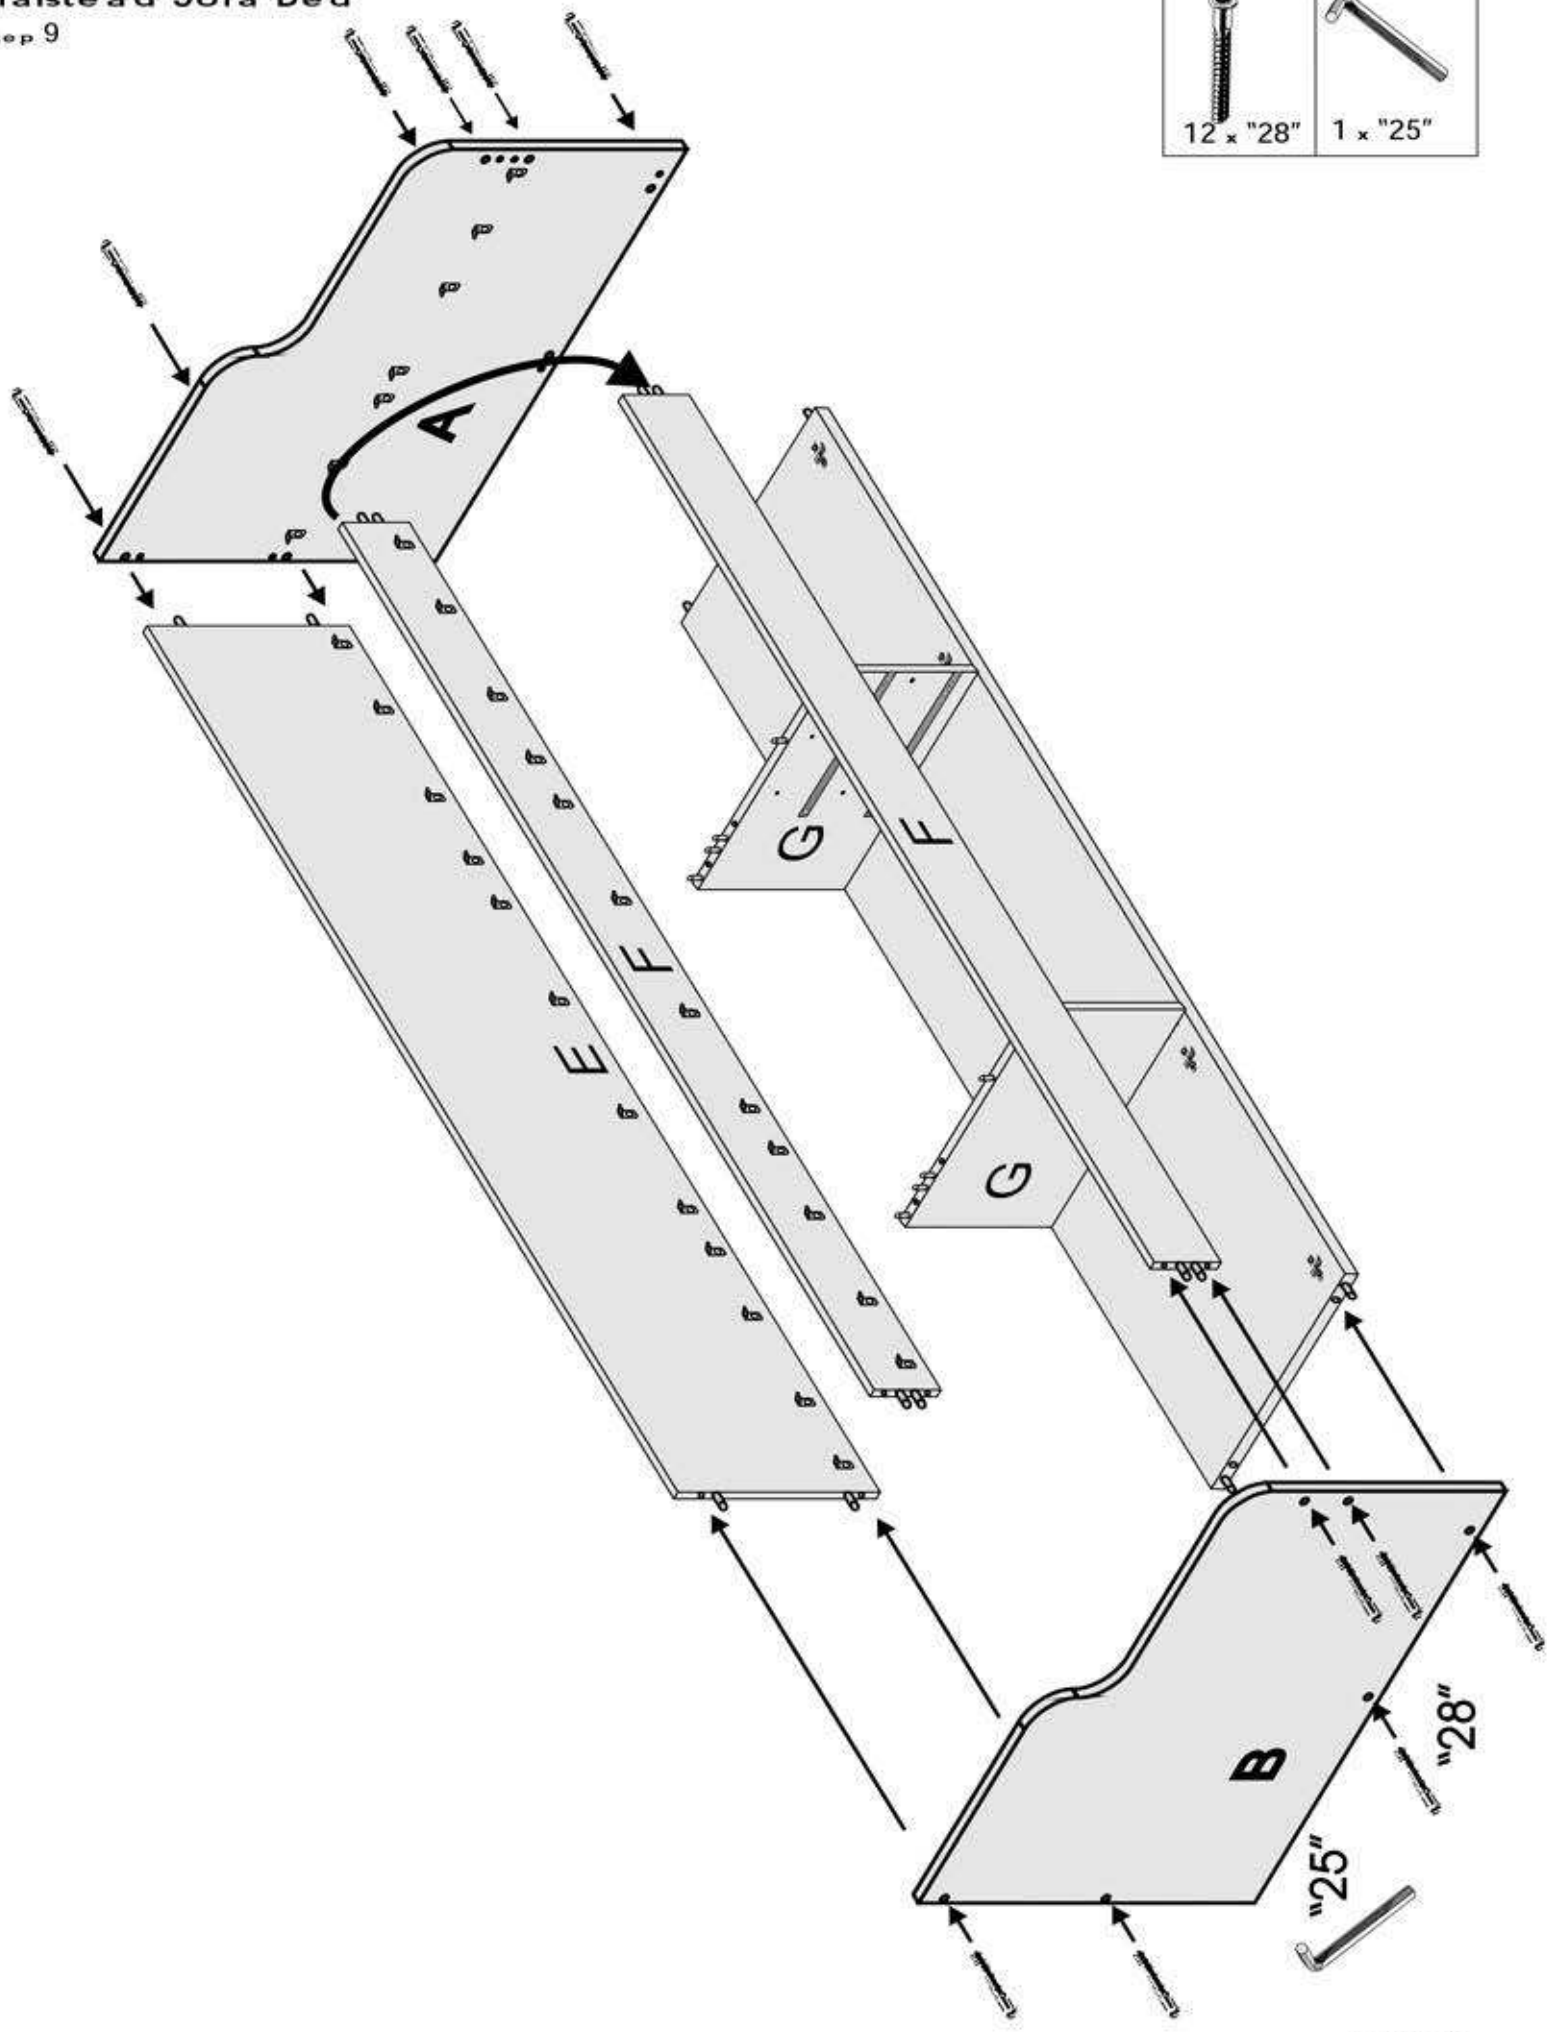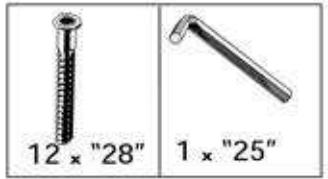

Halstead Sofa Bed



Step 10

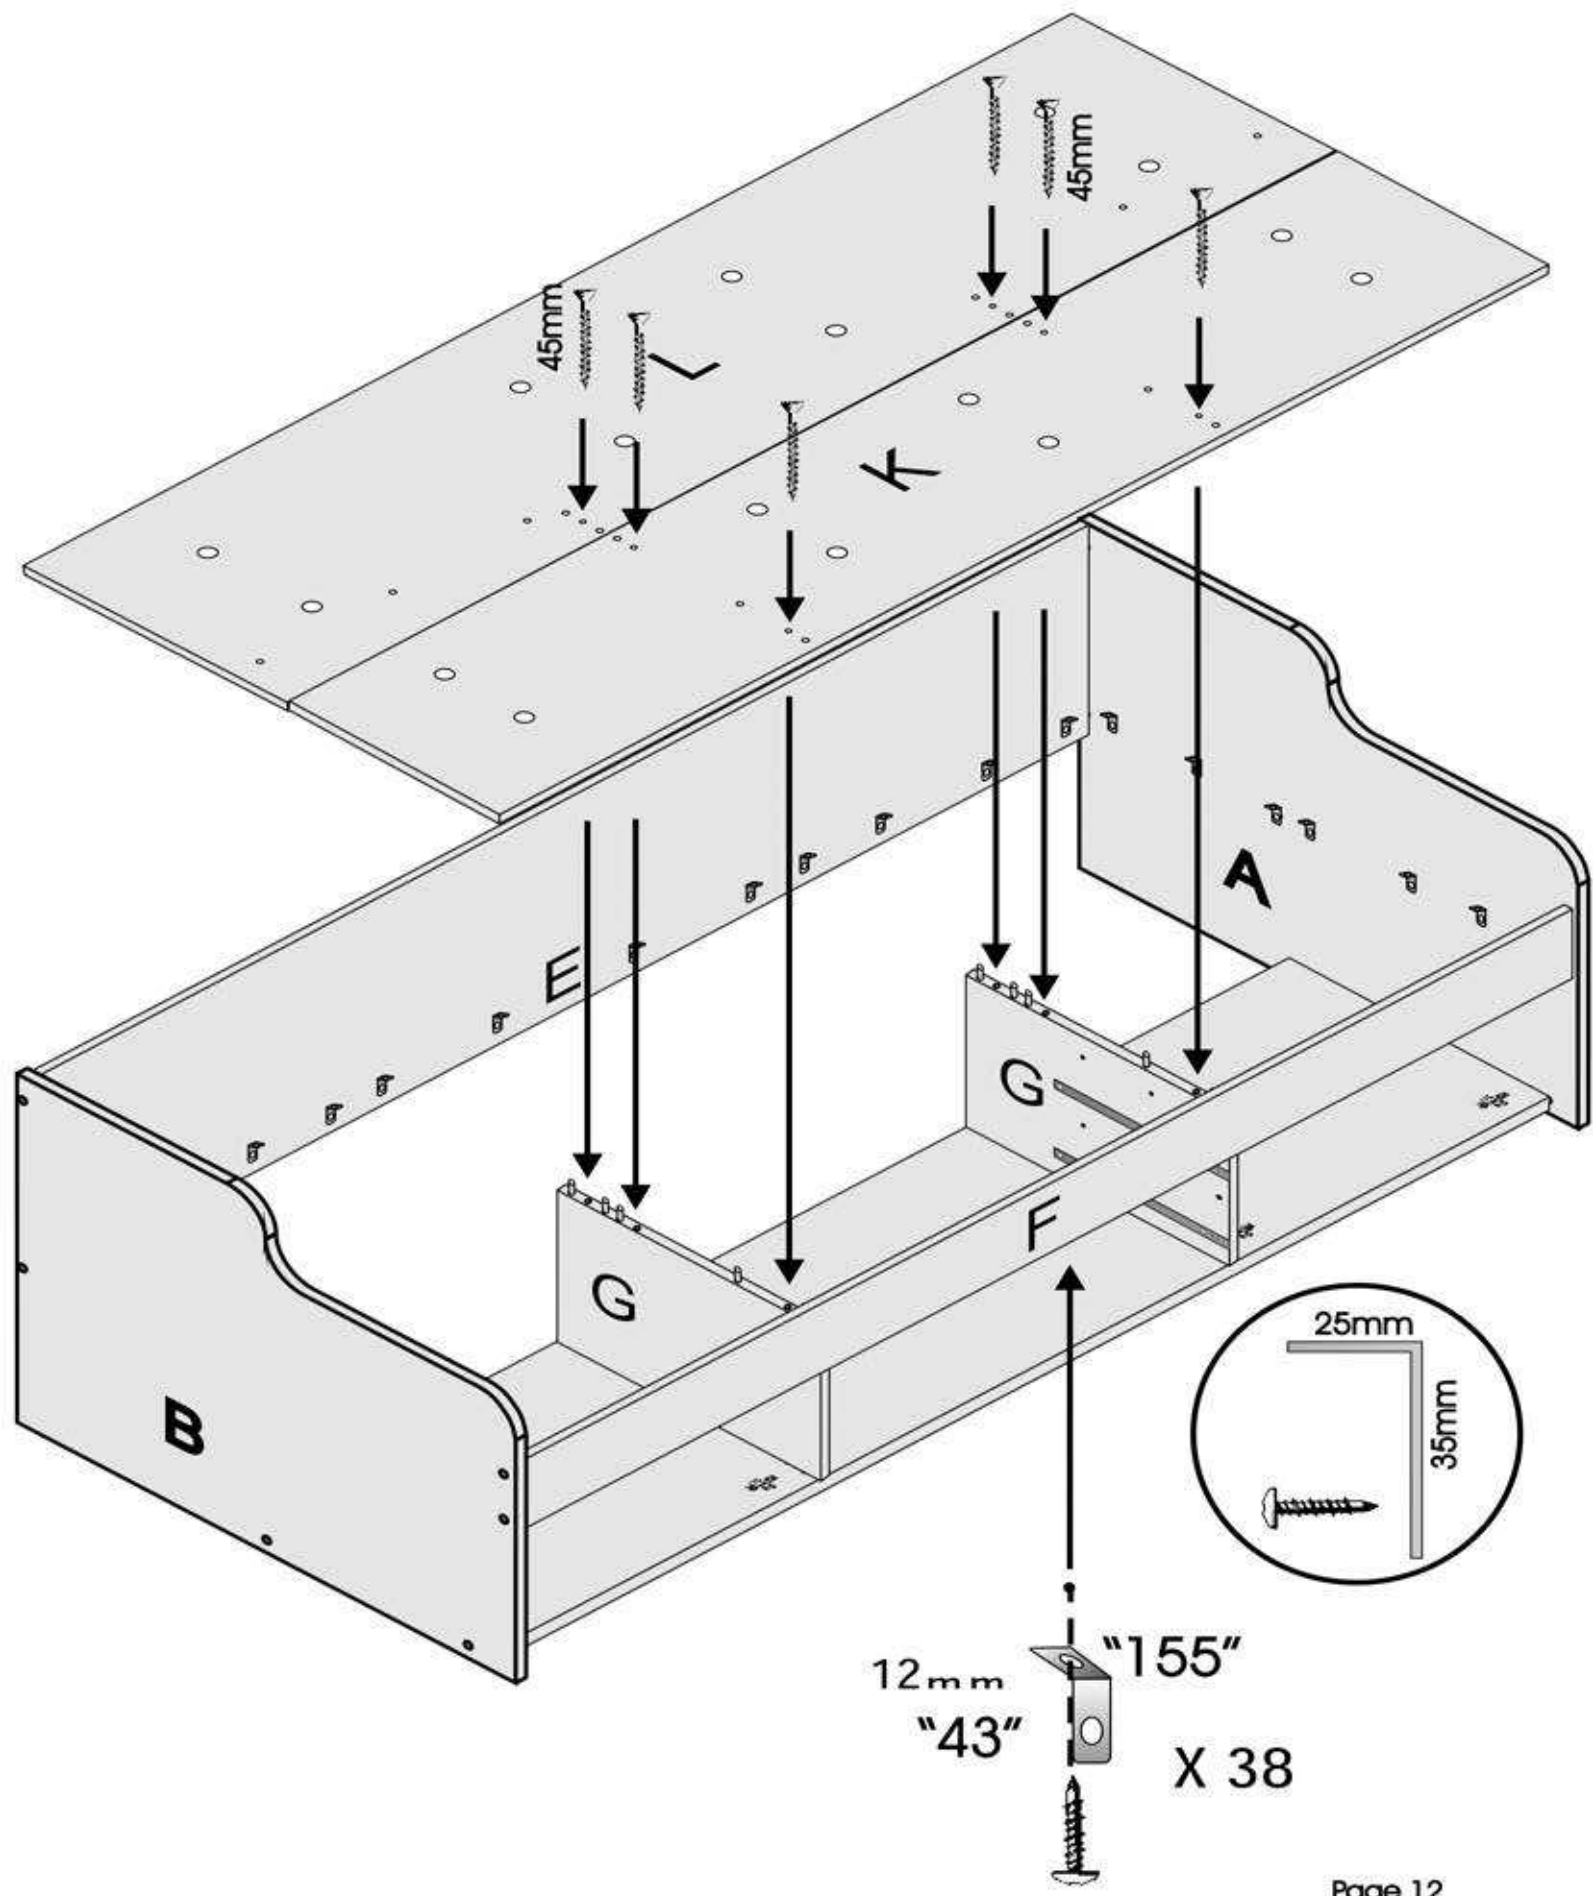
 45mm 6 x "30"	 12mm 38 x "43"
---	--



Halstead Sofa Bed






Step 11



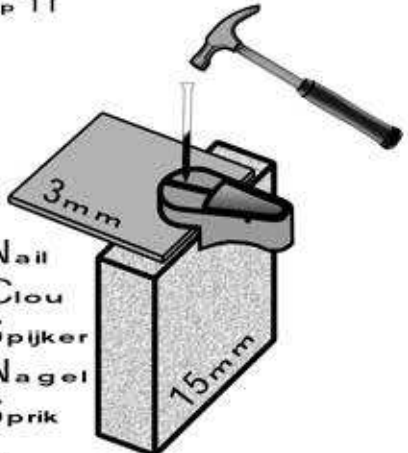

 30 x "13"	 6 x "106"
--	--

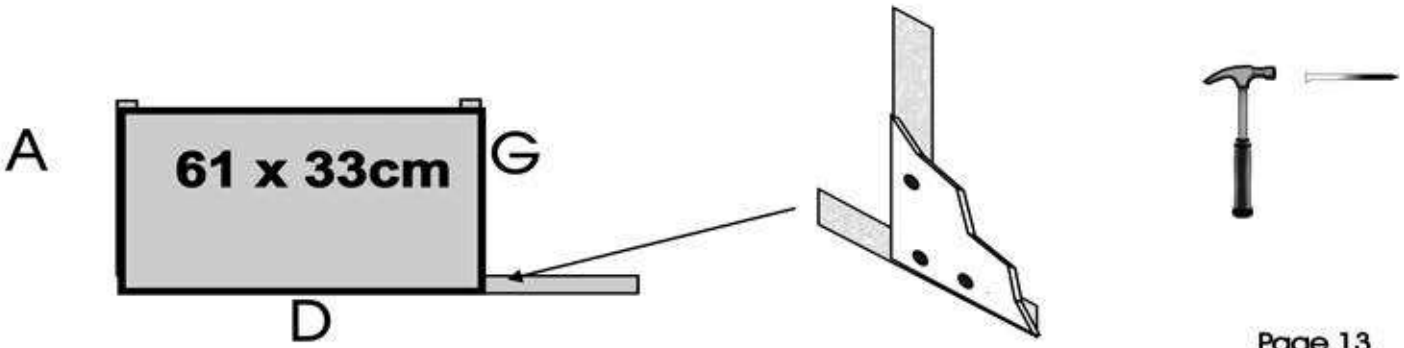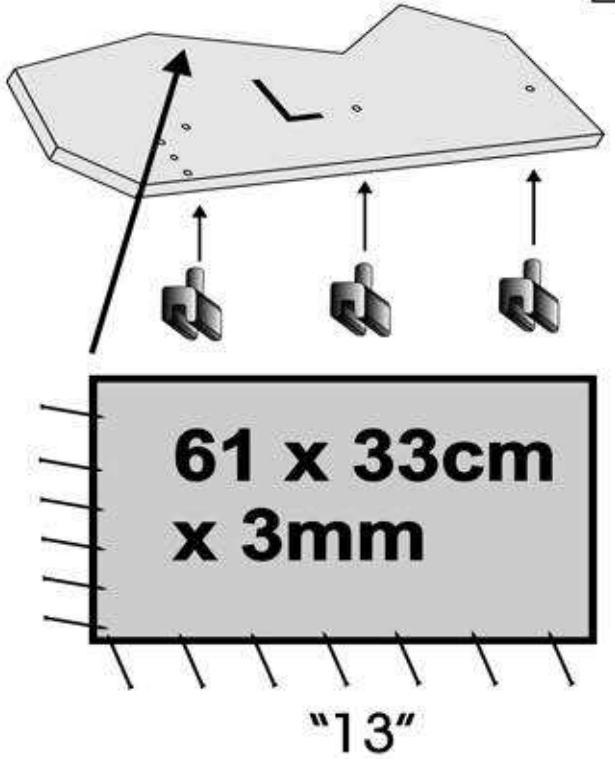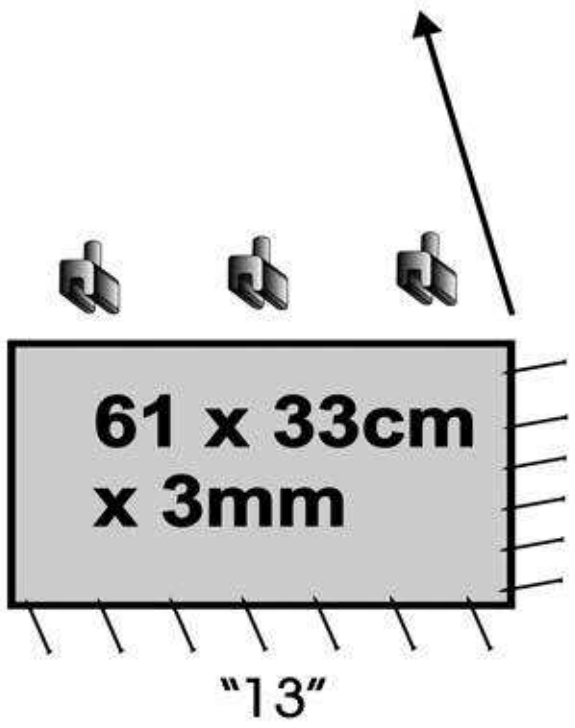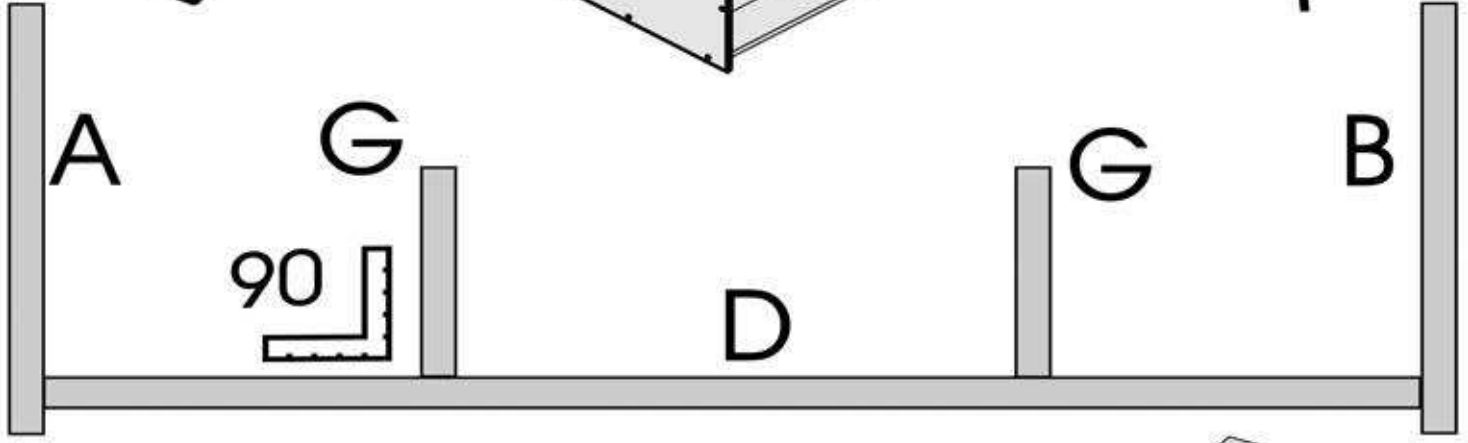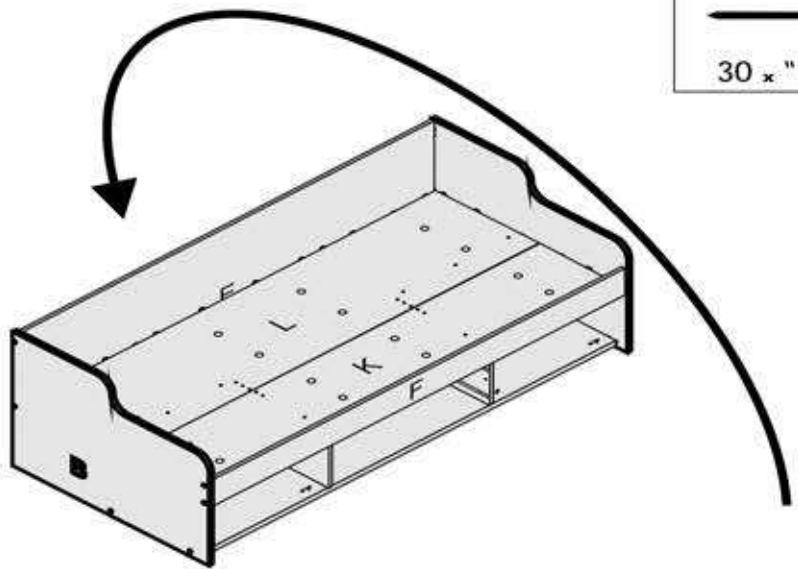






3mm
15mm

Nail
Clou
Spijker
Nagel
Sprik



			
23mm 8 x "19"	12mm 8 x "44"	4 x "208"	4 x "77"


X 2

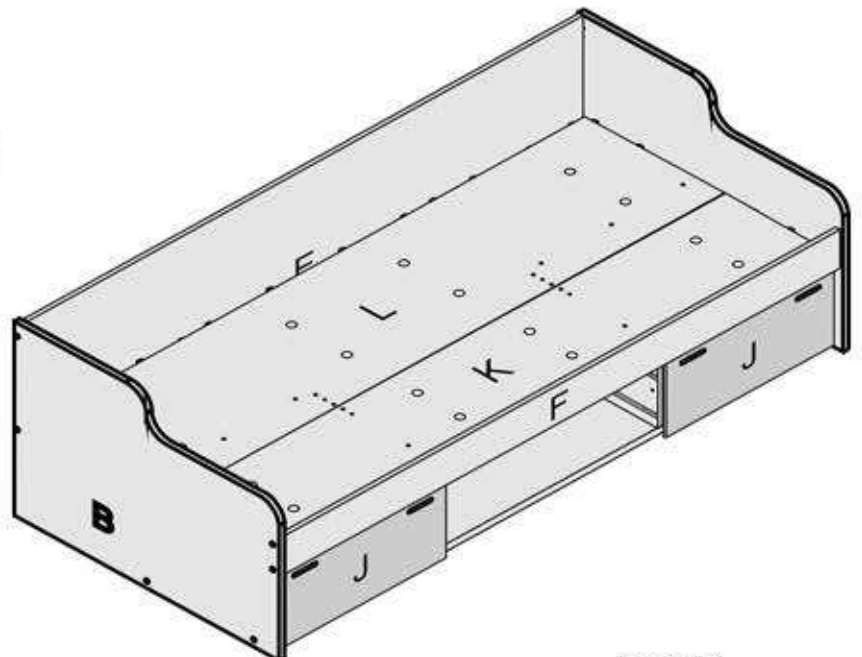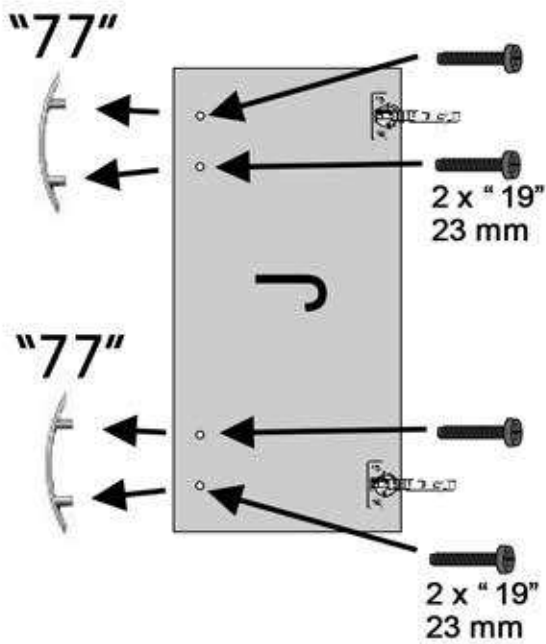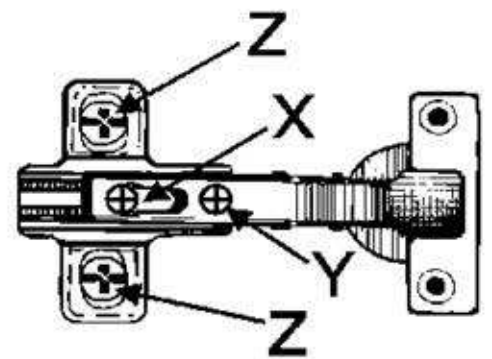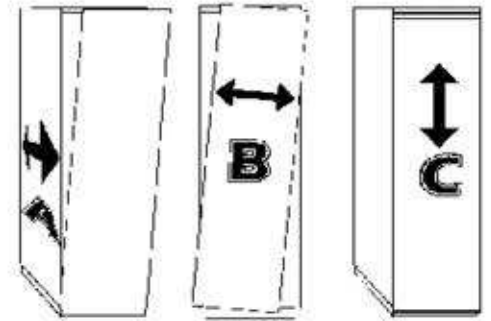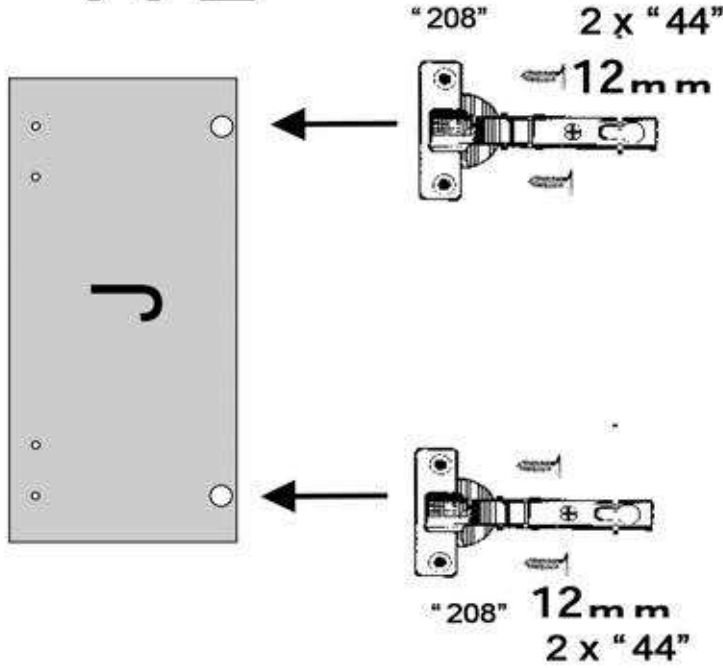


Halstead Sofa Bed

Step 13

'77'		4
'19'	 23mm	8
'219'		2


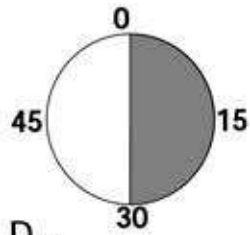


Dry
Droog
Trocknen
Secher


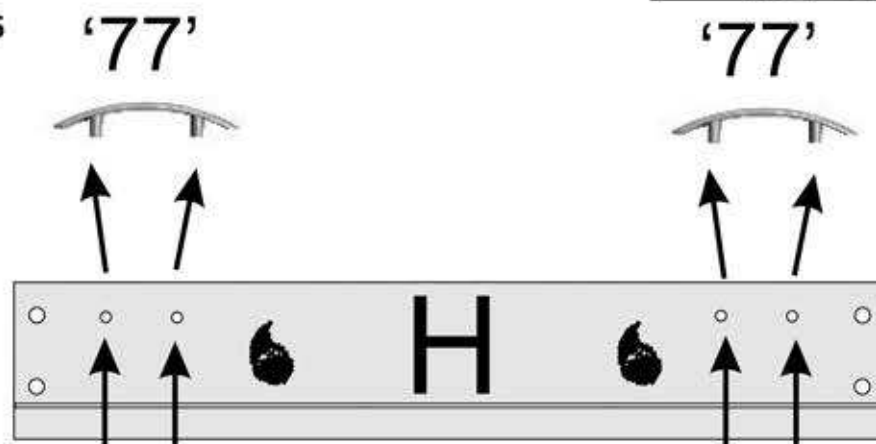




23mm
2 x "19"

23mm
2 x "19"

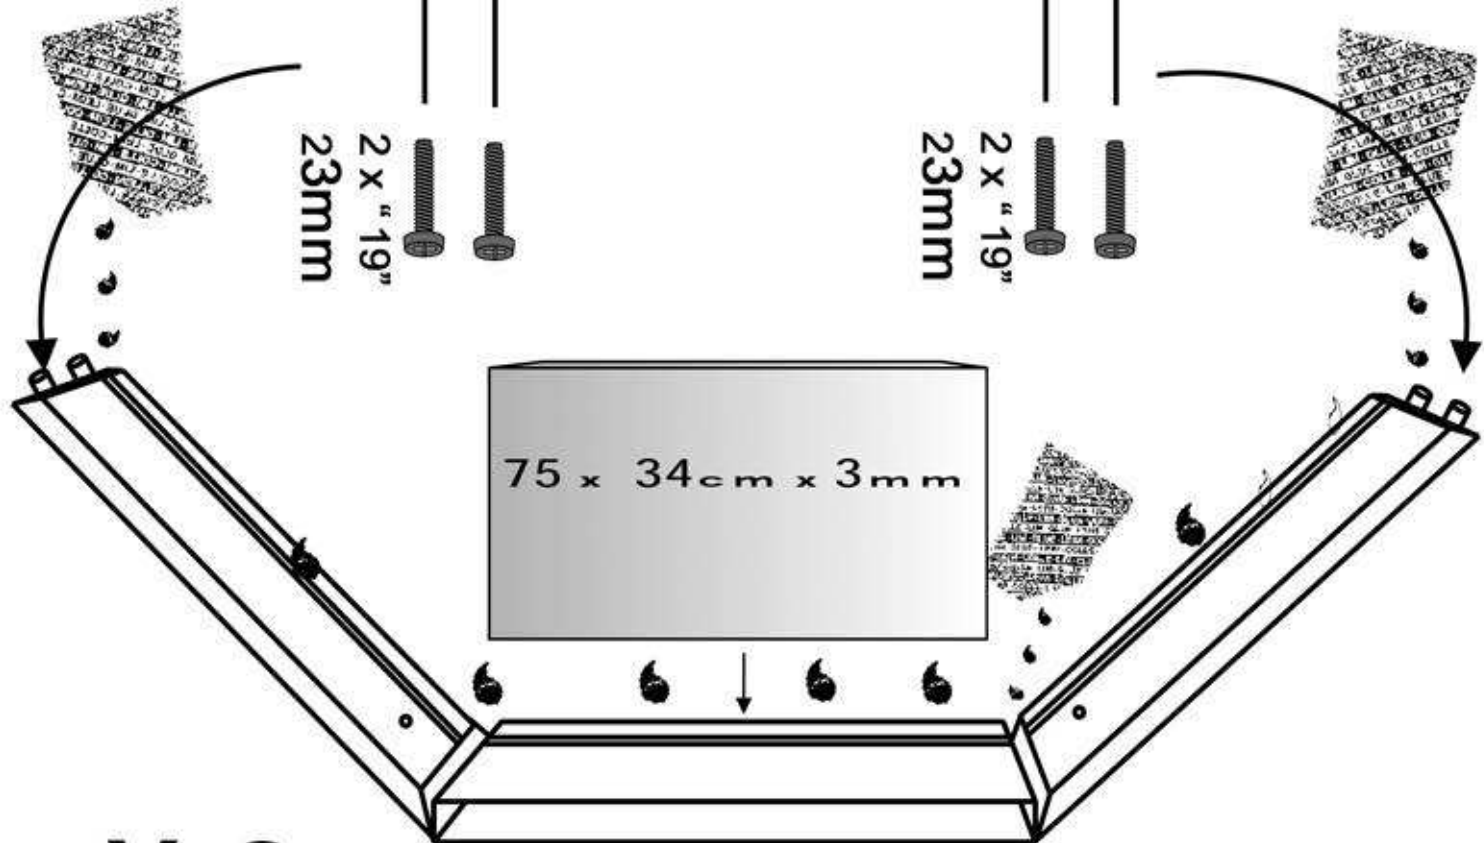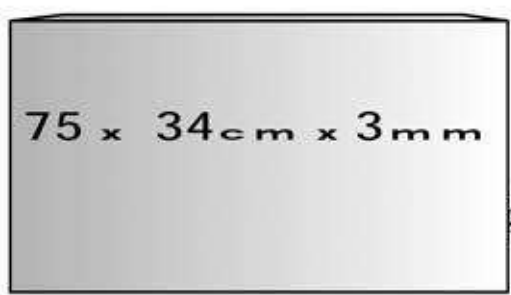

X 2

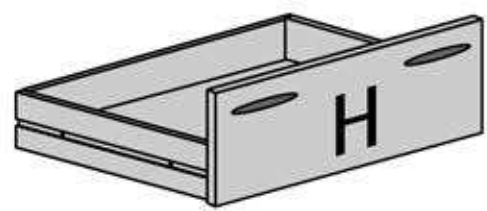

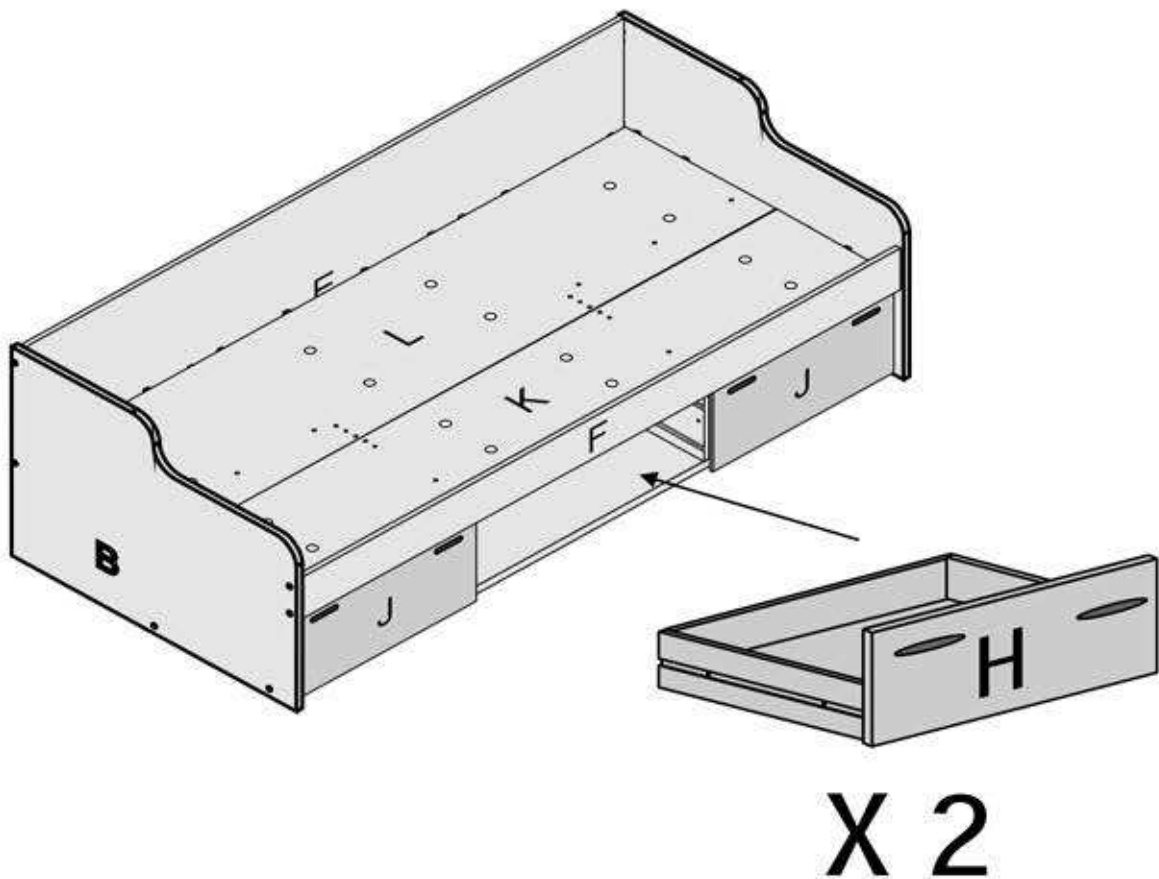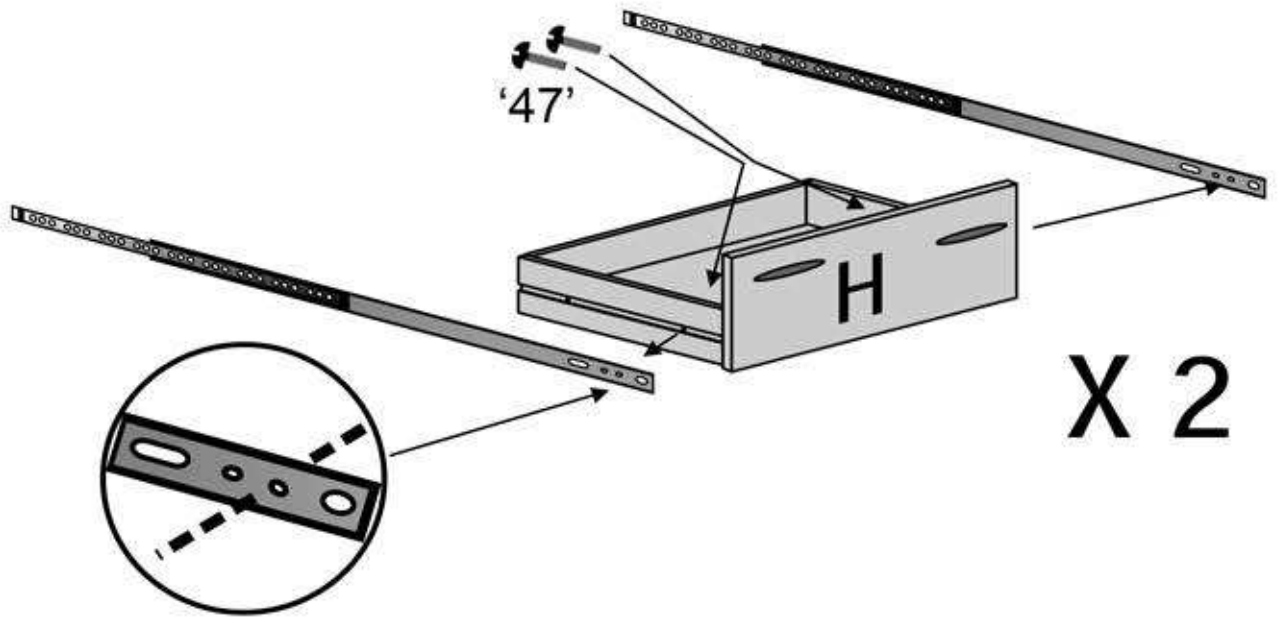

After assembly discard any extra fittings.
In het componenten pak zitten extra
schroeven etc., na de opbouw kunnen
deze weggegooid worden.
Après Assemblage, se débarrasser de pièces
de plus.

UK Spares and Assembly HELPLINE 01572 755110
Manufacturer - Belvoir Associates Ltd
Pillings Road Oakham England